
 
 



 
 

 

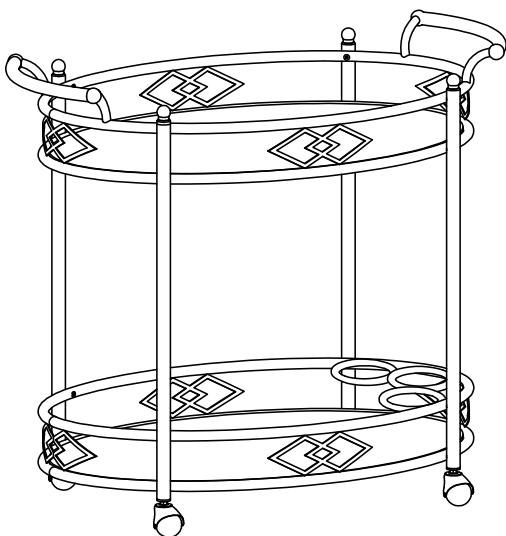


ASSEMBLY INSTRUCTION

E619-07 TEMPERED GLASS METAL KITCHEN CART


A Top Frame	B Bottom Frame	C Leg	D Top Glass
 <p>1pc</p>	 <p>1pc</p>	 <p>4pcs</p>	 <p>2pcs</p>
E Suction Cup Φ14mm	F Allen Wrench 1/4"	G Open Wrench 13mm	H Bolt 1/4" X 1"
 <p>8pcs</p>	 <p>1pc</p>	 <p>1pc</p>	 <p>16pcs</p>
I Washer 1/4"	J Wheel 1-1/2"	K Finial 1"	
 <p>4pcs</p>	 <p>4pcs</p>	 <p>4pcs</p>	




This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

***** Do not tighten screws & bolts until the entire unit is completely assembled.**

1 Attach leg (C) to top frame (A) and bottom frame (B) by bolt (H) and tighten with allen wrench (F) as shown.

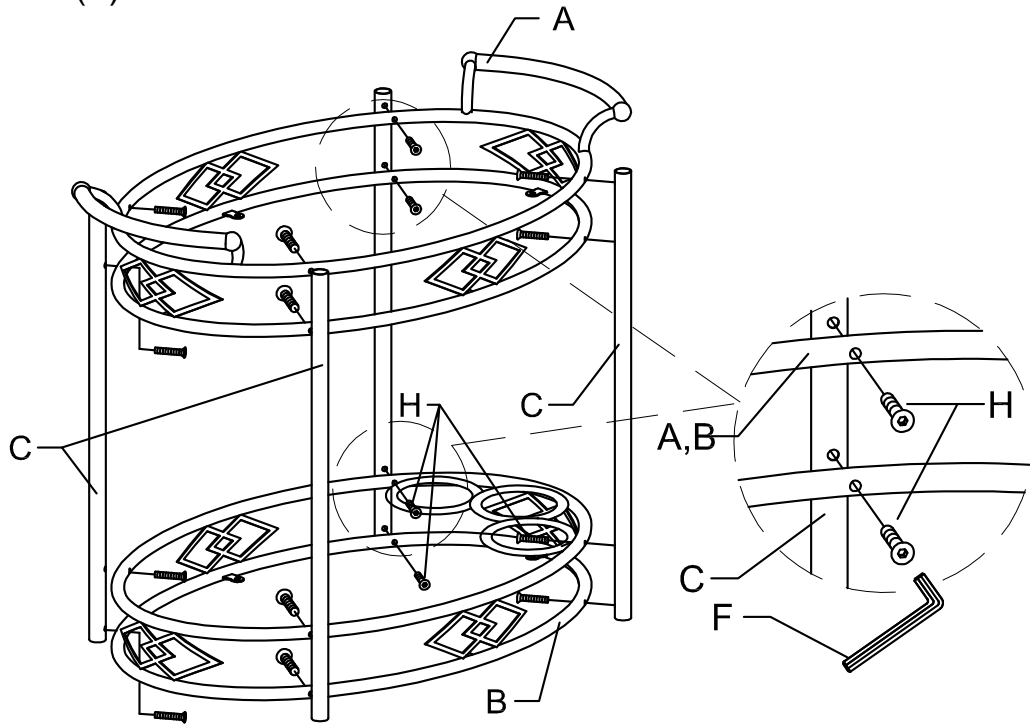


2 Attach wheel (J) to the bottom of leg (C) by washer (I) and open wrench (G) and attach finial (K) to the top of leg (C). Then attach suction cup (E) to top frame (A) and bottom frame (B) as shown.

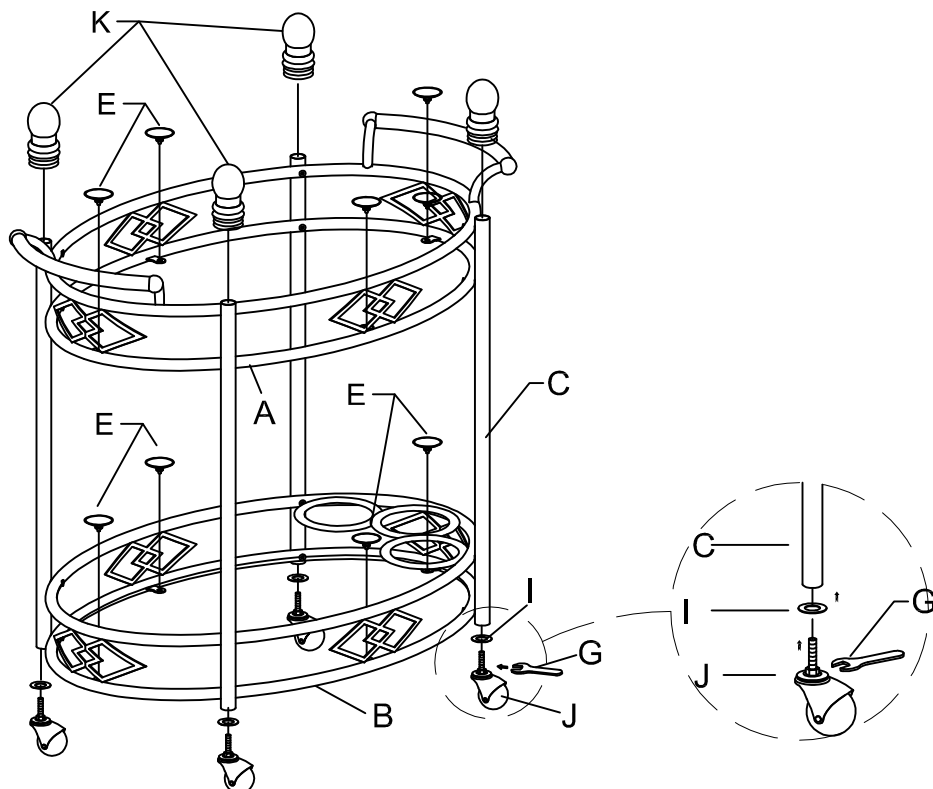

3

Put top glass (D) into top frame (A) and bottom frame (B) as shown.

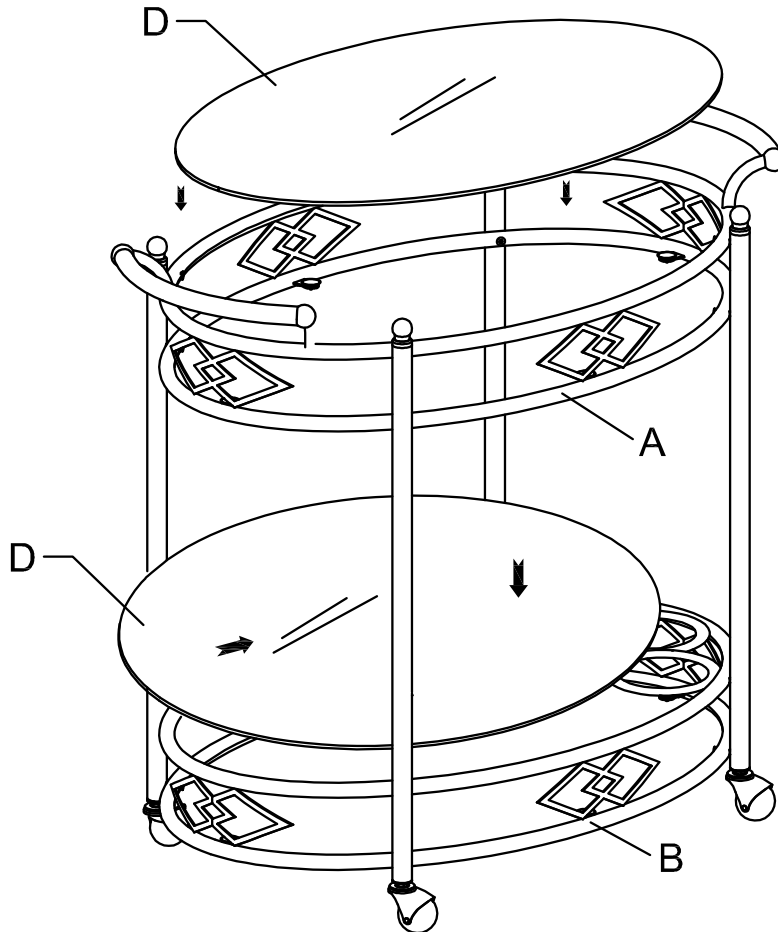

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.