




Wired Router Setup Guide

1. Setting up your router:

Place your router in a rack or on a desktop

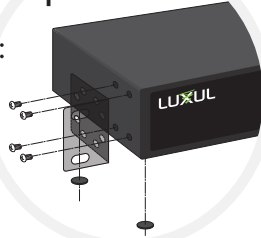

Sign in

http://192.168.0.1


Your connection to this site is not private

Username

Password

Cancel Sign In

2. Connect an Ethernet cable from your telco/ISP modem/router to the WAN 1 port of your router. Connect the included power cable from your router to your power source

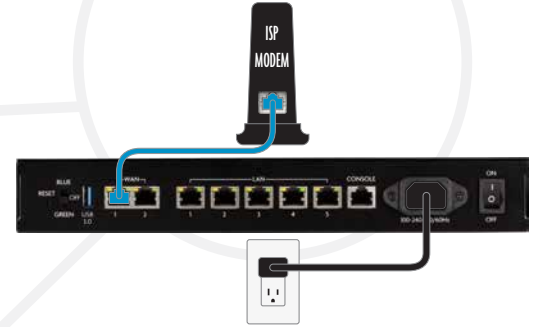

3. Connect a computer to one of the LAN ports of your router. Open a web browser and go to 192.168.0.1

Login with the default username and password

U: admin

P: admin



NOTE: You will be required to change the default administrator password.

The WAN port will be disabled until a new password is selected



NOTE: If your computer or device isn't set to obtain an IP address automatically, you'll need to set a temporary static IP address on that device. Set the IP address of your computer to an address in the 192.168.0.X range, then set the Gateway/router address to 192.168.0.1

Visit <http://luxul.com/ip-addressing> to learn more about changing your computer's IP address and getting connected



What if...

I need to restore factory default settings?

Press and hold the reset button on the router for at least 5 seconds. The System LED will blink quickly to indicate the router is returning to factory default configuration, go dark for a few seconds, then blink slowly while the router boots

I need to restart my router?

To restart your router, press and quickly release the button labeled 'RESET'

I want to perform advanced configuration?

1. Open a web browser and go to 192.168.0.1 or the IP address you specified during the setup process
2. Enter the login credentials you created during the setup process

View Luxul's privacy policy at:

<https://www.luxul.com/about-us/legal/privacy-policy.aspx>

Copyright and Trademark Notices

No part of this document may be modified or adapted in any way, for any purposes without permission in writing from Luxul. The material in this document is subject to change without notice. Luxul reserves the right to make changes to any product to improve reliability, function, or design. No license is granted, either expressly or by implication or otherwise under any Luxul intellectual property rights. An implied license only exists for equipment, circuits and subsystems contained in this or any Luxul product.

© Copyright 2020 Legrand AV Inc. All rights reserved. The name Luxul, the Luxul logo, the Luxul logo mark and Simply Connected are all trademarks and or registered trademarks of Legrand AV Inc. All other trademarks and registered trademarks are property of their respective holders.

A brand of  **legrand**



What do the LEDs on my router indicate?

Indicator	LED	Function
POWER	On	Router is powered
	Off	Power disconnected or power switch off
SYSTEM	Heartbeat	Normal operation
	Slow blinking	Router rebooting
	Fast blinking	Router returning to factory default settings
	Off	Router error
USB	On	USB device is connected
	Blinking	USB device activity
WAN/ LAN Front	Top row on	10/100 Mbps device connected
	Btm row on	1000 Mbps device connected
	Flashing	Data being transferred
WAN/ LAN Rear	Yellow on	10/100 Mbps device connected
	Green on	1000 Mbps device connected
	Flashing	Data being transferred

Technical Support

P: 801-822-5450

E: support@luxul.com

For support chat go to:
[luxul.com](https://www.luxul.com)

Sales

P: 801-822-5450

E: sales@luxul.com