


SCHWINN®

Shuttle

TWO SEAT BICYCLE TRAILER

OWNER'S MANUAL

This manual contains safety, assembly, use and maintenance instructions. Read these instructions carefully before use and keep them for future reference. Your child's safety may be affected if you do not follow these instructions. The Schwinn Bicycle Trailer must be assembled by an adult who has read and understands the instructions in this manual. Keep the packaging away from children and dispose of all packaging before use.

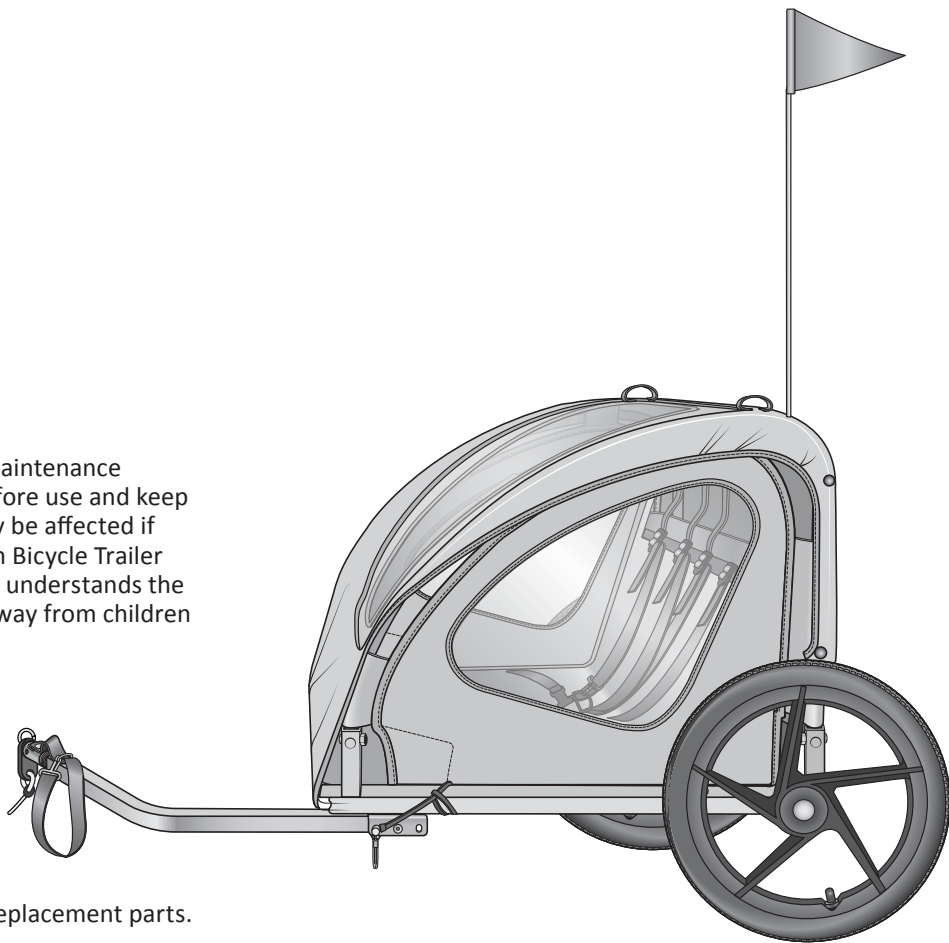

Do not return to store.

Call toll free **1-800-626-2811** for assistance and replacement parts.

Keep instructions for future reference.

Congratulations

on your new bicycle trailer! Proper assembly and operation of your bicycle trailer is important for your safety and enjoyment. Our customer service department is dedicated to your satisfaction with Pacific Cycle and its products. If you have questions or need advice regarding assembly, parts, performance, or returns, please contact the experts at Pacific Cycle. **Enjoy the ride!**

Toll free: 1-800-626-2811

Customer Service hours: Monday - Friday 8 AM- 5 PM Central Standard Time (CST)

You may also reach us at:

Web: www.pacific-cycle.com

Email: customerservice@pacific-cycle.com

Mail: 4902 Hammersley Rd.
Madison, WI 53711

Do not return this item to the store. Please call Pacific Cycle customer service if you need assistance.

Contents

1 SAFETY	1	5 USING THE SAFETY HARNESS	16
Assembly Warnings	1	Using the Safety Harness with Two Children	16
Child Warnings	1	Using the Safety Harness with One Child	17
Trailer Use Warnings	2		
Safe Riding Warnings	2	6 DISASSEMBLY AND STORAGE	18
Recommendations	3	Remove the Tow Bar From the Bicycle	18
Care	3		
2 PARTS AND FEATURES	4	7 WARRANTY	21
3 ASSEMBLY	5		
Unfolding the Frame	5		
Attaching The Canopy And Flag Pole	8		
Extending and Securing the Tow Bar	9		
Attaching the Wheels	10		
4 TRAILER ATTACHMENT	11		
Attaching to a Bicycle with Quick Release Axles	14		

1 Safety

⚠ WARNING!

FAILURE TO FOLLOW THE SAFETY INSTRUCTIONS LISTED BELOW MAY RESULT IN SERIOUS INJURY OR DEATH. Always read and understand the information and warnings in this manual before using the Bicycle Trailer.

If you are unsure of any information in this manual or have a question regarding assembly or use please call customer service. Always keep this manual for reference and include it with resale of the Bicycle Trailer.

ASSEMBLY WARNINGS

- An adult who has read and understands the information and warnings in the manual must assemble this product according to manufacturer's instructions.
- Do not use the product if there are any missing or damaged parts. Do not return the product to the store. Please contact customer service at **1-800-242-6110** for assistance and replacement parts.
- Dispose of all plastic bags and wrapping material immediately.
- Check the assembly (i.e.: crossbar locked, screws tight) before using the product.
- Use caution to avoid pinch points when folding or unfolding the trailer.

- Never allow children to assemble, fold, or disassemble the trailer.

CHILD WARNINGS

- The maximum weight for each child is 40 lbs. The total weight (children and cargo) in the trailer cannot exceed 92 lbs.
- The child should not exceed the weight limitations as it increases the risk of tipping the trailer.
- This trailer is intended for a child that is at least 12 months old and weighing up to 40 lbs.
- Avoid serious injury from falling or sliding out. Always use the safety harness.
- Never leave children unattended in or around the trailer.
- Never have more than two children in the trailer at one time.
- When using the double trailer with one child, seat the child in the center.
- Never use with children that cannot support their own head.
- Never use the trailer with children who cannot sit unaided.
- Check the trailer (pram) body or seat unit attachment devices are correctly engaged before use.
- Always use the crotch strap in combination with the waist belt.

WARNING!

- Do not allow any of the child's body, clothing, shoe laces, or toys to come into contact with a moving trailer.
- Take proper steps (clothing, ventilation, hydration) to protect the child from exposure hazards such as wind chill and heat exhaustion. These hazards will have a greater impact on the less active passenger.

TRAILER USE WARNINGS

- Failure to comply with the manufacturer's instructions can lead to serious injury or death of the passenger/rider.
- Do not install a car seat or any other seating device into the trailer.
- Before each ride, ensure the attached trailer does not interfere with braking, pedaling, or steering of the bicycle.
- Do not add a seat pad (mattress) thicker than 2.5" (63.5 mm).
- Parcels or accessories placed on the trailer may cause the trailer to become unstable.
- Do not place items on the trailer. Hazardous conditions may exist if package carrying accessories are added to the product.

WARNING

This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

- Check the trailer for damage. Do not use if damaged.
- Be sure the fasteners are tight. Tighten if necessary.
- Inspect tires for damage and/or tread wear before each ride. Do not use the trailer if the tires are damaged or worn out.
- The safety flag and reflectors must be in place. Do not use the trailer without the safety flag and reflector in place.
- Always have the canopy in place.
- Do not make any modifications to the trailer as it increases the risk of failure.
- Accessories not approved by the manufacturer must not be used.

SAFE RIDING WARNINGS

- Children should always wear a properly fitted helmet that complies with US Consumer Product Safety Commission (CPSC) standard 16CFR 1203.
- Be sure the brakes work properly. Braking distance is increased when pulling a trailer.
- Avoid braking suddenly.
- Always maintain a safe speed. The trailer is not intended for use at high speeds. Do not exceed 10 MPH.
- The trailer requires a wide turning radius. Do not turn sharply. Sharp changes in direction may cause a tip over.

WARNING!

- Use caution when turning on loose or uneven surfaces and when going downhill.
- Allow extra clearance for the trailer when near curbs, parked cars, and other obstacles.
- Do not ride over curbs, bumps or holes.
- Do not use the trailer in hazardous weather.
- Do not pull or push the trailer with a vehicle.
- This product is not suitable for running or skating.
- Red reflectors must be visible on the rear of the trailer.
- Never ride a bicycle at night without adequate lighting. Obey all local legal requirements for lighting.
- A load added to the bicycle will alter the stability and riding characteristics of the bicycle.


RECOMMENDATIONS

- The bicycle to be used with the trailer should undergo a safety check with a qualified bicycle mechanic before attaching the trailer.
- The maximum weight that can be carried in the cabin pockets is 1 lb. each. The maximum weight that can be carried in the rear storage area is 10 lbs.
- Attach a rearview mirror on the bicycle to check on the (child/ children) in the trailer.

CARE

- **To clean the trailer:** use only mild soap and water. Do not use cleaning solvents.
- **Routinely check** that all fasteners and equipment (wheels, reflectors, flag, etc) are tight and properly assembled.
- **Have a qualified bicycle mechanic** perform routine safety checks on your bicycle before using with the trailer.
- **Routine bicycle maintenance** is recommended to be performed every year.
- **Do not leave trailer outside after use.** Inclement weather and harsh elements may stress the fabric on the trailer.

2 Parts and Features

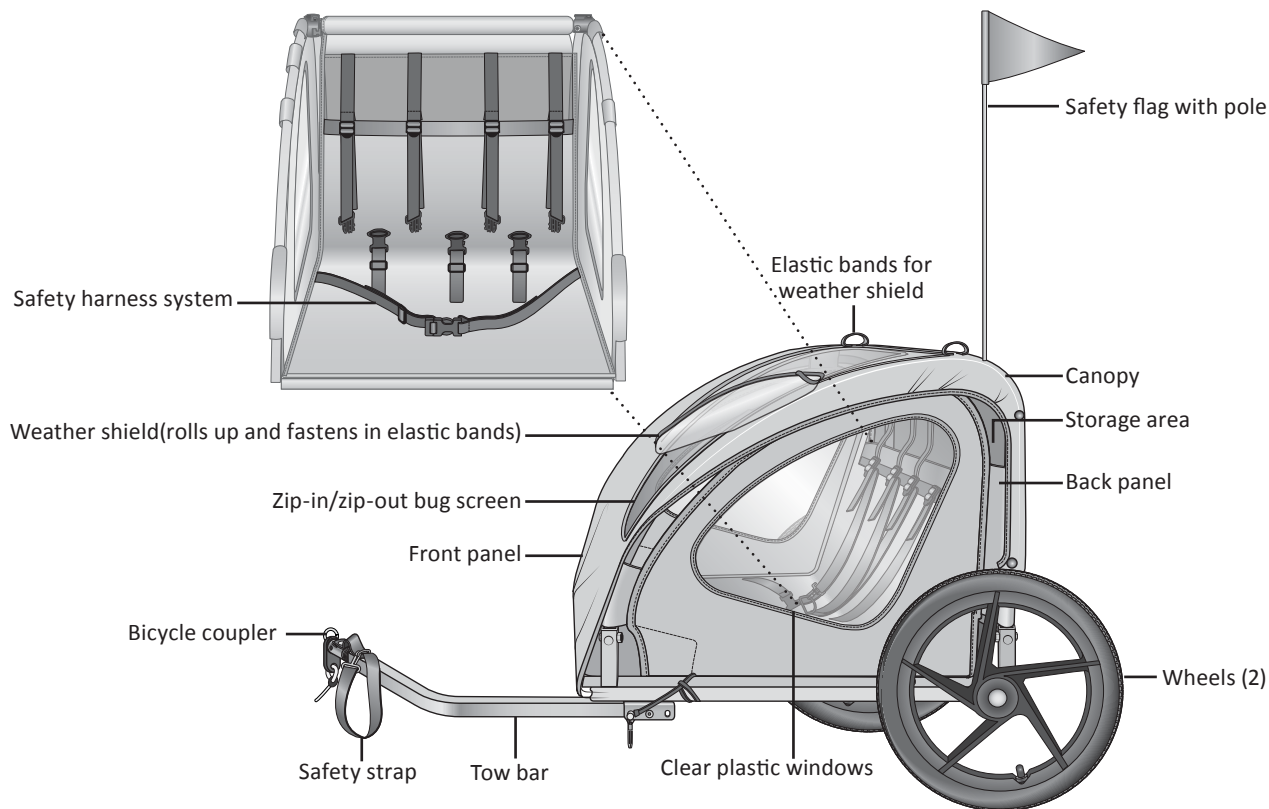

③ Assembly

UNFOLDING THE FRAME

⚠ WARNING!

- There are pinch points between the sidewalls and the frame of the trailer that may cause injury. Fold or unfold the trailer slowly using caution.
- Keep children clear when folding or unfolding the trailer.
- Ensure that all locking devices are engaged before use.

Note: The trailer comes with the frame and the side walls folded down. The front and back panels are turned under the side walls.

- ① Unsnap the front panel from the side wall and pull the front panel out from under the side walls to expose the front of the frame. Notice the locking spring pin holes on front and rear ends of the frame. **Figure 3.1**


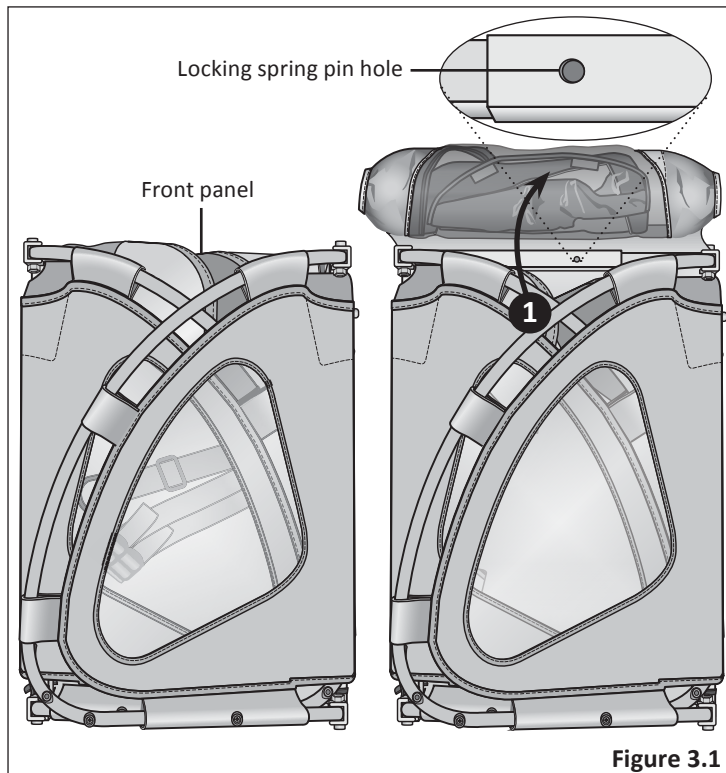



Figure 3.1

- 2 IMPORTANT!** Expand the frame out by pulling on the side rails until the locking spring pins insert into the holes on **both** ends of the frame. Check to ensure the frame is securely locked together. **Figure 3.2**

Tip! It may be easier to place the frame on its side. With one foot on the bottom side rail, pull up on the top side rail until the locking spring pin is fully inserted into the pin hole.

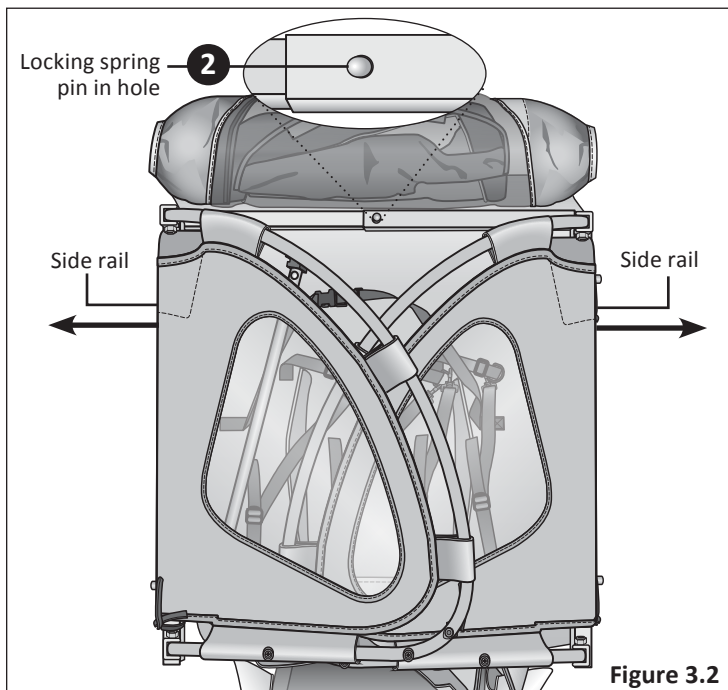


- 3** Lift the left side wall up into a vertical position, then lift the right side wall up until both sides are completely up into the vertical position. **Figure 3.3**

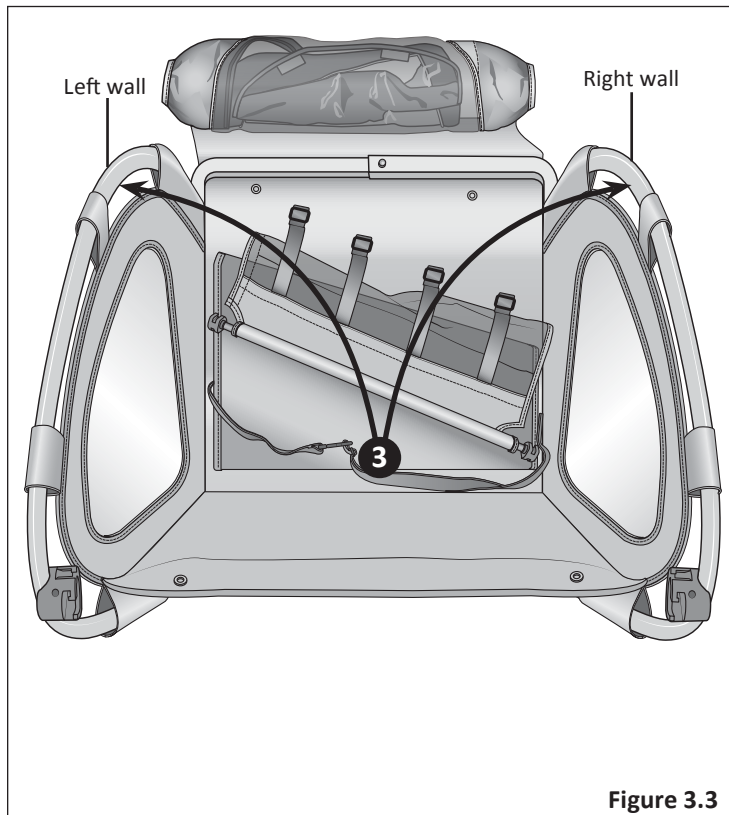


- 4 IMPORTANT** Ensure the crossbar is completely inserted through the crossbar sleeve.

While pulling the side walls apart as far as you can, **rest** each end of the crossbars into the crossbar latches. **Figure 3.4**

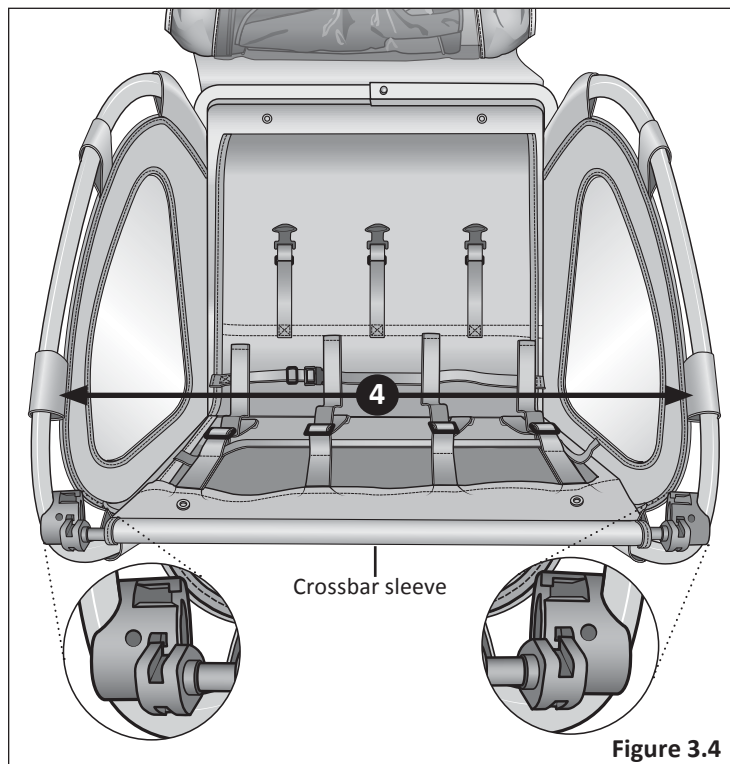

- 5** Press the crossbar completely down into the crossbar latch until both latches are **fully engaged**.

- 6** Ensure the crossbar is locked into place by pulling up and down on it. **Figure 3.5**

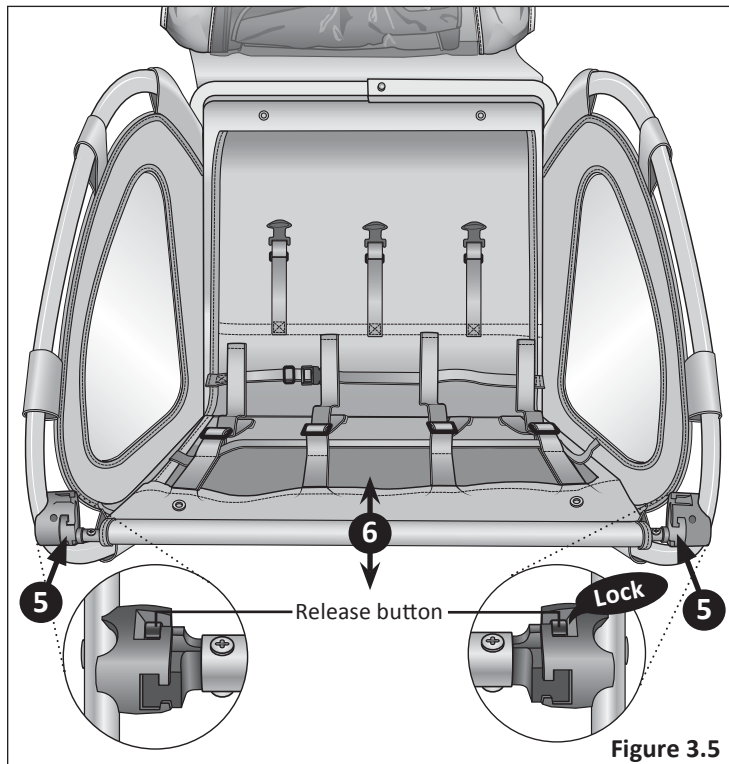

ATTACHING THE CANOPY AND FLAG POLE

Important! The safety flag is an important safety feature that warns others that a trailer is present and on the bicycle. **Always** have the safety flag on the trailer when in use.

- 1 While pulling the canopy up and over the top of the frame, insert the flag pole through the flag pole slot on the canopy and into the flag pole attachment hole located on crossbar latch. **Figure 3.6**
- 2 Snap the first set of snaps at the top of the frame.
- 3 Snap the second set of snaps located at the back of the frame and ensure the flag pole is completely inserted into the flag pole attachment hole.
- 4 Roll the weather shield up into the bands at the top of the canopy if you are not using it.

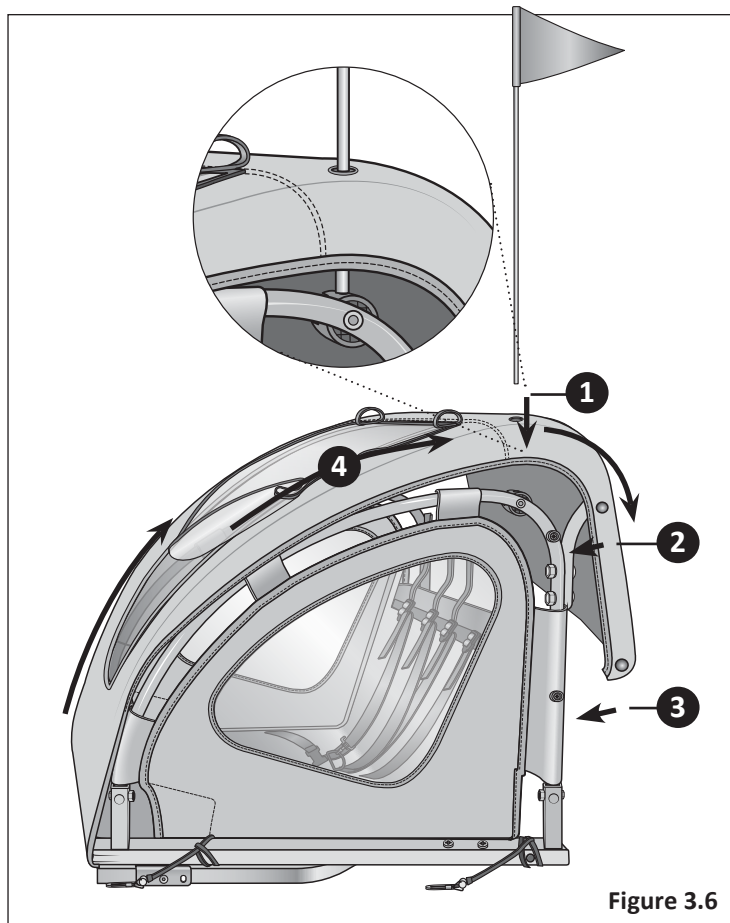


Figure 3.6

EXTENDING AND SECURING THE TOW BAR

- 1 Place the trailer on its side with the tow bar facing up.
- 2 Remove the locking pin from the tow bar bracket.
- 3 Rotate the tow bar out and away from the trailer. The tow bar should be resting on the front of the frame.
- 4 Insert the locking pin completely through the hole in the end of the tow bar and bracket.
- 5 Slide the end of the metal safety loop over the end of the locking pin. Ensure the locking pin is securely in place.

Figure 3.7

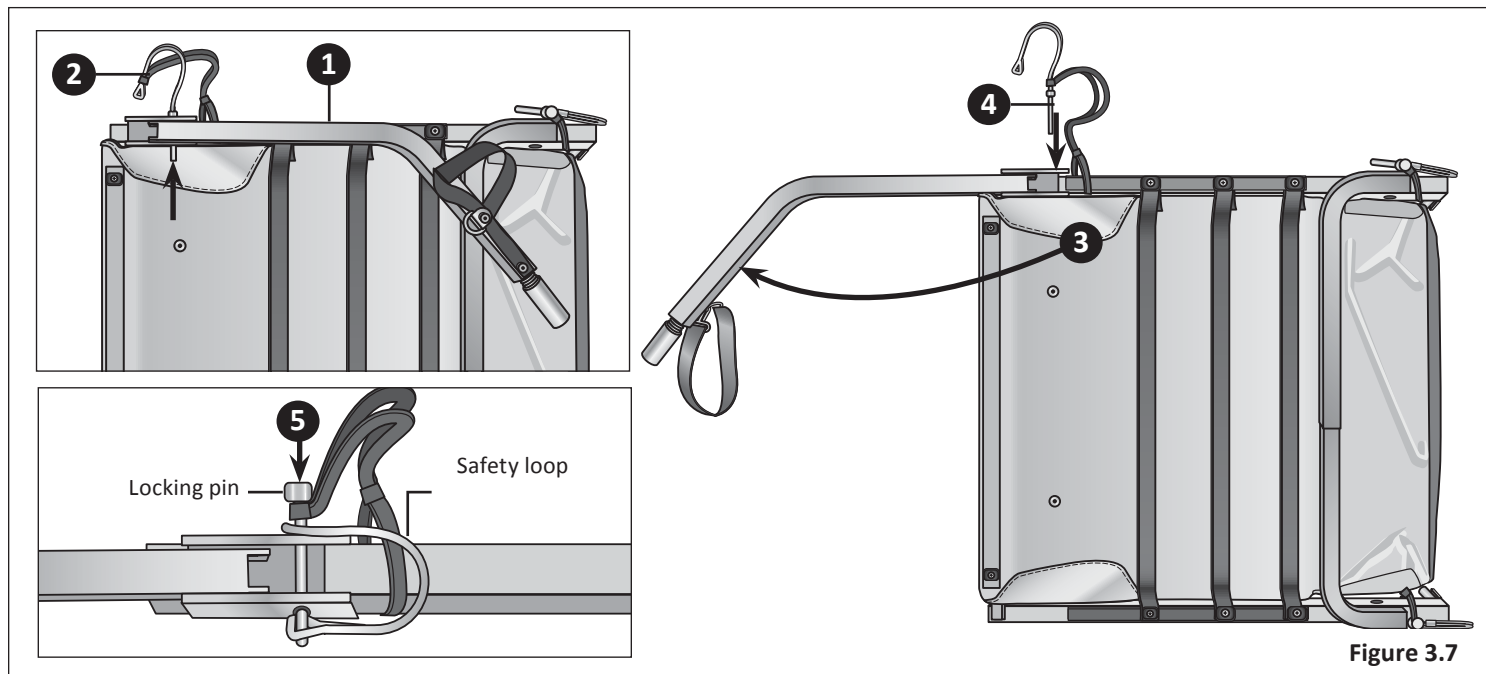


Figure 3.7

ATTACHING THE WHEELS

WARNING!

Wheels that are not securely locked in place may fall off the trailer and cause serious injury or death. Always ensure the wheels are securely locked in place before use.

- 1 Insert the axle of the wheel into the wheel hole located towards the rear of the trailer. **Figure 3.8**
- 2 Insert the locking pin into the axle and slide the end of the safety loop over the end of the locking pin. Ensure the locking pin is securely in place.

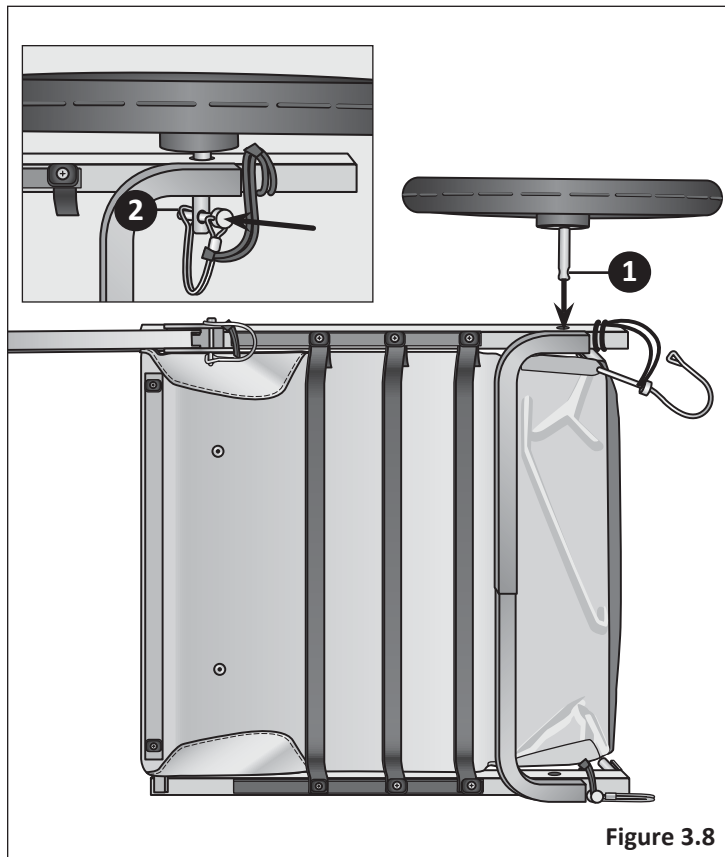


Figure 3.8

4 Trailer Attachment


⚠ WARNING!

Use of the trailer without the safety strap attached to the bicycle may result in serious injury or death. Always attach the safety strap to the bicycle when using the trailer.


The following section provides instructions for attaching the trailer to a bicycle with rear hub nuts or quick release.

Note: Remove the coupler plate and tab washer from the end of the tow bar before proceeding.


- 1 Using a wrench, remove the hub nut and washer from the bicycle's back wheel. **Figure 4.1**

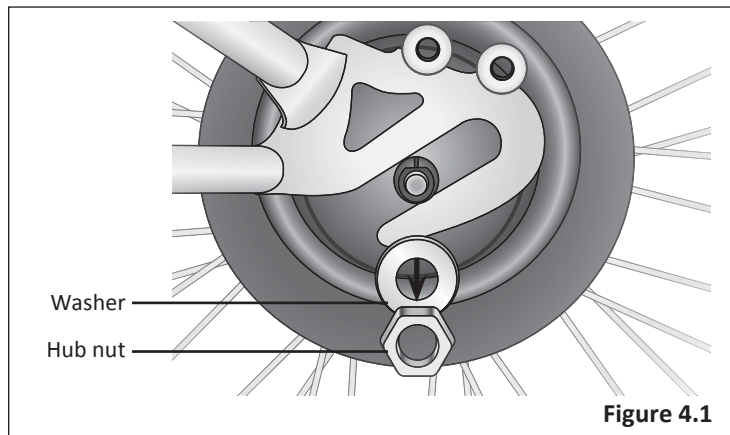


- 2 Place the tab washer on the axle. Fit the tab into the slot on the bicycle frame dropout. **Note:** If your bicycle frame doesn't have a slot in the drop out, rotate the tab to fit into the axle slot. **Figure 4.2**

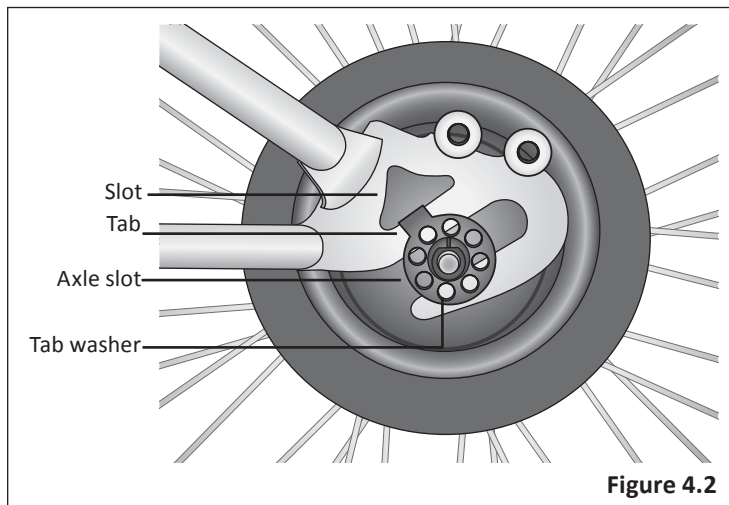


- 3 Place the coupler plate on the axle, in a vertical position with the large hole down. Align the pegs on the back of the plate with the holes in the tab washer. **Figure 4.3**

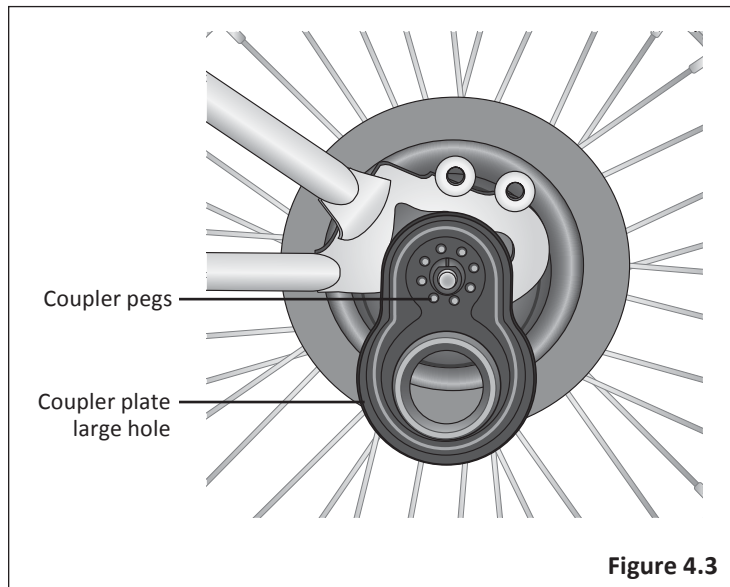


- 4 Place the hub nut and washer back on the axle and tighten. **Figure 4.4**

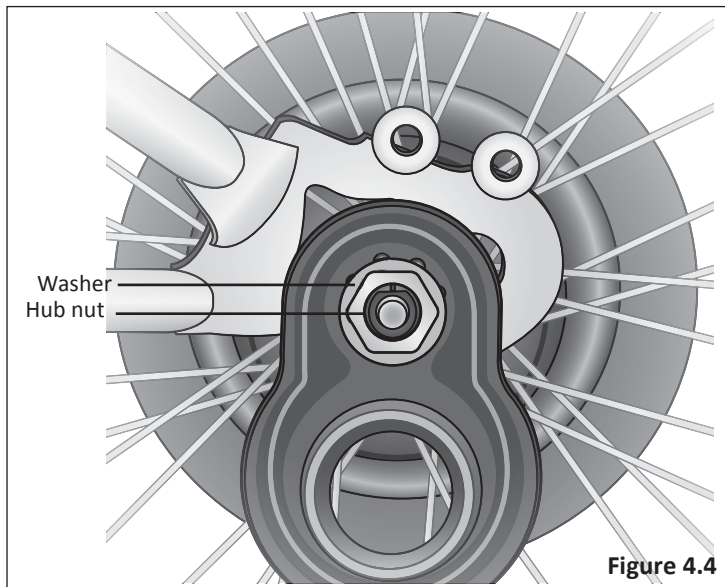


- 5** Insert the tow bar into the large hole on the coupler plate.
Figure 4.5

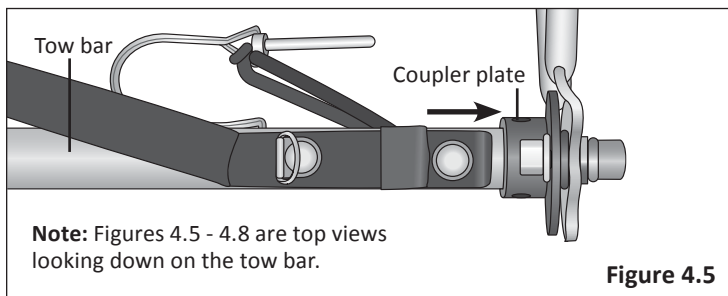


- 6** Insert the locking pin through the coupler plate and tow bar.
Figure 4.6

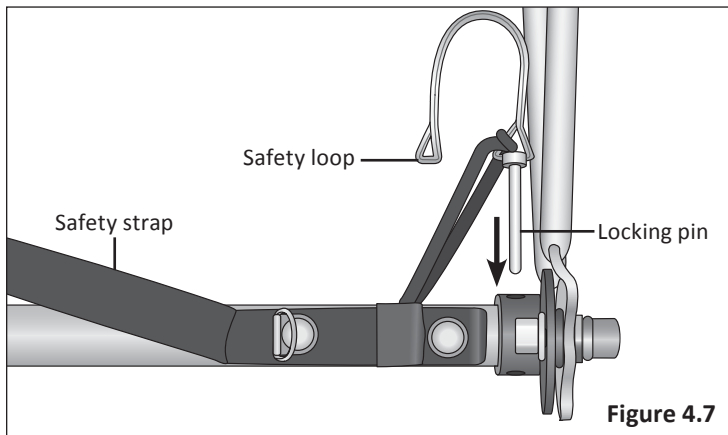

- 7** Slide the metal safety loop onto the locking pin. Check that it is securely in place. **Figure 4.7**

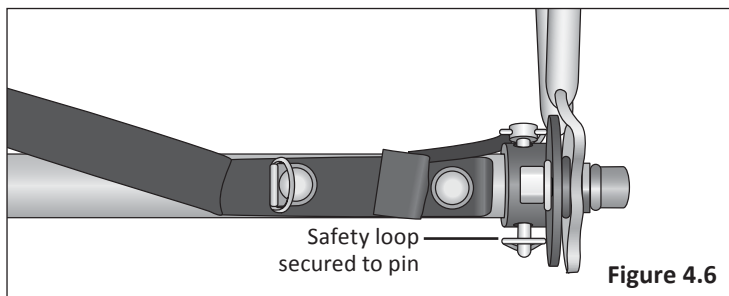


- 8** Wrap the tow bar safety strap around the bicycle frame and clip it to the ring on the end of the tow bar. **Figure 4.8**

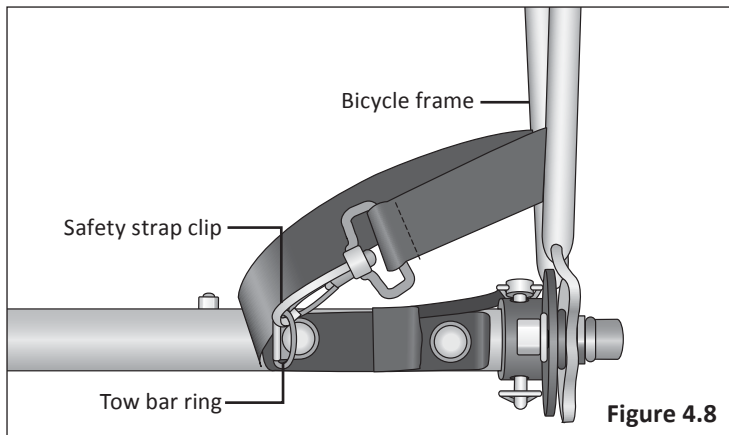


ATTACHING TO A BICYCLE WITH QUICK RELEASE AXLES


- 1 Flip the quick release lever and remove the nut and spring from the opposite side. **Figure 4.9**

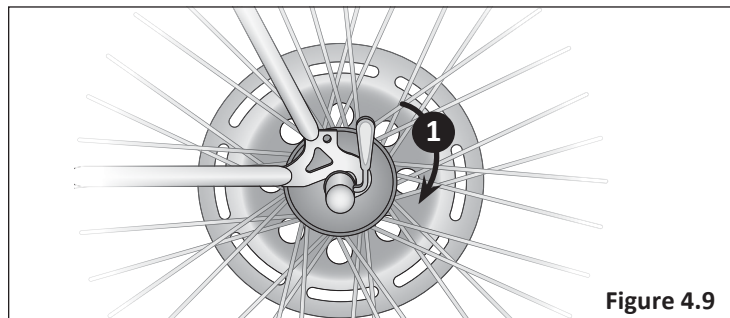


- 2 Remove the axle skewer and spring. Leave the wheel in place. **Figure 4.10**

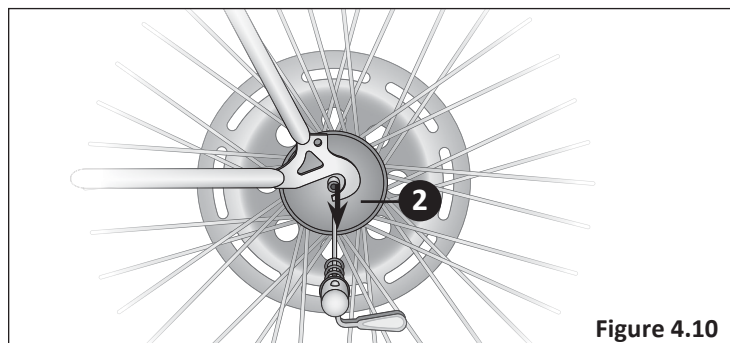


- 3 Slide the axle skewer through the coupler plate and tab washer. **Figure 4.11**

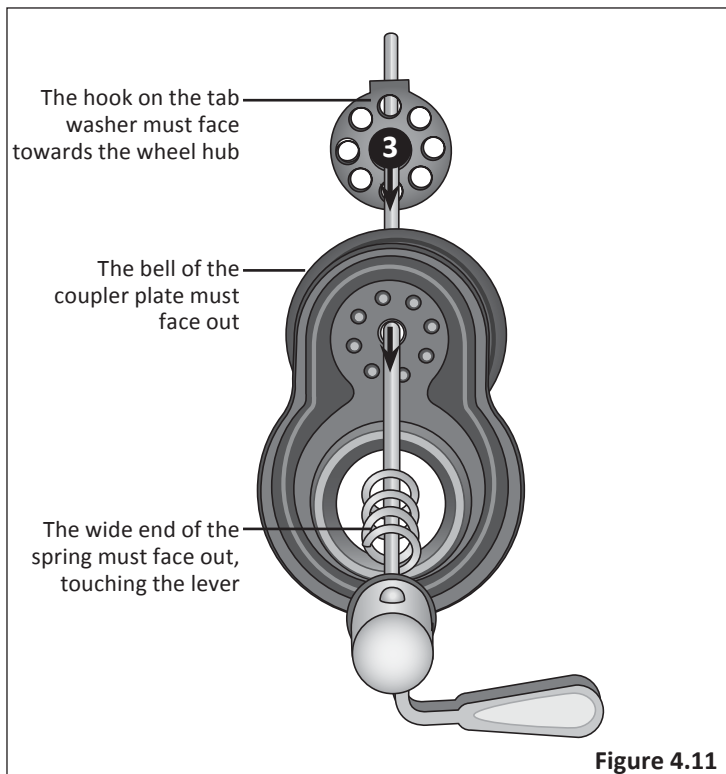

- 4 Insert the axle skewer tab washer, coupler plate and spring through the wheel, with the parts oriented as described in step 3. **Figure 4.12**
- 5 Replace the spring and nut that were removed in step 1 on the axle skewer and tighten.

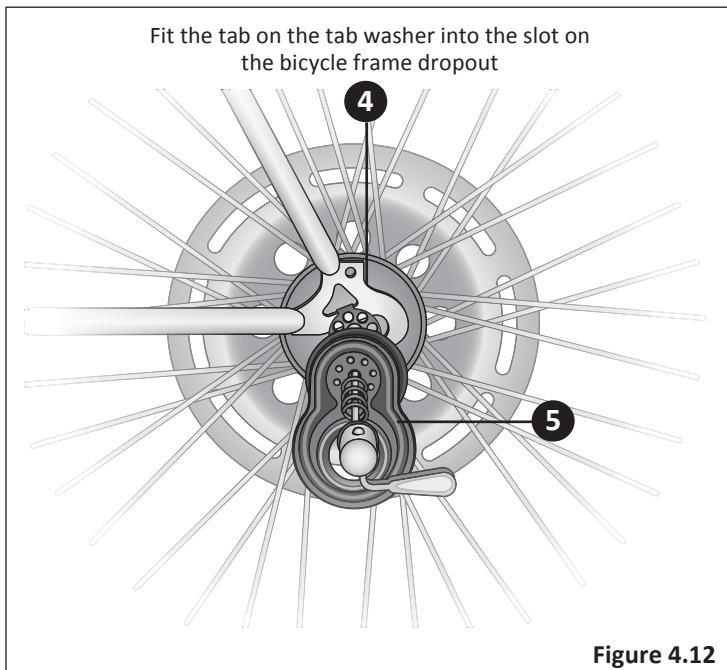

- 6 Rotate the quick release lever up and close fully and tightly. Ensure the coupler pegs are inserted into holes on tab washer. When properly tightened, the quick release lever should leave an imprint in your hand. The pressure should be firm but not excessive. **Figure 4.13**
- 7 Follow step 5 - 8 on page 13. **Figures 4.5 - 4.8**

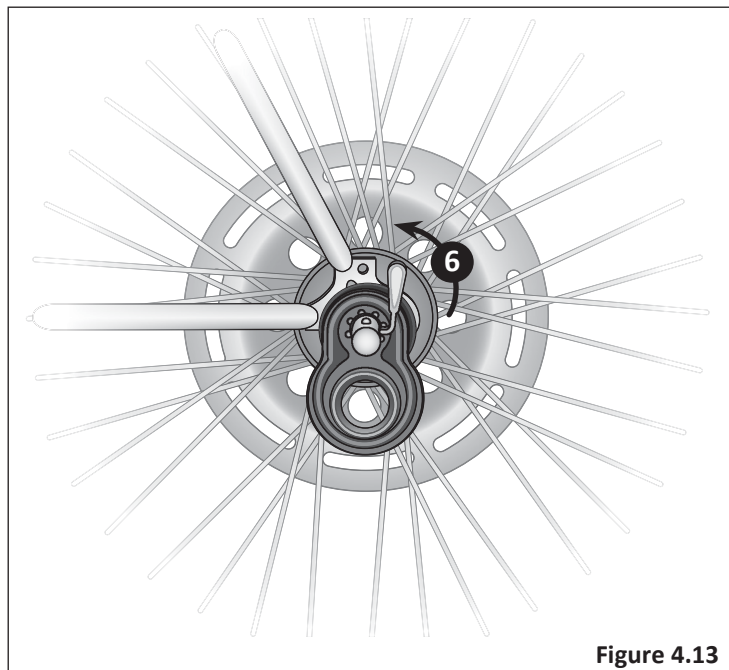

5 Using the Safety Harness

USING THE SAFETY HARNESS WITH TWO CHILDREN



WARNING!

- Avoid serious injury from falling or sliding out. Always properly secure the passenger(s) with the safety harness.
- Never leave your child unattended in or near the bicycle trailer.

- 1 Unbuckle the shoulder straps from the center straps.
 - 2 Seat each child in the center of each passenger compartment.
 - 3 Place the center strap between the child's legs.
 - 4 Place the shoulder straps over each child's shoulders and fasten the center strap buckle.
Important! Adjust the straps so the buckle meets at the child's stomach.
 - 5 Bring the waste strap across both children's hips, and fasten the buckle in between the two children. Tighten as needed.
- Figure 5.1**

To properly remove the children, reverse above steps 1-5, and take the children out.

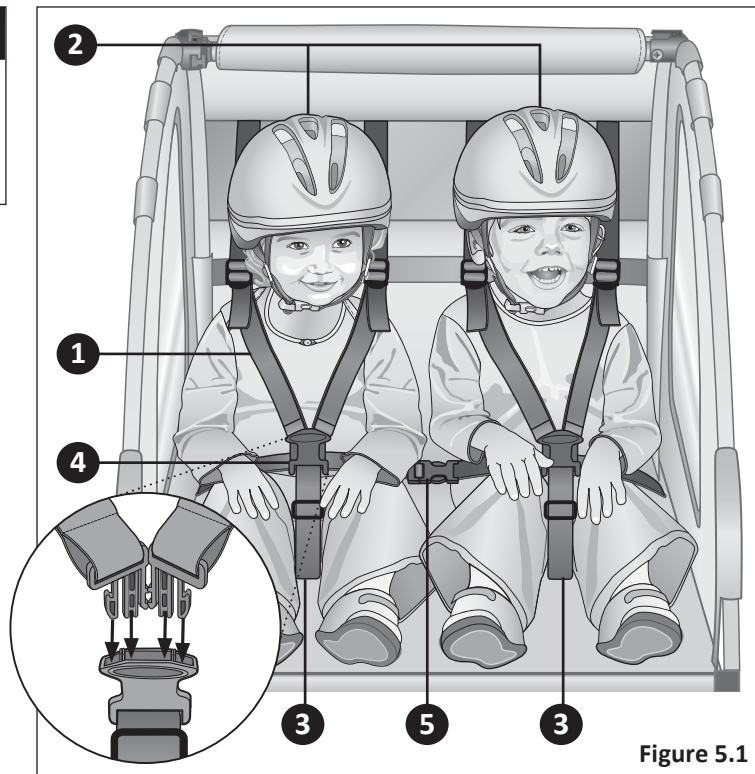


Figure 5.1

USING THE SAFETY HARNESS WITH ONE CHILD



WARNING!

- Avoid serious injury from falling or sliding out. Always properly secure the passenger(s) with the safety harness.
- It may be dangerous to leave your child unattended. Never leave your child unattended in or near the bicycle trailer.

- 1 Seat the child in the center of the passenger compartment.
- 2 Place the center strap between the child's legs.
- 3 Place the shoulder straps over each child's shoulders and fasten the center strap buckle.
Important! Adjust the straps so the buckle meets at the child's stomach.
- 4 Bring the waste strap across the children's hips, and fasten the buckle. Tighten as needed. **Figure 5.4**

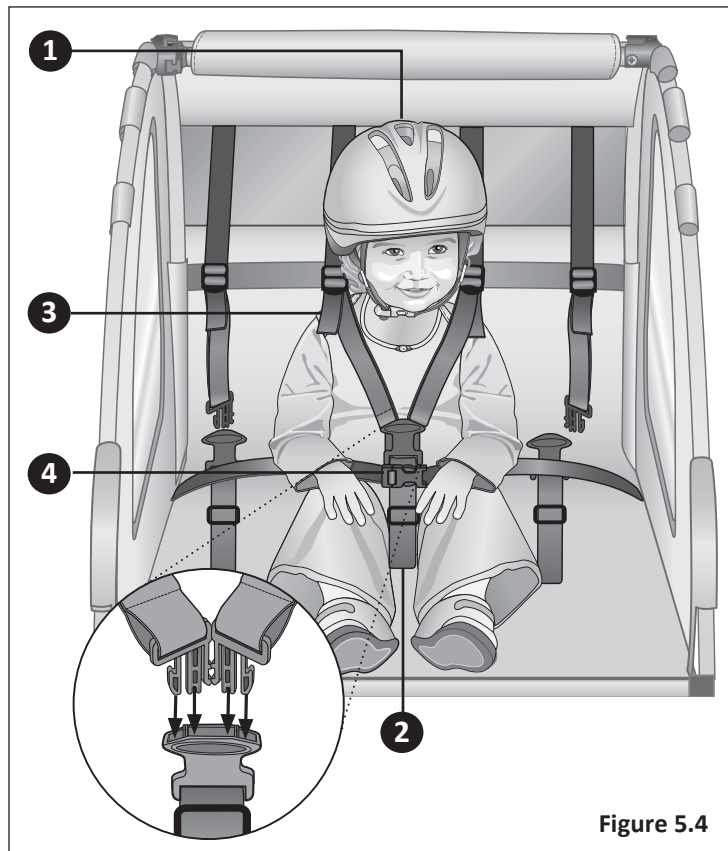


Figure 5.4


6 Disassembly and Storage

⚠ WARNING!


- There are pinch points between the sidewalls and the frame of the trailer that may cause injury.
- Always fold or unfold the trailer slowly and with caution.
- Keep children clear when folding or unfolding the trailer.

REMOVE THE TOW BAR FROM THE BICYCLE


- 1 Remove the child from the passenger compartment
- 2 Unfasten the clip on the safety strap from the tow bar ring, and unwrap it from the bicycle frame. Clip the strap back onto the D-ring of the tow bar. **Figure 6.1**

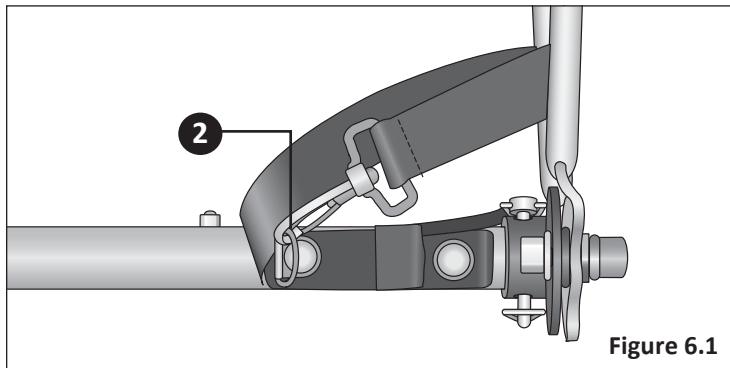


- 3 Remove the locking pin from the tow bar coupler. **Figure 6.2**
- 4 Remove the tow bar from the coupler.
- 5 Insert the locking pin through the end of the tow bar and secure it with the safety loop.
- 6 If desired, leave the coupler on the bicycle wheel hub for future use. It is not necessary to remove when storing.

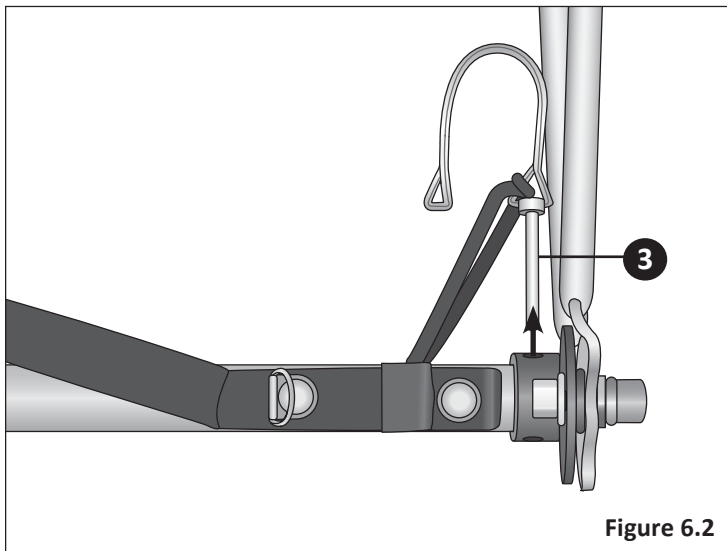


- 1** Remove the flag pole. **Figure 6.3**

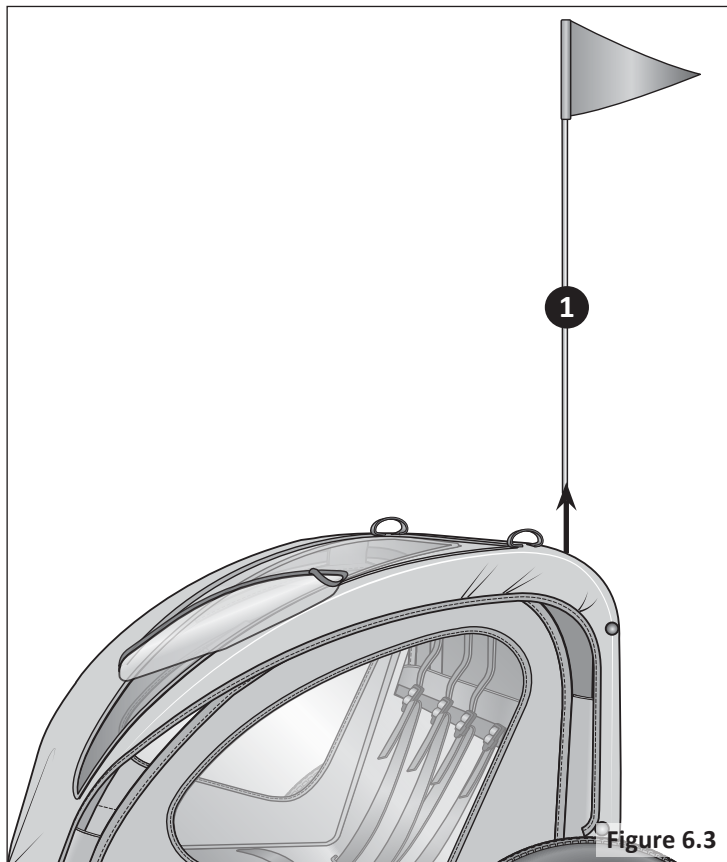


- 2** Remove the wheels by:
- a.** Sliding the safety loop from the end of the locking pin.
 - b.** Remove the locking pin from the axle, and pull the wheel out of the hole in the frame bracket.
 - c.** Slide the locking pin back into the frame hole
- 3** Remove the locking pin from the tow bar bracket. **Figure 6.4**

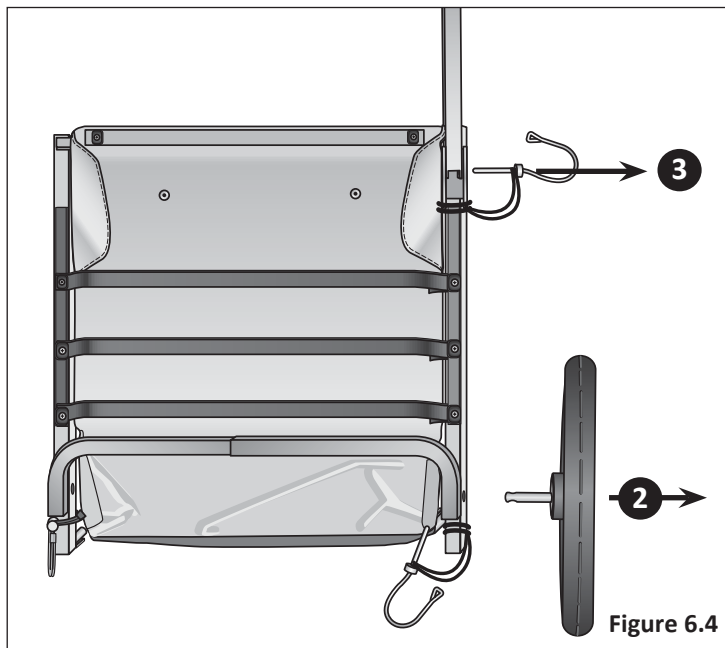


- 4 Fold the tow bar underneath the trailer. **Figure 6.5**
- 5 Place the locking pin back through the tow bar and bracket **Figure 6.5**

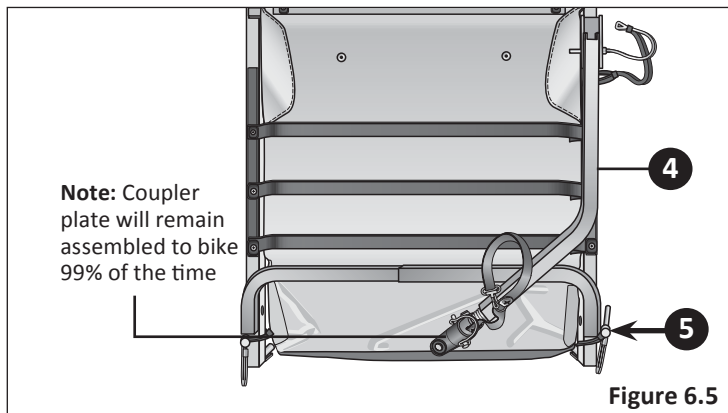

- 6 Press the crossbar release buttons and remove the crossbar from the crossbar latches. **Figure 6.6**

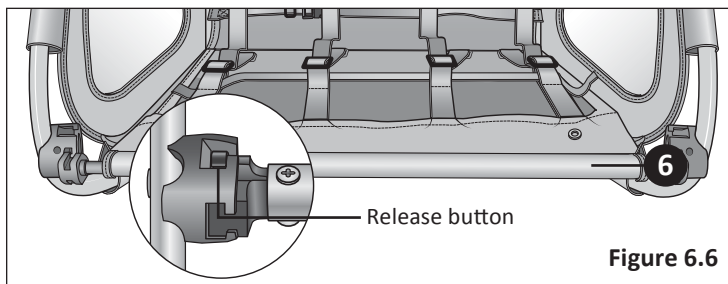

- 7 Carefully fold the trailer side walls down. **Figure 6.7**
- 8 Press the locking spring pins down and push the side rails in. **Figure 6.7**

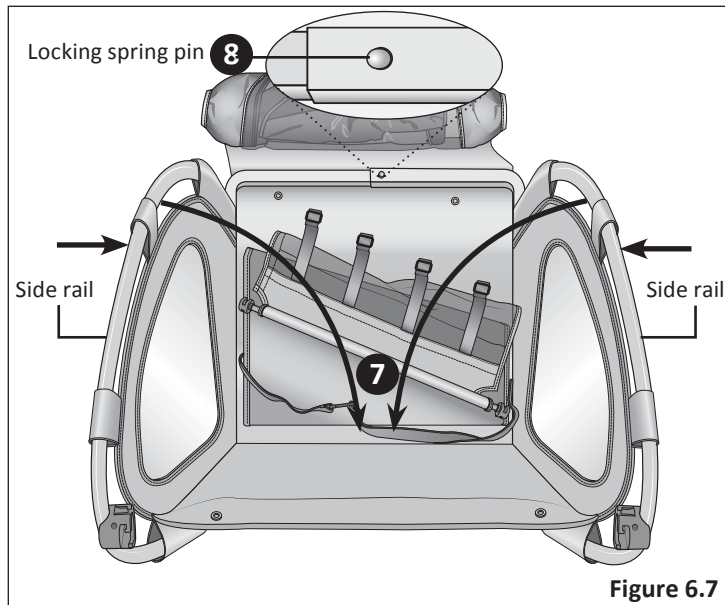

- 9 Place any loose items such as the canopy and wheels inside the passenger compartment.
- 10 Store in a dry place. **Important!** If the storage area is hot then release the some air from the tires. This will help prevent excessive expansion or popping.

7 Warranty

Pacific Cycle warrants this product to be free of defective materials and workmanship for 1 year from the date of original purchase.

THIS LIMITED WARRANTY IS THE ONLY WARRANTY APPLICABLE
TO THIS PRODUCT, AND IS EXPRESSLY IN LIEU OF ANY OTHER WARRANTY.

This limited warranty give you specific legal rights and you may also have other rights which may vary from state to state.

This warranty is extended only to the original consumer purchaser for non-commercial use and does not cover tires or tubes, grips, brake pads, or other wear parts, ordinary wear and tear, abuse, misuse, neglect, theft, or damage due to accident.

PACIFIC CYCLE IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. THIS LIMITED WARRANTY DOES NOT COVER ANY PERSONAL INJURIES, DAMAGE TO, OR, FAILURE OF THE PRODUCT OR ANY OTHER LOSSES DUE TO ACCIDENT, ABUSE, MISUSE, ALTERATION, NEGLIGENCE, NORMAL WEAR AND TEAR, IMPROPER ASSEMBLY, IMPROPER FIT, IMPROPER MAINTENANCE OR USE OF UNAUTHORIZED REPLACEMENT PARTS NOT DESIGNED FOR THE PRODUCT.

To make a claim under warranty, notification of such defect must be given to Pacific Cycle, Inc. the address stated on the previous page. You will be instructed on how the product or part needing replacement should be shipped postpaid to Pacific Cycle, Inc.

schwinnbikes.com

©2025 Pacific Cycle, Inc. Schwinn® is a registered trademark of Pacific Cycle, Inc.

4902 Hammersley Road
Madison, WI 53711

Made in China
A01557 021425

SCHWINN®