



TRIUMPH

We strive to ensure that our products are of the highest quality and free of manufacturing defects or missing parts. However, if you have any problems with your new product,

DO NOT RETURN IT TO THE STORE,

please contact us toll free @:

1-888-996-2729

FAX: 1-866-873-3531

gameroom@escaladesports.com

Mailing Address: (Correspondence Only)

Escalade Sports

PO Box 889

Evansville, Indiana 47706-0889

Physical Location:

Escalade Sports

817 Maxwell Ave.

Evansville, Indiana 47711

Please visit our Web site at:

www.escaladesports.com

Please have your model number when inquiring about parts.

When contacting Escalade Sports please provide your model number, date code (if applicable) and part number if requesting a replacement part. These numbers are located on the product, packaging, and this owners manual.

Your Model Number 45-6032F

 
Date Code 2 - 45-6032F- - JR

Purchase Date _____

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

2 Player Folding Sling Puck game


INSTRUCTION MANUAL

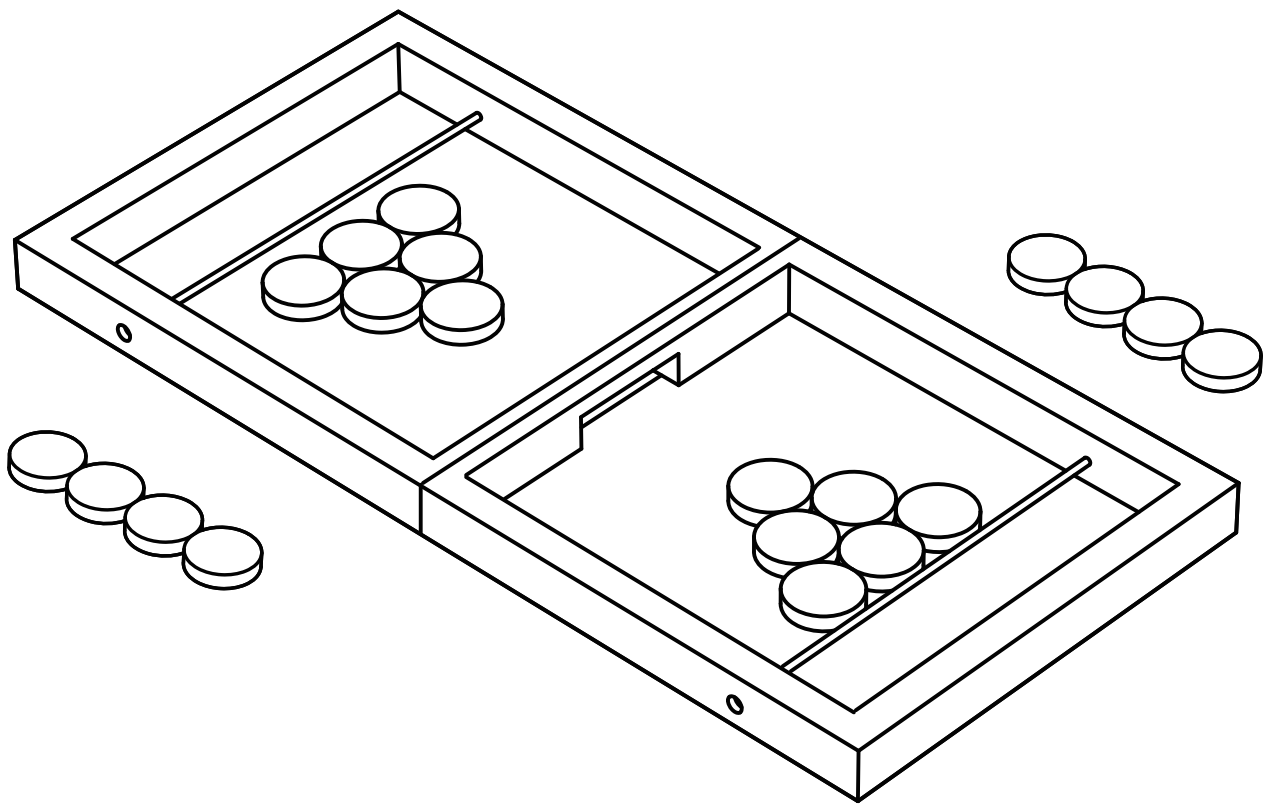

PLEASE KEEP THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE


PARTS LIST

 P1

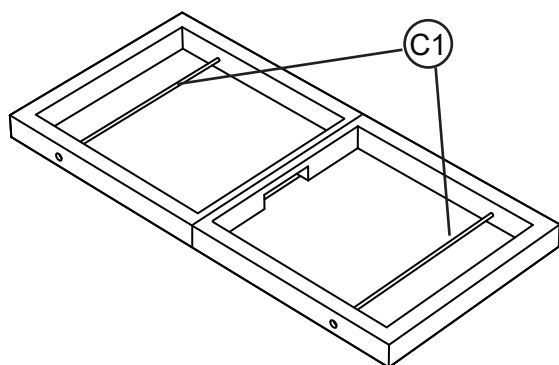


Playfield With 2 Elastic
Puck Launchers attached
1 pc

 P2

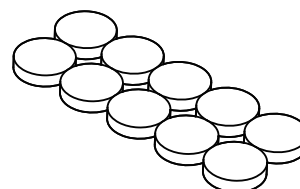

Pucks (Purple)
10 pcs

 P3

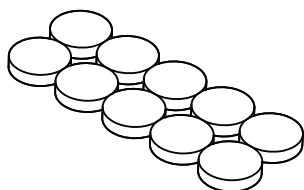

Pucks (Green)
10 pcs

PRODUCT PARTS LIST FOR MODEL # 45-6032F


Key #	Part #	Description	Qty.
P1	45-6032JRP1	Playfield With 2 Elastic Puck Launchers attached	1
P2	45-6032JRP2	Pucks (Purple)	10
P3	45-6032JRP3	Pucks (Green)	10
C1	45-6032JRC1	Elastic Puck Launchers (Used Only For Replacement Parts)	2
M1	45-6032JRM1	Owner's Manual	1

GAME RULES

HOW TO PLAY

- Place the pucks on the playfield and pull the elastic launcher string using your fingers.
- Release the launcher string and let the pucks shoot through the center goal opening.
- Launch all your pucks into the opponent's board area, and YOU WIN!
- You can choose the number of pucks in the game according to your preference, up to a maximum of 10 pucks on each side.

 HAVE FUN !

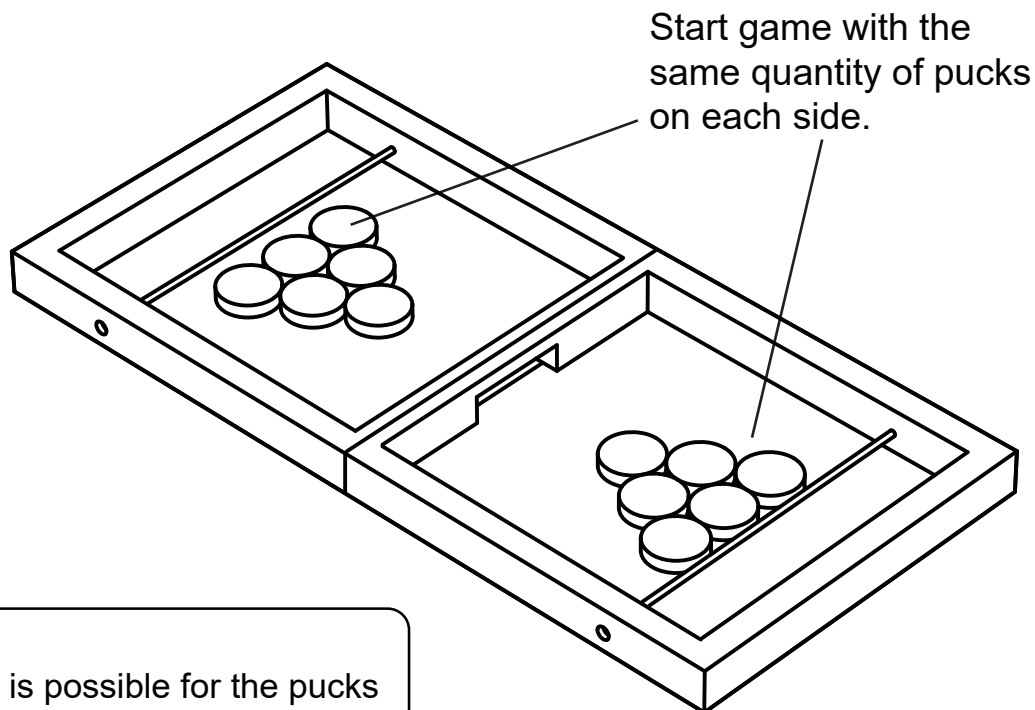

CAUTION:

Be careful as it is possible for the pucks to ricochet and fly off the playfield.

How to replace the C1 Elastic Puck Launcher String : While unlikely , it is possible for the elastic puck launcher string to break or wear out . Should this happen , please see page 5 - Warranty Replacement .

How to replace the Elastic Puck Launcher String :

NOTE: When the procedure below is complete , reasonable tension should exist in the elastic string .

1. Remove the old string knots , from both side holes in the P1 playfield . (If they have not already fell out)
2. Tie a tight single knot in one end of the replacement elastic string .
3. Carefully thread the elastic string thru both side holes in the playfield .
4. Pull the string to develop tension in the elastic string .
5. Tie another single knot in the other end of the string and let the string knot go back into its respective side hole .

90 DAY LIMITED WARRANTY

This consumer warranty extends to the original consumer purchase of any ESCALADE SPORTS Product (hereinafter referred as the "Product").

WARRANTY DURATION: This Product is warranted to the original consumer purchase of a period of 90 days from the original purchase.

WARRANTY COVERAGE: ESCALADE SPORTS warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

WARRANTY PERFORMANCE: During the above 90 day warranty period, ESCALADE SPORTS shall repair or replace with a comparable model, and Product, or component thereof, which may prove defective under normal use and proper care, and which our examination shall disclose to our satisfaction to be thus defective, please contact our Warranty Dept.

1-888-996-2729 / Warranty Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706

Attn: Warranty Dept.

Or E-mail us at:

gameroom@escaladesports.com

Other than shipping requirements no charge will be made for such repair or replacement of in-warranty Products. ESCALADE SPORTS strongly recommends that the Product is insured for value prior to mailing.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. ESCALADE SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

NOT COVERED BY THIS WARRANTY

- Product not intended to be in places of public assembly, such as, but not limited to, schools, parks, public or private recreational facilities
- Any product subjected to Non-residential abuse, negligence, improper installation, vandalism, acts of God, alteration of product, or any other events beyond the control of ESCALADE SPORTS.