


ASSEMBLY INSTRUCTION

ACCENT CHAIR WITH OTTOMAN

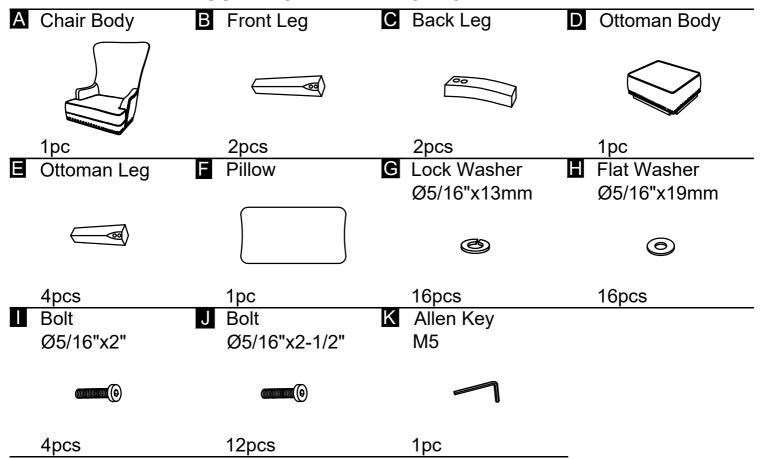


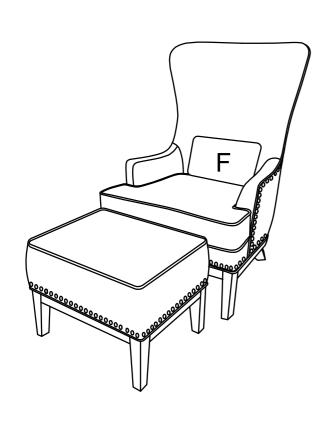

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage. Put Ottoman (D) on a smooth flat surface, attach the Ottoman Leg (E) to the Ottoman Body (D) using the Bolt (J), Lock Washer (G), Flat Washer (H) in both holes of Ottoman Leg (E) and Ottoman Body (D), turn the Allen Key (K) in Bolt (J).

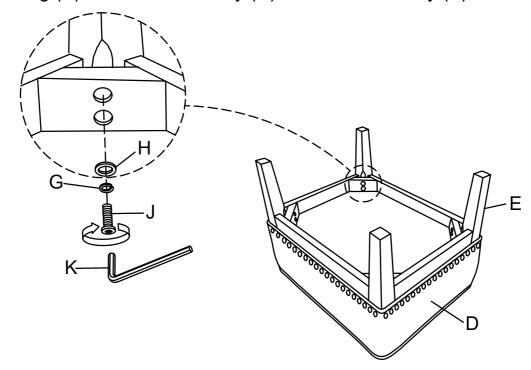

Put the Chair Body (A) on a smooth flat surface, attach the Front Leg (B) to the Chair Body (A) using the Bolt (J), Lock Washer (G), Flat Washer (H) in both holes of Front Leg (B) and Chair Body (A), turn the Allen Key (K) in Bolt (J).

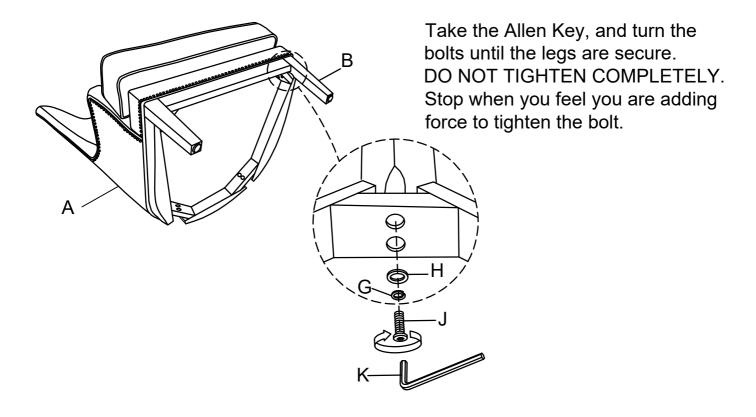

Then attach the Back Leg (C) to the Chair Body (A) using the Bolt (I), Lock Washer (G), Flat Washer (H) in both holes of Back Leg (C) and Chair Body (A), turn the Allen Key (K) in Bolt (I).

Stand chair up on an even surface and check that it is balanced. If there is a slight wobble, apply downward pressure in the corner where a leg is uneven. Keeping pressure in that corner, tighten all bolts. If balanced, apply downward pressure evenly in the center and tighten all bolts. Do not over-tighten beyond hole depth.

Turn left or turn right to adjust the leveler until the chair is stabilized.

Helpful Tip:
-Instead of applying
downward pressure while
reaching under to tighten
bolts, have someone sit in
the chair while you tighten
the bolts.

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.