 



# IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY LED SHOP LIGHT INSTALLATION INSTRUCTIONS



**WARNING:** These products may represent a possible shock or fire hazard if improperly installed or attached in any way. Products should be installed in accordance with the owners manual, current electrical codes and/or the current National Electric Code (NEC).



**PARTS INCLUDED (Drawings not to scale)**

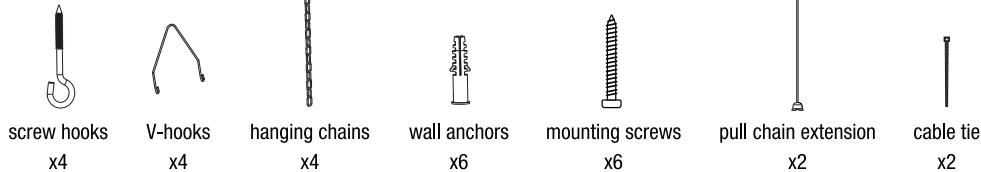

**Product Specifications**  
 - 120VAC, 60Hz, 55 Watts  
 - Not Dimmable  
 - Suitable for Damp Locations

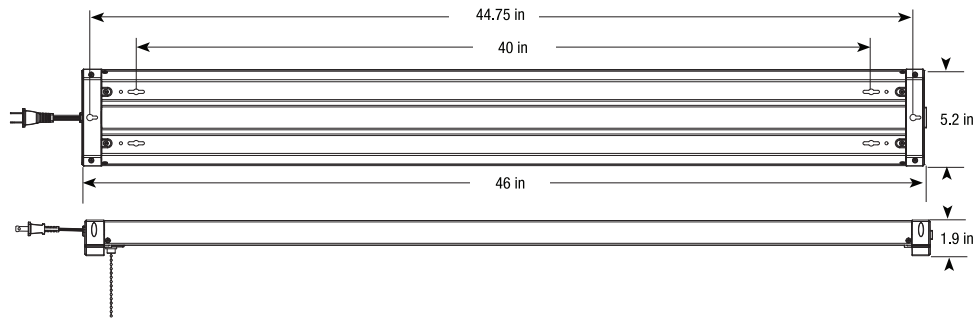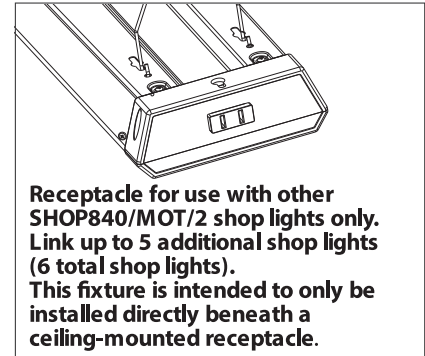

**CAUTION:** Cannot be installed on a radiant-heating ceiling.

**CAUTION:** Hooks are to engage the hanging chain only and not the electric cord.


**NOTE:** When used with wall switch, make sure pull chain switch is On. When using pull chain On/Off switch, attach included extension to pull chain.

## CAUTION, IMPORTANT SAFETY INSTRUCTIONS

 This portable light-emitting-diode (LED) luminaire has a polarized plug (One blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.

### LINKING MULTIPLE SHOP LIGHTS

Link up to 6 shop lights together

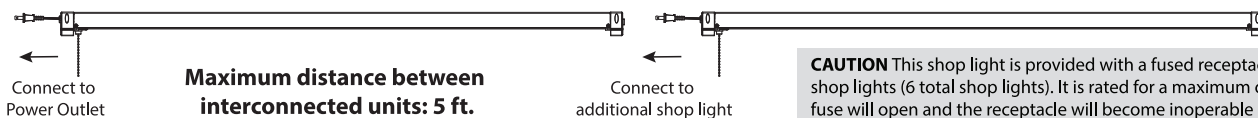

**CAUTION** This shop light is provided with a fused receptacle to energize up to 5 additional shop lights (6 total shop lights). It is rated for a maximum of 3.75 amps. If overloaded the fuse will open and the receptacle will become inoperable (shop light will continue to work).

**Supplier's Declaration of Conformity:** 47 CFR § 2.1077 Compliance Information

**Responsible Party:** Feit Electric Company

4901 Gregg Road, Pico Rivera, CA 90660, USA [www.feit.com](http://www.feit.com)

**Unique Identifier:** SHOP840/MOT/2, ITM. / ART. 1938033

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

### RADIATION EXPOSURE STATEMENT

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device should be installed and operated with a minimum distance of 20cm between the radiator and your body.

### LIMITED WARRANTY

This product is warranted to be free from defects in workmanship and materials for up to 3 years from date of purchase. If the product fails within the warranty period, please contact Feit Electric at [info@feit.com](mailto:info@feit.com), visit [feit.com/contact-us](http://feit.com/contact-us) or call 1-866-326-BULB (2852) for instructions on replacement or refund. REPLACEMENT OR REFUND IS YOUR SOLE REMEDY. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IS HEREBY EXPRESSLY EXCLUDED. Some states and provinces do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.



**WARNING:** TURN OFF THE MAIN POWER AT THE CIRCUIT BREAKER BEFORE INSTALLING THE FIXTURE IN ORDER TO PREVENT POSSIBLE ELECTRIC SHOCK.

## INSTALLATION OPTIONS

### Install fixture using included hanging chain and V-hooks

1. Install provided screw-hooks directly onto ceiling. Spacing between screws should be 40 inches (See Figure A). For concrete ceilings/drywalls, wall anchors are required. Drill two holes (use a 1/4 inch drill bit) for provided wall anchors then use provided screw hooks (See Figure 1).
2. Attach chain to V-hooks then insert hooks into mounting holes located on top of fixture (See Figure 2). Do this for both ends of lamp.
3. Install lamp to ceiling by hanging the chain to pre-mounted screw-hooks on ceiling (See Figure 3).
4. Plug in power-cord to outlet or connect to additional shop lights.
5. Pull down on pull chain switch to turn fixture ON/OFF.
6. Zip tie cord to chain so that excess cord is kept out of the work space. (see Figure 4).

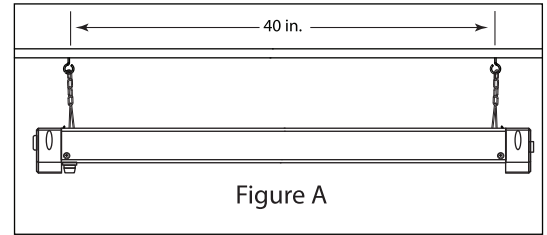


Figure A

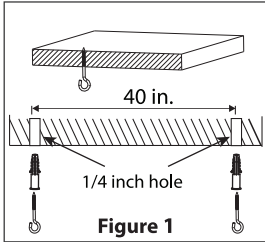


Figure 1

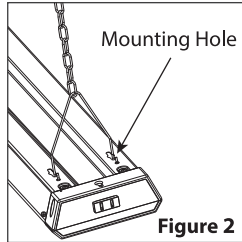


Figure 2

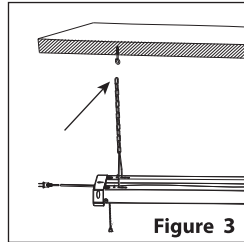


Figure 3

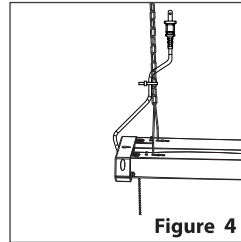


Figure 4

Drawings not to scale

### Install fixture flushmount using screws

1. Install provided screws directly onto mounting surface. Spacing between screws should be 44 3/4 inches. Gap (D) should be .079-.099 inches. For concrete/drywall surfaces, wall anchors are required. Drill two holes (use a 1/4 inch drill bit) for provided wall anchors then use provided screws (See Figure 5).
2. Install fixture to mounting surface by inserting the Key Holes on top side of the fixture into the mounting screws (See Figure 6). It may be necessary to adjust the tightness of the screws (Gap D). Make sure both screws hold the lamp securely on the narrow side of the Key Holes.
3. Mount a third screw next to the side of the outlet (See Figure 7). If anchor is required, mark the hole as close as possible to the fixture, remove the lamp, drill the hole on the marked position, install anchor into the drilled hole, re-install the fixture then install the screw into the wall anchor. This will secure the lamp into place.
4. Plug in power-cord to outlet or connect to additional shop lights.
5. Pull down on pull chain switch to turn fixture ON/OFF.

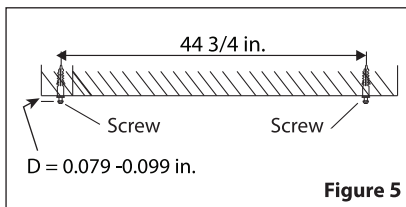


Figure 5

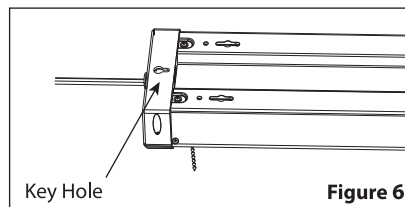


Figure 6


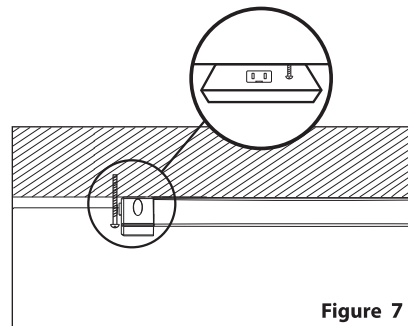


Figure 7

Drawings not to scale


### Motion Detection

While the fixture is powered on, use the switch to turn the motion setting on or off. When ON is selected, the fixture stays on for 5 minutes after motion is detected. When OFF is selected, the fixture remains on continuously.

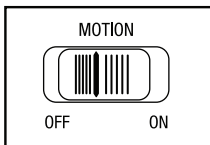

**NOTE:** When motion mode is ON, the fixture will blink once if turned on with wall switch or pull chain switch. This indicates that the motion mode is active.

The fixture is shipped with motion set to the OFF position.

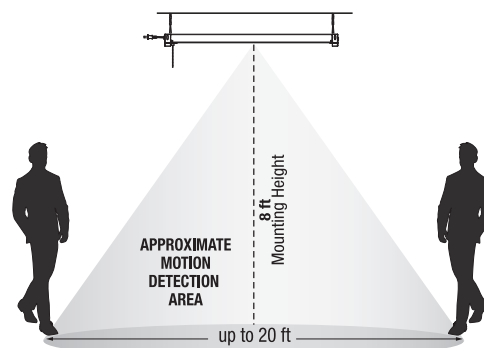

### Fixture Maintenance

1. Please make sure the power is off before maintenance.
2. To avoid any damage to the product, please do not use any chemical solvents during the routine maintenance.
3. To ensure better lighting, please clean the lamp regularly.

**SAVE THESE INSTRUCTIONS**