



OWNER'S MANUAL

42" BELT DRIVE DRUM FAN

INDUSTRIAL FLOOR FAN



MODEL 2VAFDRUMB42

PRODUCT SPECIFICATIONS

- Model No: 2VAFDRUMB42
- Item Name: Belt Drive Industrial Drum Floor Fan
- Rated Voltage: 120V (60Hz)
- Rated Power: 610W
- Mode Fan Speeds: Low / High
- Fan Blade Diameter: 42 Inch

CONSUMER PRODUCT INFORMATION

For your own records, please attach a copy of your sales receipt to this manual. Also, write the store name/location and date purchased below:

Store Name: _____

Location: _____

Date Purchased: _____

CONTENTS

Important Instructions4

Product Diagram4

Assembly Instructions.....5

Operation Instructions.....6

Storage & Maintenance.....6

Troubleshooting7

IMPORTANT NOTE:

Please read and save these instructions. Read through this owner’s manual carefully before using this product. Protect yourself and others by observing all safety information, warnings, and cautions. Failure to comply with instructions could result in personal injury and/or damage to property. Illustrations in this manual are for explanatory purposes only, your actual product may look slightly different. **SAVE THIS MANUAL FOR FUTURE REFERENCE.**

 **WARNING:** Cancer www.P65Warnings.ca.gov

INSTRUCTIONS

 
IMPORTANT INSTRUCTIONS

PLEASE READ CAREFULLY- ALWAYS MAINTAIN SAFETY WHEN WORKING WITH ANY APPLIANCE

1. Check that the power supply voltage corresponds with the rating of the appliance before operating.
2. To protect against electric shock. Do not immerse cords plugs or appliances in water or any other liquid.
3. Do not leave any appliance unattended while it is operating.
4. Close supervision is necessary when any appliance is used by or near children or infirm persons.
5. Unplug from the outlet when not in use or before cleaning. Allow cooling before taking off any parts.
6. Do not operate the appliance with damaged power cords or plugs, and do not use a damaged appliance. If the power cord or appliance is damaged, it must be replaced by the manufacturer, service agent, or similarly qualified professional to avoid a hazard.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces
10. To disconnect-remove the plug from the outlet. Do not pull the plug out by the cord.
11. Do not use this product for anything other than its intended use. This appliance is for household use only.
12. No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.
13. Do not use the appliance without the protective grills.
14. Do not attempt to force the grill to make the fan turn or stop.
15. Never put objects into the grills when the appliance is connected to the mains.
16. It is not advisable to expose people, especially babies or older people, to a continuous cold air stream for a long time.


PRODUCT DIAGRAM

- A. Switch
- B. Fan Body
- C. Handle
- D. Wheels
- E. Leg

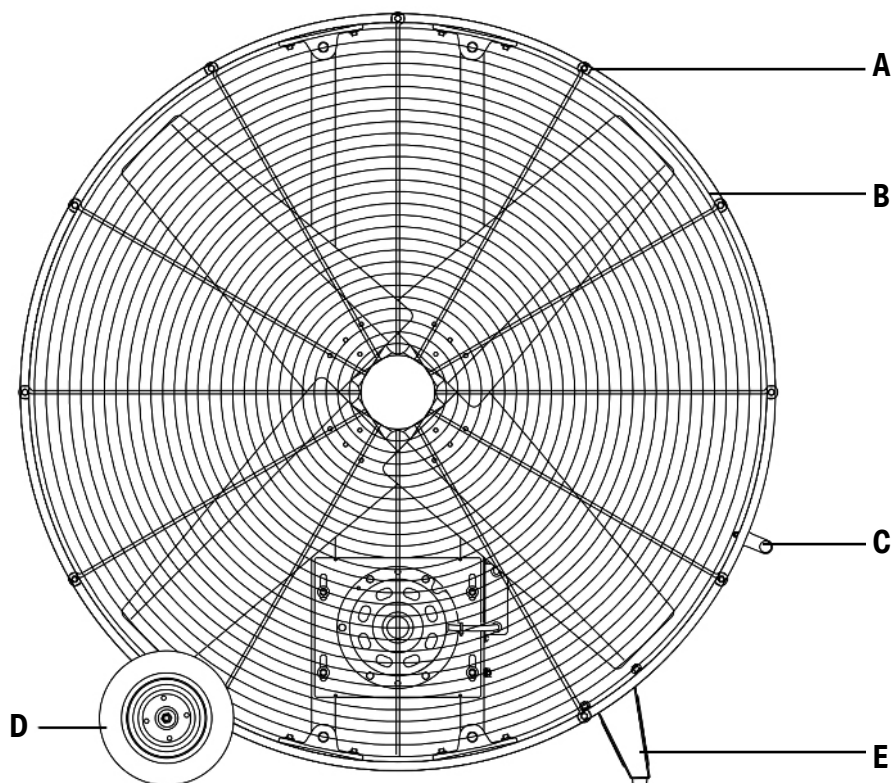


PACKAGE INCLUDES

 1. Fan Body x 1
2. Wheels x 2
3. Screws x 2
4. Axle x 1

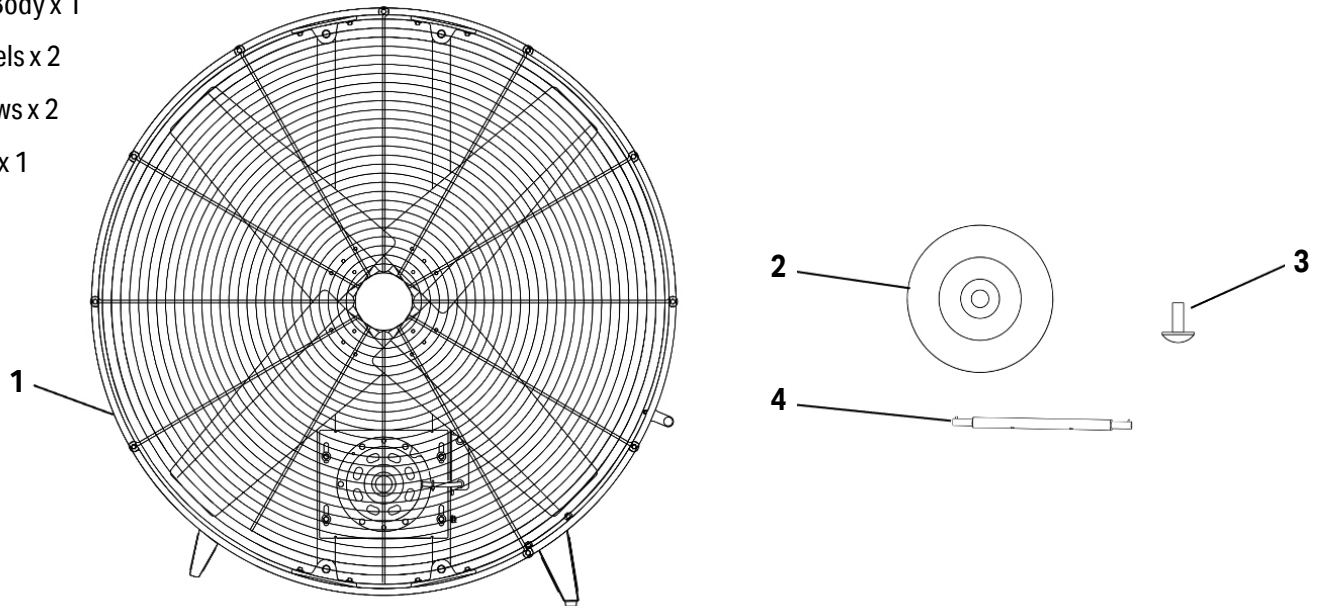

ASSEMBLY INSTRUCTIONS

 
1. Insert axle shaft through the frame. Align the holes in the frame to the holes in the axle. Secure screws with a screw driver as shown.
2. Press the spring pin on the wheel stem and gently push it into the corresponding hole on axle.

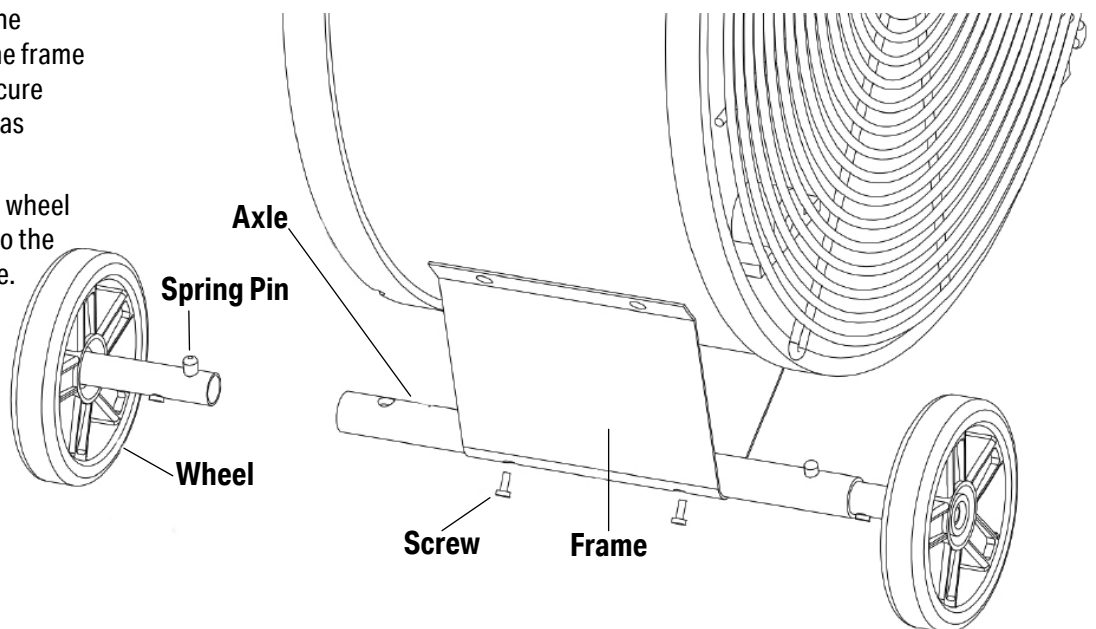

OPERATION & CARE

OPERATION INSTRUCTIONS

 1. Plug the power cord into 120V the volt AC wall outlet.
2. You can press the rocker switch to select low (I) / high speed (II)

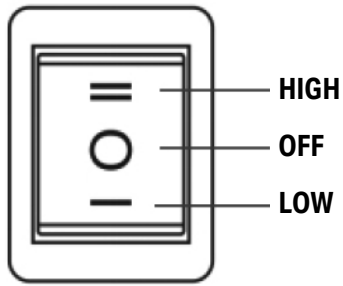

STORAGE & MAINTENANCE GUIDELINES

1. Turn the control OFF and unplug the fan before cleaning.
2. Use only a soft damp cloth to clean the fan.
3. Do not place the fan in water and never allow water to drip into the Motor Housing.
4. Do not use gasoline, paint thinner or other chemicals to clean the fan.
5. To clean the fan blade, remove the front grill and wipe the blade and grills.
6. Store the fan in its original box or cover the fan to protect it from dust.
7. Store it in a cool and dry place.

TROUBLESHOOTING

ISSUE	POSSIBLE CAUSE	RECOMMENDED SOLUTION
Fan not turning on	Power cord not plugged in securely	Ensure the power cord is fully inserted into a working outlet.
	Circuit breaker has tripped or fuse blown	1. Check your circuit breaker panel for a tripped breaker.
		2. Reset the breaker, or replace the fuse if blown.
	Fan switch not in the "On" position	Turn the fan speed control switch to the "On" position or desired speed.
	Faulty power outlet	Test the outlet with another device (e.g., a lamp) to ensure it's functioning. If the outlet is faulty, use another outlet.
	Motor issue	If the fan doesn't turn on after checking the power supply, unplug the fan and contact customer service.
Unusual noise during operation	Loose screws or parts	1. Turn off and unplug the fan.
		2. Inspect all screws on the housing and blades.
		3. Tighten any loose screws using a screwdriver.
	Fan blades are unbalanced	1. Turn off and unplug the fan.
		2. Inspect each blade for bends or damage.
		3. Remove any objects or debris obstructing the blades.
	Fan placed on an uneven surface	1. Ensure the fan is placed on a stable, level surface.
		2. If necessary, move the fan to a different location.
	Worn or loose belt	Contact customer service for further assistance or a belt replacement if necessary.
Fan vibrating excessively	Fan placed on an uneven surface	1. Ensure the fan is placed on a stable, level surface.
		2. If necessary, move the fan to a different location.
	Loose fan blade	1. Turn off and unplug the fan.
		2. Check if the fan blades are securely attached and tighten any loose screws.
Fan overheating	Dust or debris buildup in motor vents	1. Turn off and unplug the fan.
		2. Clean the motor vents using a soft brush to remove dust.
		3. Wipe down the fan blades and housing with a dry cloth.
	Prolonged use in a poorly ventilated space	1. Turn off the fan and allow it to cool down.
		2. Ensure it is operating in a well-ventilated area.
	Electrical issue	3. If the fan continues to overheat, unplug it and contact customer service for further assistance.
Reduced airflow	Dirty or obstructed fan blades	1. Turn off and unplug the fan.
		2. Clean the blades with a soft, dry cloth to remove dirt or debris.
	Worn or slipping belt	Contact customer service for further assistance or a belt replacement if necessary.



4560 West 160th Street
Cleveland, OH 44135

833-950-1185 | support@visionairproducts.com | www.visionairproducts.com