

nickelodeon.



## Skidoo Into ABCs Book



### Parents' Guide

 
This guide contains important information.  
Please keep it for future reference.

91-003823-000 US CA

## INTRODUCTION

Thank you for purchasing the *Blue's Clues & You!*<sup>TM</sup> Skidoo Into ABCs Book.

This interactive learning toy helps teach letters and letter sounds with Blue and her friends from *Blue's Clues & You!*<sup>TM</sup>

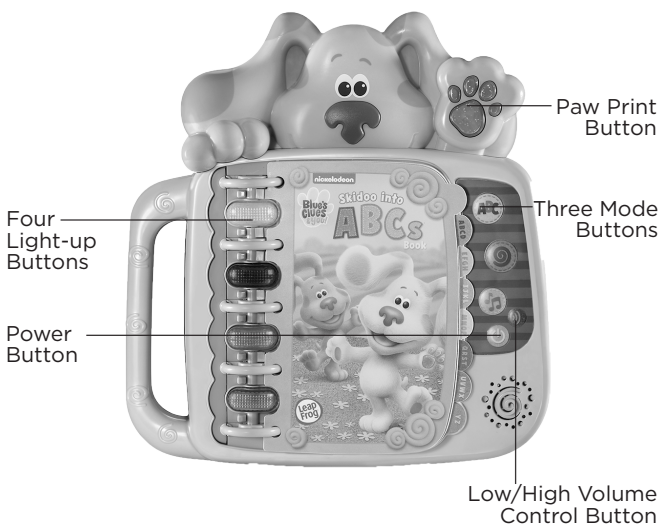

## INCLUDED IN THIS PACKAGE

*Blue's Clues & You!*<sup>TM</sup> Skidoo Into ABCs Book

- Parents' guide

### **WARNING:**

All packing materials, such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws not part of this toy, and should be discarded for your child's safety.

### **NOTE:**

Please keep this parents' guide as it contains important information.

### **ATTENTION :**

 
Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

### **NOTE :**

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

### **Unlock the Packaging Locks:**

- ① Turn the packaging lock counterclockwise several times.
- ② Pull out the packaging lock and discard.

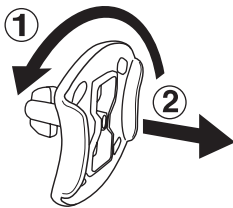




# GETTING STARTED

## Battery Removal and Installation

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit, use a screwdriver to loosen the screw and open the battery box.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.

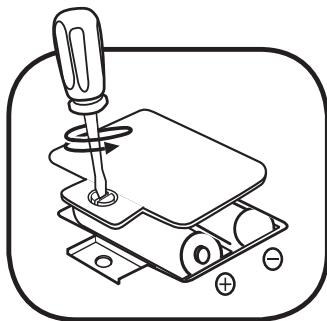



## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc), or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## MISE EN GARDE

- Utiliser des piles alcalines neuves pour des performances maximales.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mélanger différents types de piles ou d'accumulateurs, ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas utiliser des piles ou des accumulateurs endommagés.
- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Enlever les piles ou les accumulateurs usagés du jouet.
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Ne les jeter ni au feu ni dans la nature.
- Ne pas tenter de recharger des piles non rechargeables.
- Enlever les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.

## PRODUCT FEATURES

### 1. Power Button

To turn the unit **ON**, press the **Power Button**. To turn the unit **OFF**, press the **Power Button**.



### 2. Low/High Volume Control Button

Press the **Low/High Volume Control Button** to raise or lower the volume.



### 3. Automatic Shut-Off

To preserve battery life, the *Blue's Clues & You!*<sup>TM</sup> Skidoo Into ABCs Book will automatically power down after approximately 60 seconds without input. The unit can be turned on again by pressing the **Power Button**.



# ACTIVITIES

 
## 1. Mode Buttons

Press one of the **Three Mode Buttons** to select Letters, Skidoo or Music mode.




## 2. Light-Up Buttons

Press the **Four Light-Up Buttons** to hear letters, letter sounds and music. The lights will flash with the sounds.

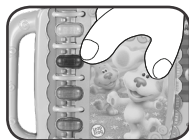

## 4. Paw Print Button

 Press the **Paw Print Button** to play a search-and- find game or play a song.

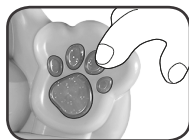

## ABC SONG

A B C D E F G,  
H I J K L M N O,  
Then comes P,  
Q R S T U V,  
W X Y and Z,  
Now I know my ABCs,  
Next time won't you sing with me.

## SONG LYRICS

Learning is so fun to do,  
Numbers, letters, colors, clues.  
Come on, let's go figure it out,  
With Blue and you!



## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep it out of direct sunlight and away from direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes. Then, replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

### IMPORTANT NOTE:

If the problem persists, please call our Consumer Services Department at **1-800-701-5327** in the U.S. or email [support@leapfrog.com](mailto:support@leapfrog.com). Creating and developing LeapFrog® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.





## Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **off** and back **on**, to remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

### **NOTE:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **CAUTION:**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Impact de l'environnement

Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

### Supplier's Declaration of Conformity

Trade Name:	LeapFrog®
Model:	6106
Product Name:	Blue's Clues & You!™ Skidoo Into ABCs Book
Responsible Party:	LeapFrog Enterprises, Inc.
Address:	6401 Hollis Street, Suite 100, Emeryville, CA 94608
Website:	leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

***CAN ICES-3 (B)/NMB-3(B)***





***Visit our website for more  
information about our products,  
downloads, resources and more.***

***leapfrog.com***

***Read our complete warranty policy online  
at [leapfrog.com/warranty](http://leapfrog.com/warranty)***

© 2020 Viacom International Inc. All Rights Reserved. Nickelodeon, Blue's Clues & You! and all related titles, logos and characters are trademarks of Viacom International Inc. LeapFrog Enterprises, Inc., A subsidiary of VTech Holdings Limited. TM & © 2020 LeapFrog Enterprises, Inc. All rights reserved. 91-003823-000 US CA