

Thank you for purchasing Leick Furniture products. Contact customer service for comments or concerns.


Sheboygan, WI

920-451-4060

info@leickhome.com

www.leickhome.com


# Assembly Instructions, #20037

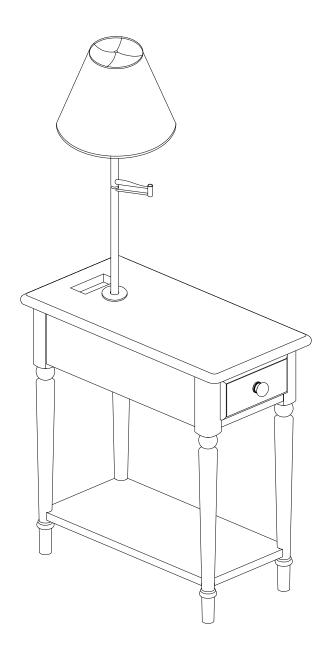

A: Allen Wrench	
B: Cap	9
C: (4) Screws	<b>(4)</b>


### Step 1

Place the table upside down on a soft surface, take out the drawer and unfasten all 8 bolts on four legs.

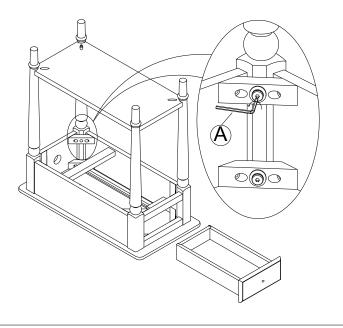


## Step 2

Put the table side up as per following sketch, then insert the shelf on the leg notches. Fasten all legs with bolts.

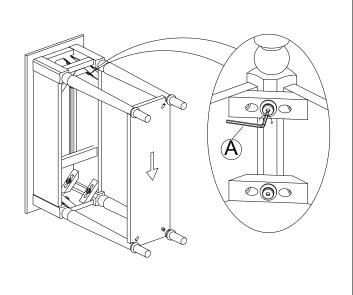


## Step 3

Put the table upside down and fasten shelf with four screws.

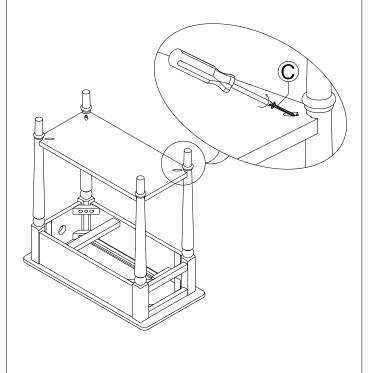


Step 4

Pull on cord from bottom and slide threaded tube up to swing arm. Turn threaded tube in about three rotations and lock down with nut and wrench.

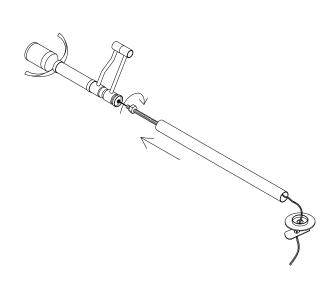


Step 5

Slide plastic insulator up into bottom of threaded tube. Then slide round flange and nut up to post and tighten.

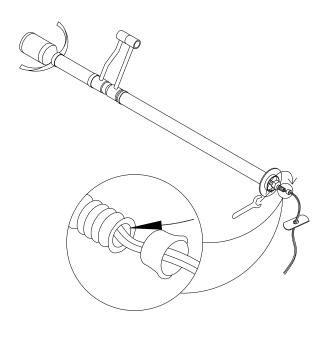


## Step 6

Pull the plug / cord and metal bracket through hole in table top.

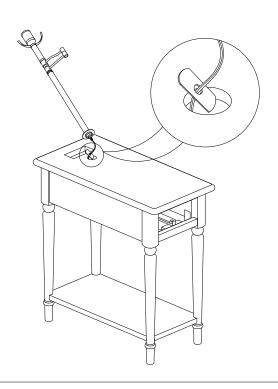


## Step 7

Lay table on it's side. Turn the mounting bracket onto the threaded tube and tighten.

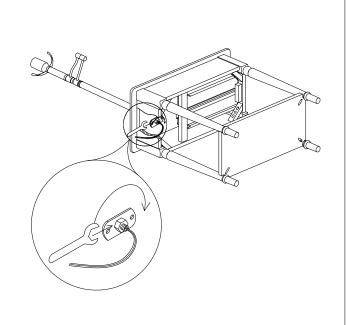


Step 8

Place the harp into the fixture and install shade.

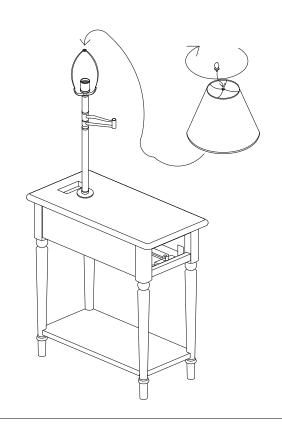

# Step 9

Pull cord through hole in back of table and insert grommet into hole.

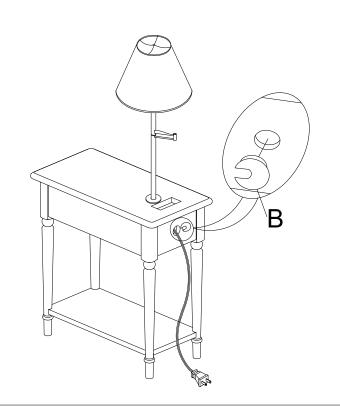

# Step 10

Place the table right side up and insert the drawer. Fasten the knob on outside of drawer front.

