



## IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

### READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. Do not use these products outdoors unless marked suitable for outdoor use.
2. When products are used outdoor applications, connect the product to Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
3. Do not mount or place near gas or electric heaters, fireplace, candles, or other similar sources of heat.
4. Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails. Install only using the mounting means provided.
5. Do not let lamps rest on the supply cord or on any wires.
6. Do not hang objects from the cord, wire, or light string.
7. Do not use this product for other than its intended use.
8. Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
9. Do not cover the product with cloth, paper or any material not part of the product when in use.
10. Read and follow all instructions that are on the product or provided with the product.

## SAVE THESE INSTRUCTIONS

### CAUTION:

1. To reduce the risk of fire use only type S lamps, 11 Watts maximum
2. To reduce the risk of fire do not deliberately reposition either lampholder contact.



## MODEL NUMBER: 72034

The lighting string is rated at 120V, 60Hz, 110 Watts. It is provided with 10 lampholders and 11 Watt, S Type lamps.

Connecting multiple sets:  
Add the wattage of each light string together for a total of 1200 Watts or less.

### DO NOT EXCEED 1200 WATTS

When connecting multiple sets protect connection(s) from direct exposure to rain and water. Do not allow connection(s) to become wet.

### CAUTION: RISK OF ELECTRIC SHOCK,

Do not use with extension cord near water or where water may accumulate. Keep lamps at least 16 feet (4.88m) from pools and spas. Keep plugs and receptacles dry. Do not submerge.

Disconnect power at source prior to wiring, replacing light bulbs or servicing in any way. The light string kits are supplied with an attached three prong plug that will only fit into a three prong outlet.

**Do not alter the plug.**

### REPLACING LIGHT BULBS


**WARNING – RISK OF ELECTRIC SHOCK!!** Disconnect power at source prior to replacing light bulbs.

For outdoor String Lights, do NOT replace light bulbs during rain or when wet.


1. Replace light bulbs only during dry and calm weather conditions.
2. Unscrew existing bulbs by lightly holding the socket in one hand and twisting the bulb counterclockwise. Bulbs may be tight in the sockets. This is normal to prevent moisture from getting into socket.
3. Replace with medium base light bulbs. Screw bulb into socket clockwise until top of socket forms a tight seal around the light bulb and bulb makes solid contact with socket. Suitable for Incandescent, CFL, or LED light bulbs.

### INSTALLATION METHODS

#### 1. Using a Guide Wire with S-hooks or zip ties (not included)

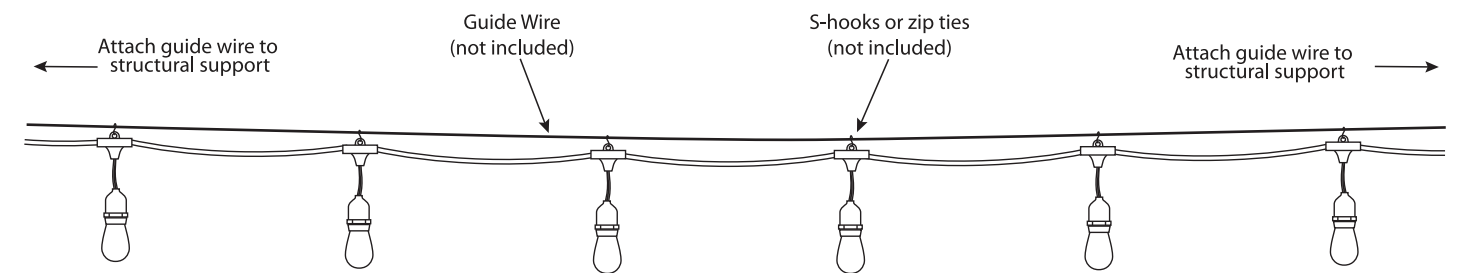

#### 2. Attached to a Structure

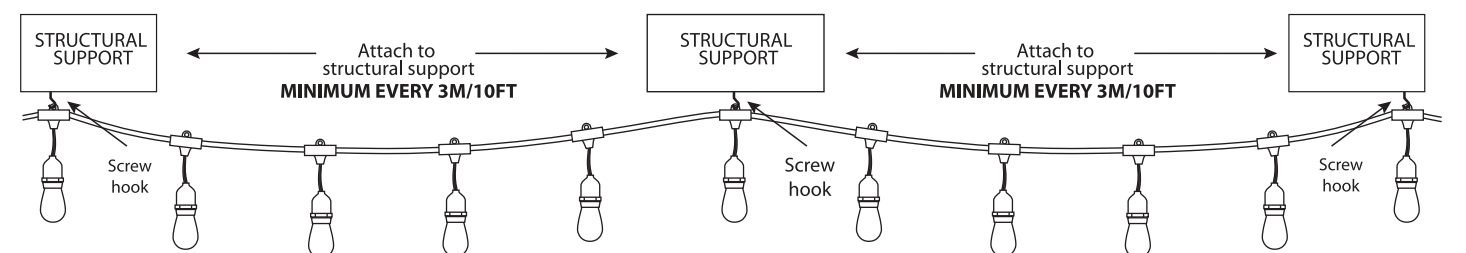

DRAWINGS NOT TO SCALE

### CONNECTING MULTIPLE SETS

MAXIMUM WATTAGE RANGE	NUMBER OF LIGHT STRINGS
7.5 WATTS	16 SETS
10 WATTS	12 SETS
<b>11 WATTS</b>	<b>10 SETS</b>
15 WATTS	8 SETS
20 WATTS	6 SETS
40 WATTS	3 SETS
60 WATTS	2 SETS

### CAUTION: DO NOT EXCEED 1200 WATTS