




bestchoiceproducts

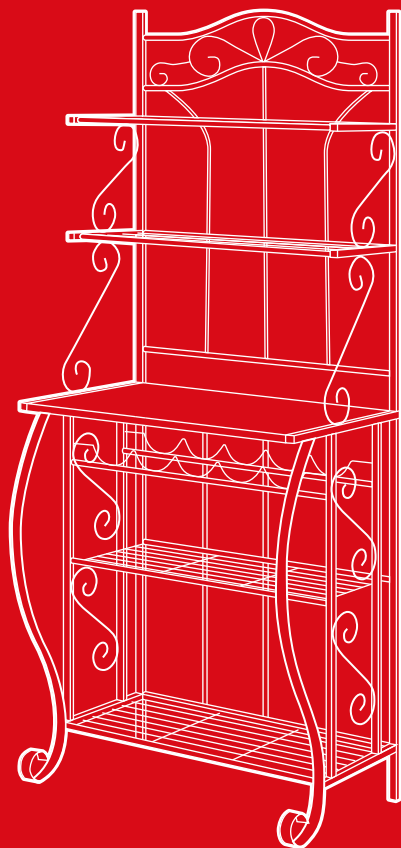

# INSTRUCTION MANUAL

## 5-Tier Metal Bakers Rack

## ! NOTICE

Please retain these instructions for future reference.

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws, and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- If any parts are missing, broken, damaged, or worn, stop using this item until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

## TOOLS REQUIRED



110 LBS  
CAPACITY






1 PERSON  
ASSEMBLY



APPROXIMATELY  
45 MIN.  
ASSEMBLY

## HARDWARE

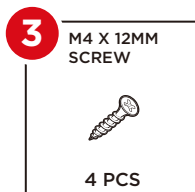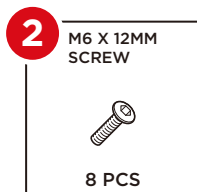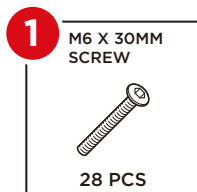

Fasten screws loosely  
during assembly. Do not  
firmly tighten screws until  
item is fully assembled.

[bestchoiceproducts.com](http://bestchoiceproducts.com)

## PARTS

**A**

LEFT SIDE



1 PC

**B**

RIGHT SIDE



1 PC

**C**

 
BACK FRAME



1 PC

**D**


BOTTOM SHELF



1 PC

**E**

 
MIDDLE SHELF



1 PC

**F**

 
TOP SHELF



2 PCS

**G**


WINE RACK

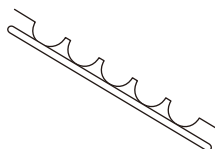

2 PCS

**H**

TOP FRAME

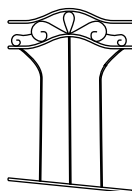

1 PC

**I**

 
TOP SIDE



2 PCS

**J**

TABLETOP




1 PC

## PRODUCT ASSEMBLY


1

Attach the part A left side and part B right side to part C back frame and two part G wine racks with eight part 1 screws.

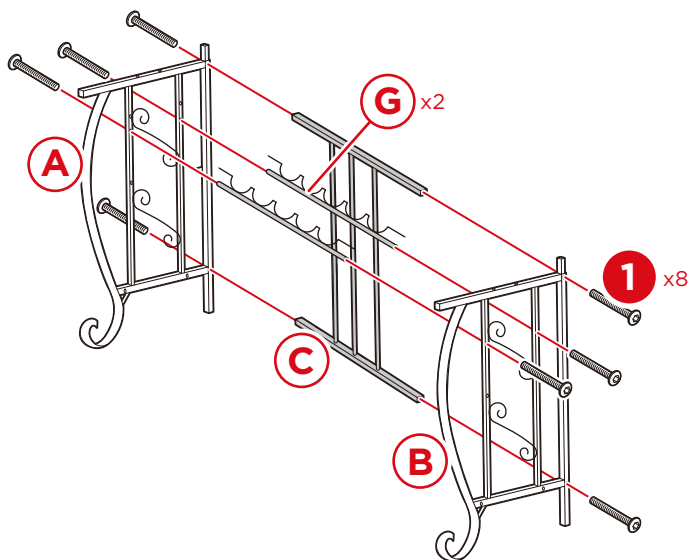

2


Attach the part D bottom shelf with four part 1 screws. Attach the part E middle shelf with two part 1 screws and two part 2 screws.

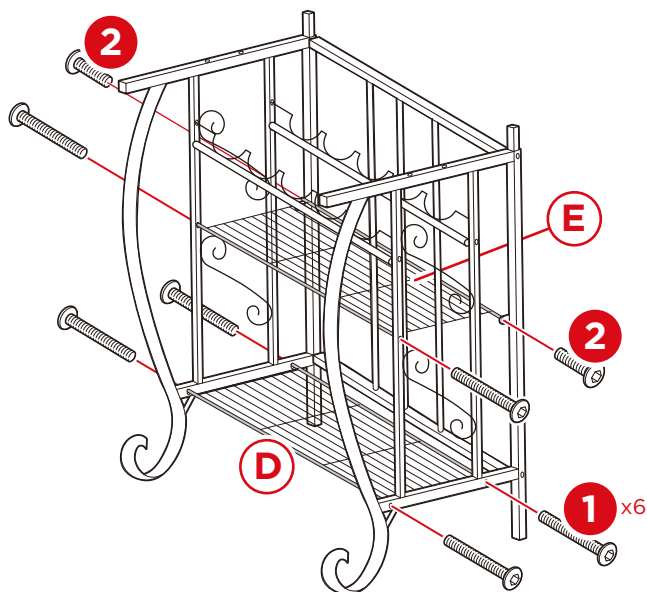

## PRODUCT ASSEMBLY


**3**

Attach the part J tabletop with four part 3 screws.

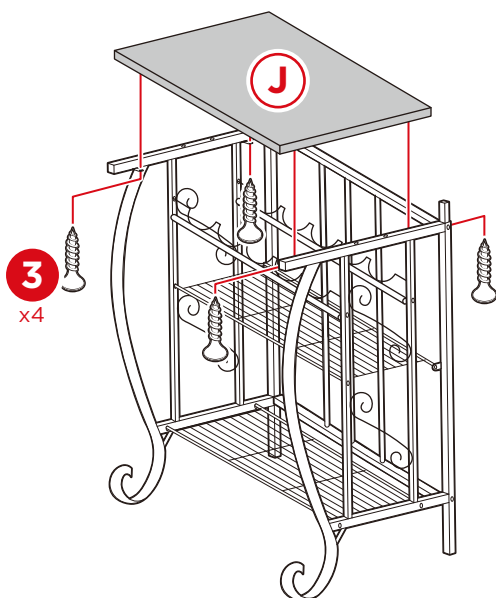

**4**


Attach two part I top sides to part H top frame with six part 1 screws.

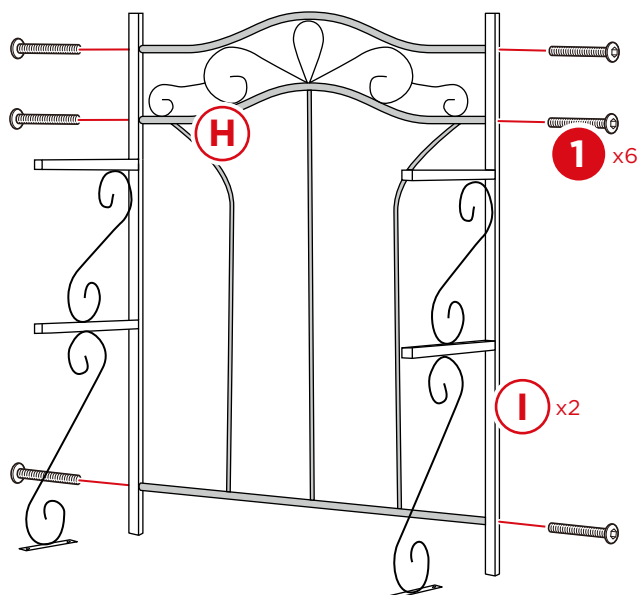

## PRODUCT ASSEMBLY

5


Attach two part F top shelves with eight part 1 screws.

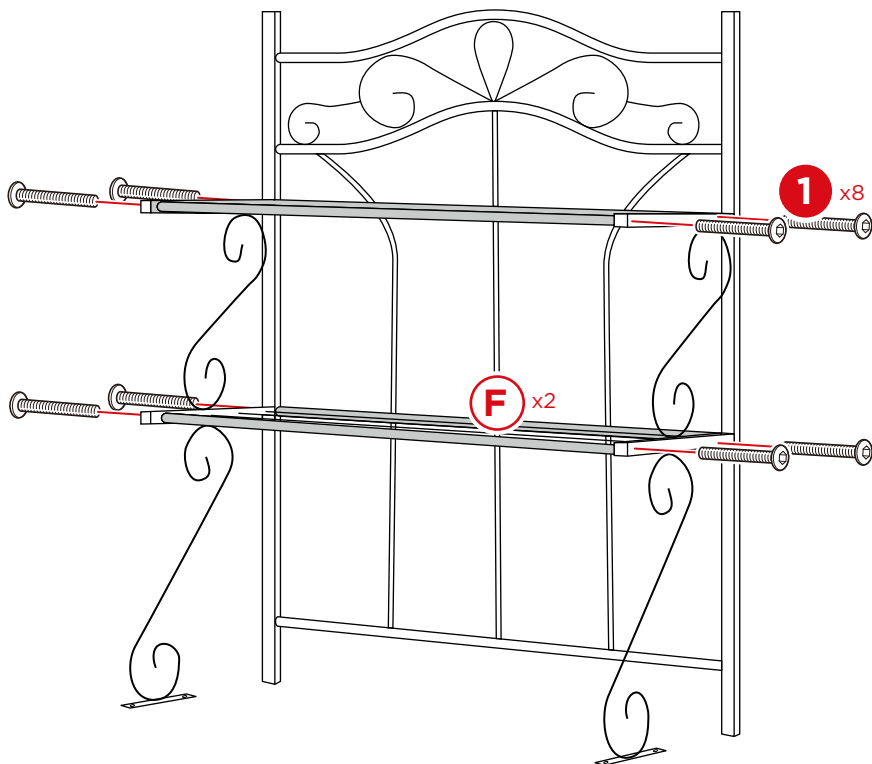

## PRODUCT ASSEMBLY

6

Attach the top assembly to the bottom assembly with six part 2 screws.

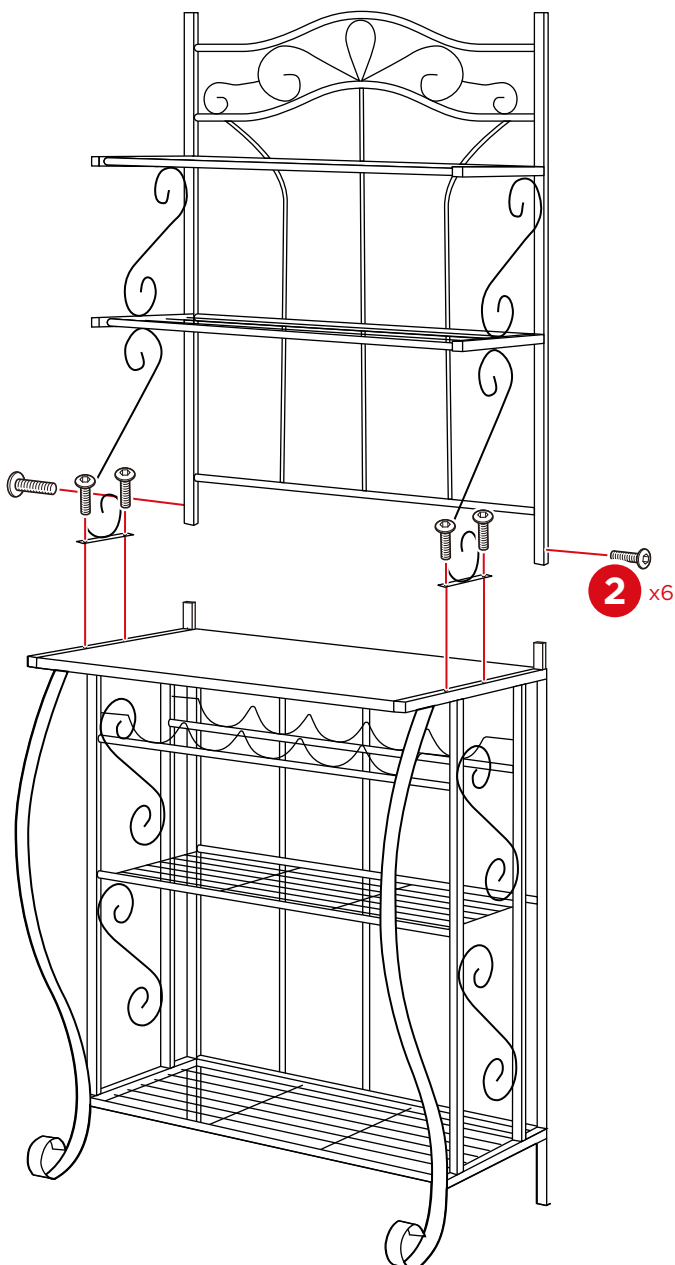



# HELP CENTER



Question about your product? We're here to help. Visit us at:

[help.bestchoiceproducts.com](http://help.bestchoiceproducts.com)



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

## PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.



## WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.