

Item # : TNNB3B

Assembly Instructions




Please visit our website for the most current instructions, assembly tips, to report damage or request parts. www.walkeredison.com


Revised 10/2022

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are wood dowels, screws and bolts.
- V. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.

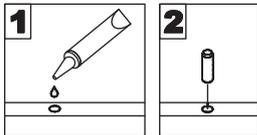


In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.

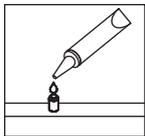

- VI. A Phillips head screwdriver and hammer is required for the assembly of this product.

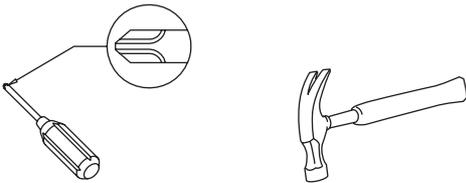

- VII. Power tools should not be used to assemble this product.

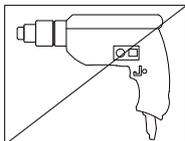


VIII. Maintenance Guide

To maintain long term performance and easy gliding of your solid wood drawers, we recommend applying wax to the wooden guide rails.

1. Bee's wax is recommended or Paraffin wax from a standard candle can be used.
2. Apply the wax by rubbing it on the wooden guide rails where there is wood-on-wood contact when opening and closing the drawer. (Wax should be room temperature, do not melt the wax onto the wood)
3. Wax should be applied every few months for the first year and then only when needed after that to keep the drawers sliding smoothly.

Parts List

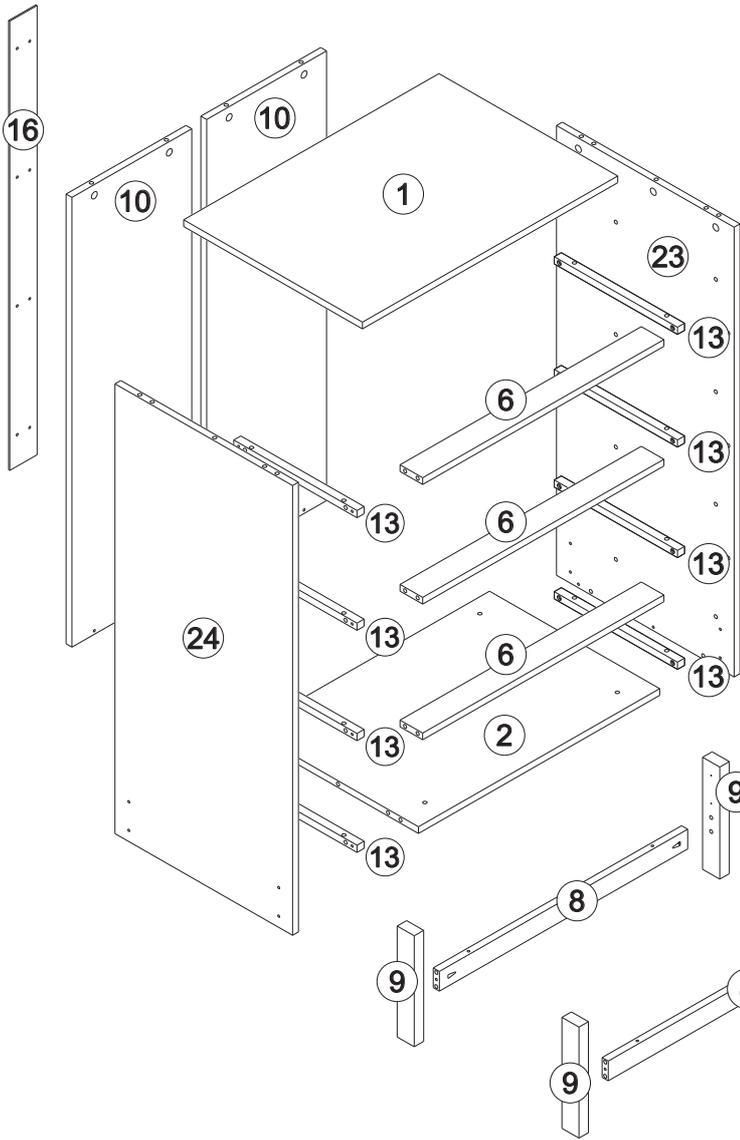

WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!

WARNING!


IN ORDER TO PREVENT OVER TIGHTNING THIS PRODUCT MUST BE USED WITH THE WALL ATTACHMENT DEVICE PROVIDED. Serious or fatal crushing injuries can occur from furniture tipping over. To help prevent this type of furniture tipping over:

- * Use the wall attachment device provided.
- * Do not let children climb or hang on drawers, doors or shelves.
- * Place the heaviest items in the lower drawers or shelves.
- * Do not place TVs or other heavy objects on top of this product, unless it has specifically designed to support them.
- * Never open more than one drawer at a time.

An attachment device is included with your product. However, you will need to secure outside help for your wall type. If in doubt, please consult a qualified professional.

Always ensure the wall to be attached is free from hidden electrical wires, water and pipes.







The side drawer with WARNING LABEL, should be mounted in highest drawer.

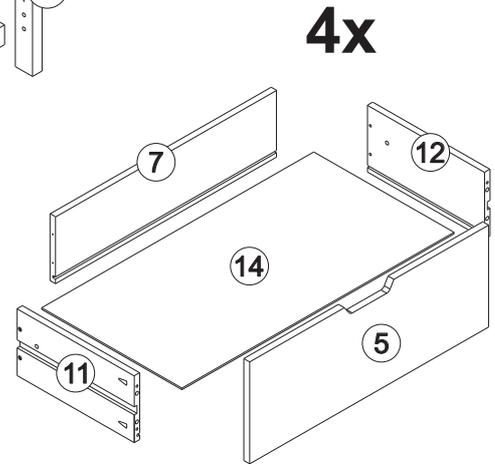


Part#	Description	Qty
1	Top panel	01 pc
2	Base panel	01 pc
5	Drawer front	04 pcs
6	Middle crossbeam	03 pcs
7	Drawer back	04 pcs
8	Bottom crossbeam	02 pcs
9	Leg	04 pcs
10	Back Panel	02 pcs


Part#	Description	Qty
11	Drawer Left Side	04 pcs
12	Drawer Right Side	04 pcs
13	Drawer runner	08 pcs
14	Drawer bottom	04 pcs
16	Back lock	01 pc
23	Right side panel	01 pc
24	Left side panel	01 pc

Hardware List

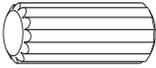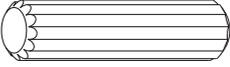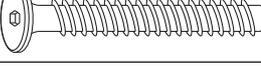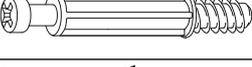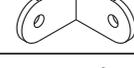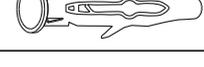A		Ø8*20mm	Wood dowel	16 pcs
B		Ø8*30mm	Wood dowel	54 pcs
C		Ø3,5*12mm	Screw	16 pcs
D		Ø3,5*35mm	Screw	12 pcs
E		Ø4,0*25mm	Screw	16 pcs
F		Ø4,0*30mm	Screw	38 pcs
G		Ø7,0*45mm	Screw	04 pcs
H		Ø7,0*33mm	Cam bolt	22 pcs
I		-	Glue	01 pc
J		Ø15*12mm	Cam lock	22 pcs
K		-	Corner	04 pcs
L		-	Ø6mm	01 pc
M		-	Washer	02 pcs
N		-	Wall anchor	01 pc
O		-	Hex Key	01 pc

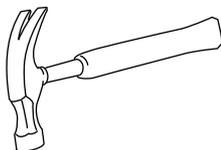

Hammer recommended for assembly
(not included)

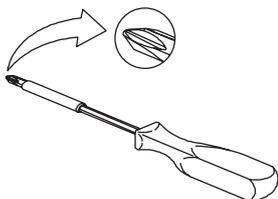


Philips head screwdriver required for assembly
(not included)


*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

Step 1


8x

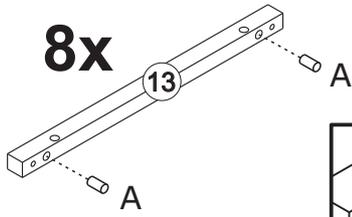


Attention to the
dowel size:
Ø8*20mm

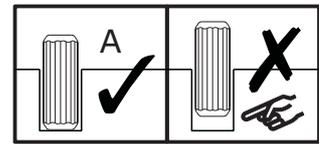


Insert wood dowel
(A) and glue (I) into part (13).

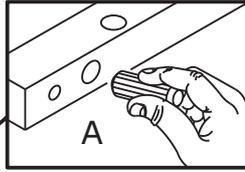

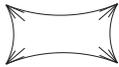
A		Ø8*20mm	16
I			01

Step 2

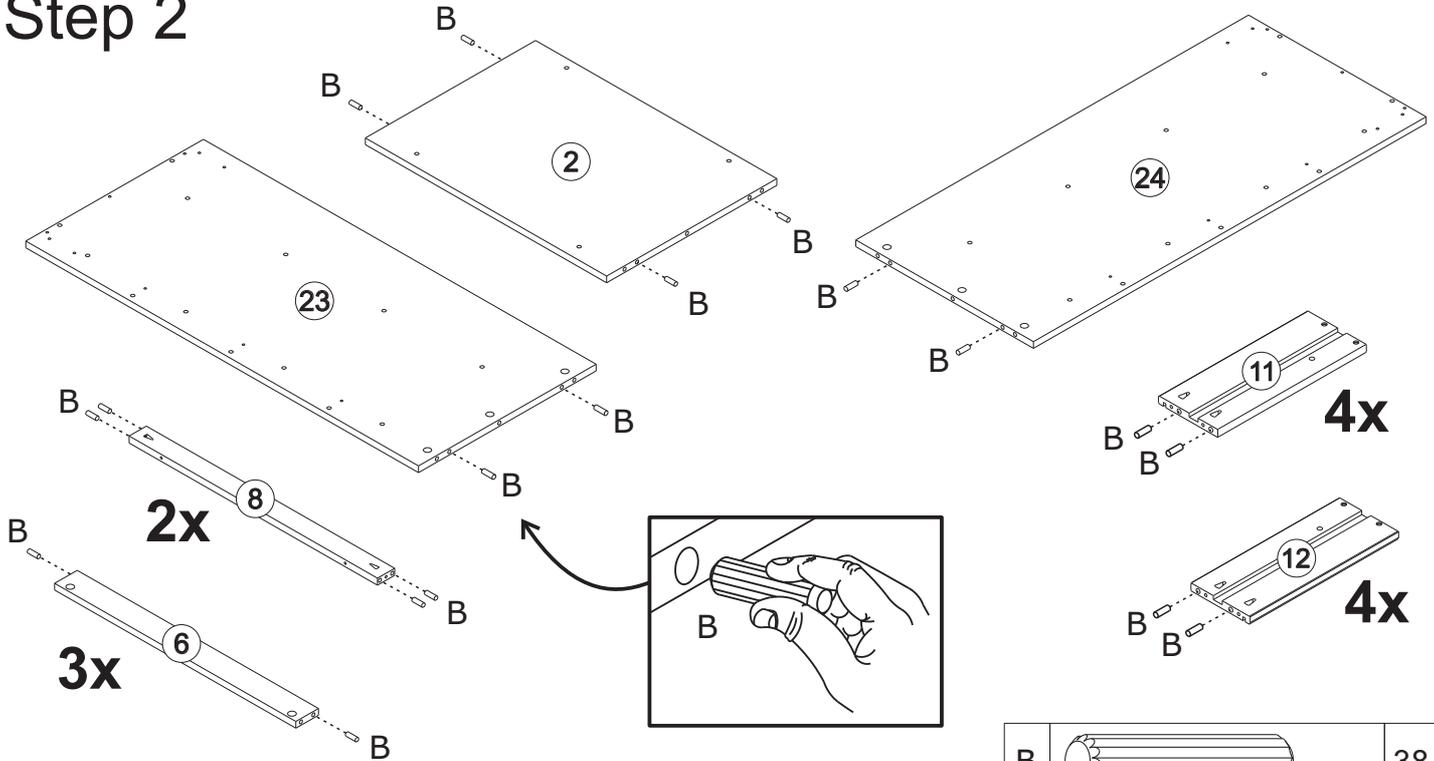


Insert wood dowel (B) and glue (I) into
part (2), (6), (8), (11), (12), (23) and (24).

**Please assemble on
a clean soft surface
to avoid damage.**

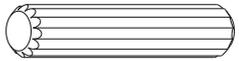B		Ø8*30mm	38
I			01


Step 3

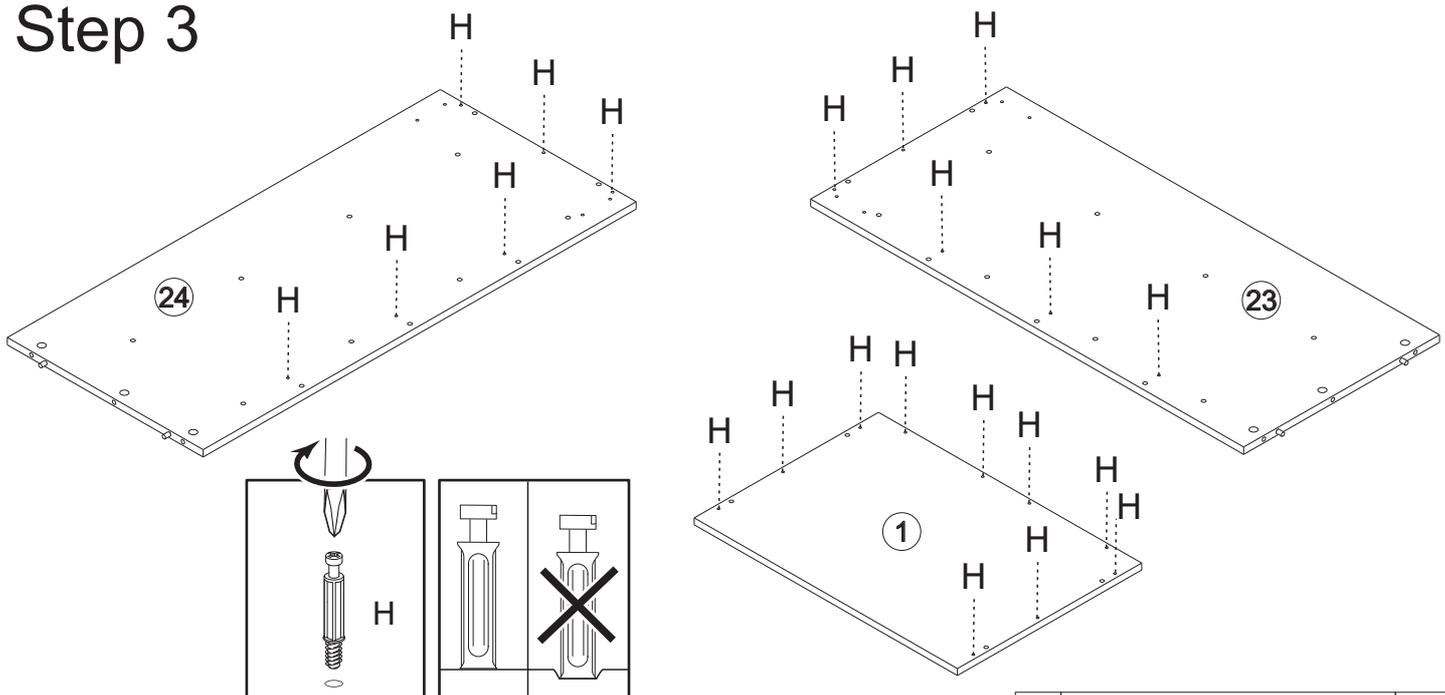


Screw cam bolts (H) into parts (1), (23) and (24) with a screwdriver.

H			22
---	---	--	----



Step 4

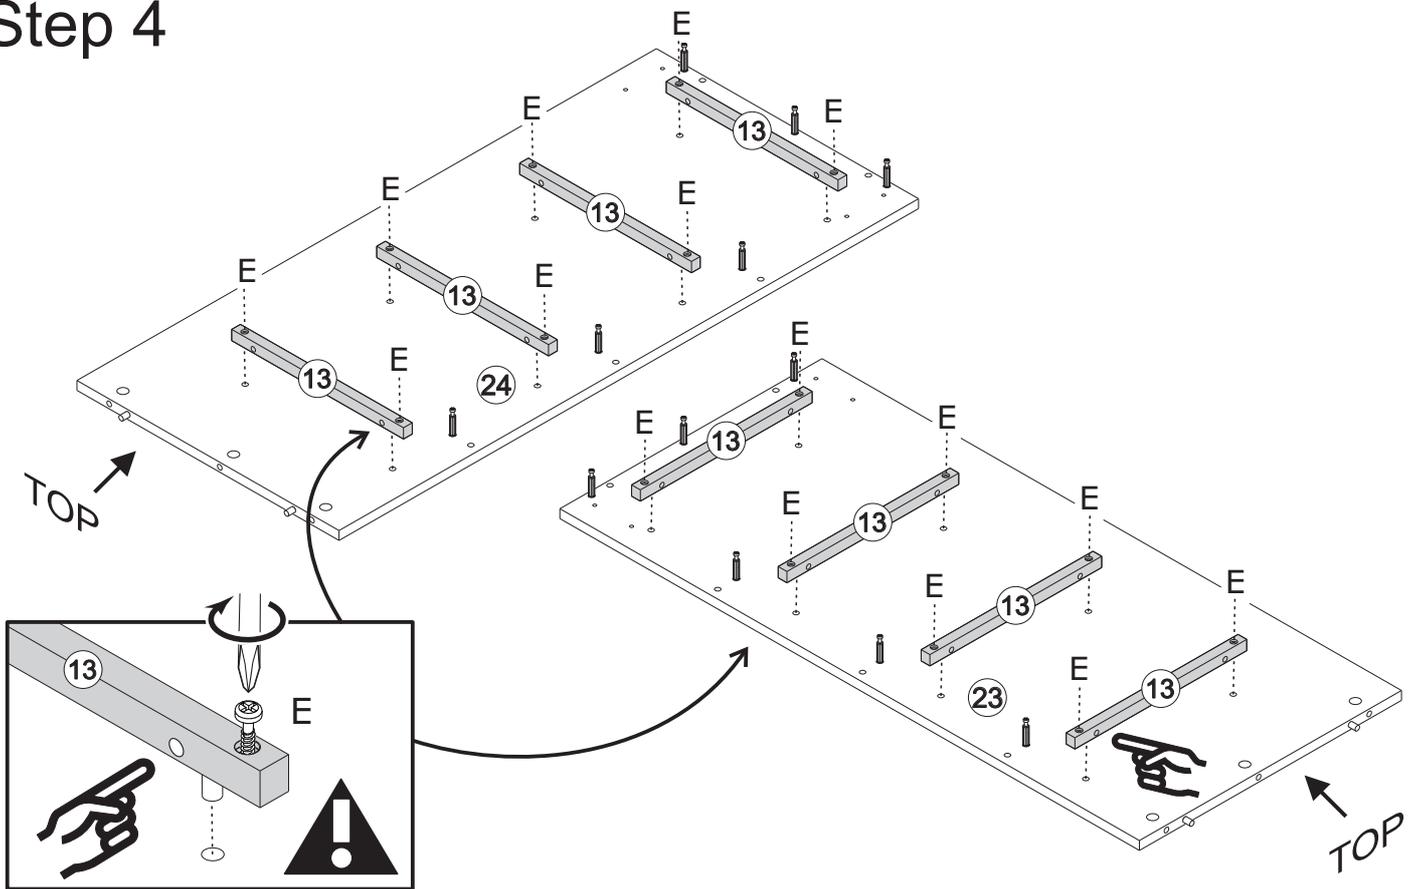


Secure part (13) to part (23) and (24) with screw (E) and a screwdriver.

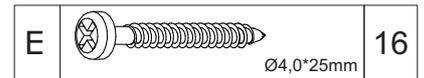


Step 5

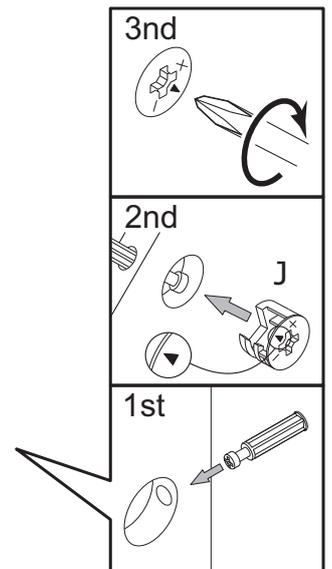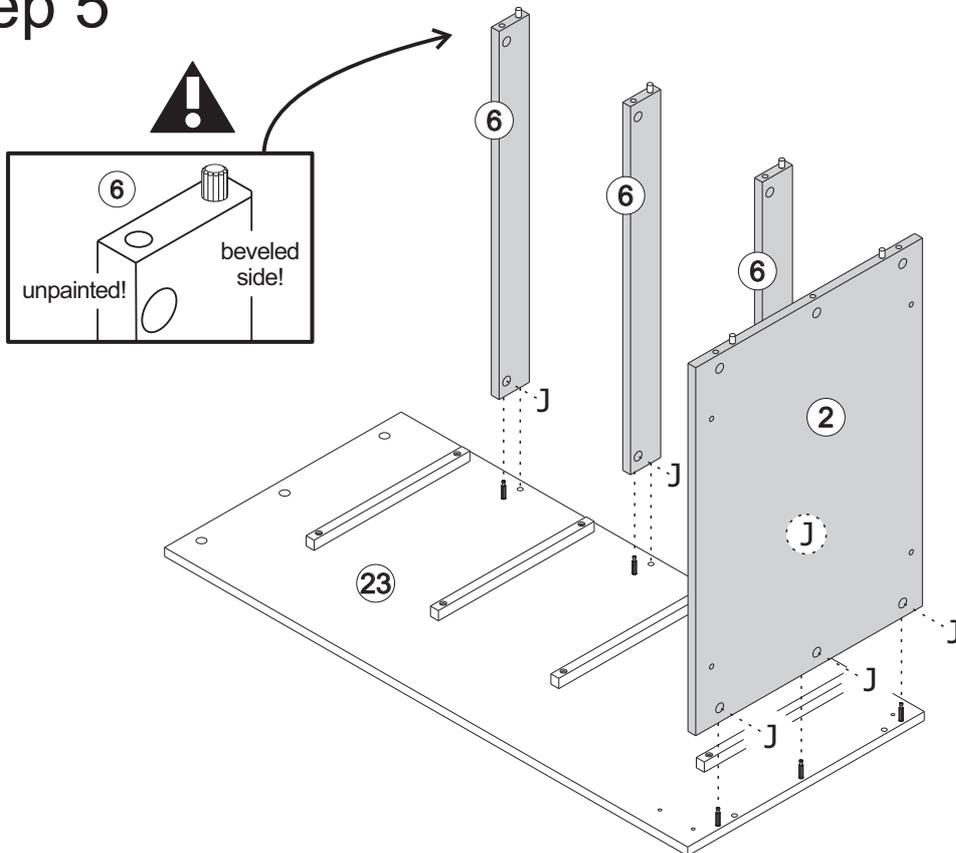

Secure parts (2) and (6) to part (23). Insert cam locks (J) into part (2) (6), and tighten with a screwdriver.

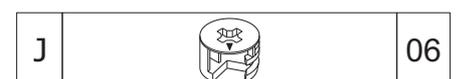


Step 6

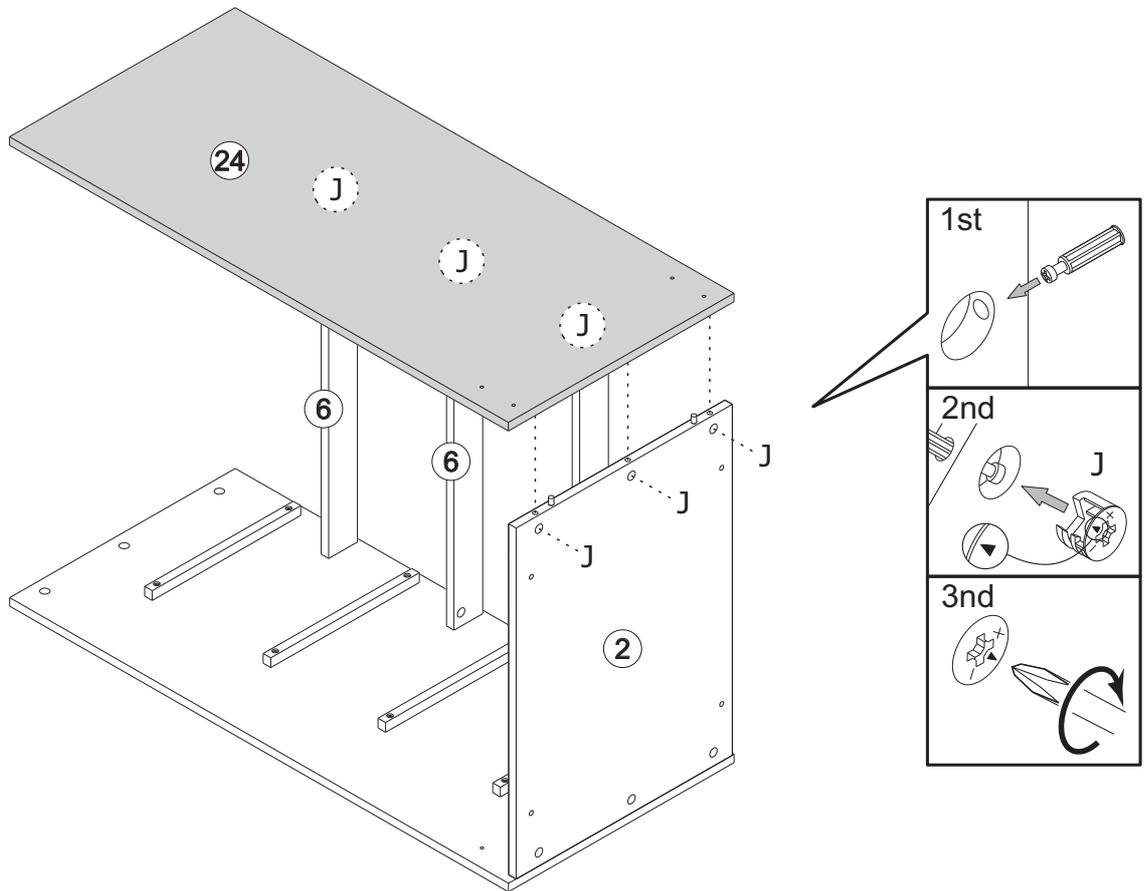

Secure part (24) to part (2) and (6). Insert cam locks (J) into part (2) (6) and tighten with a screwdriver.





Step 7

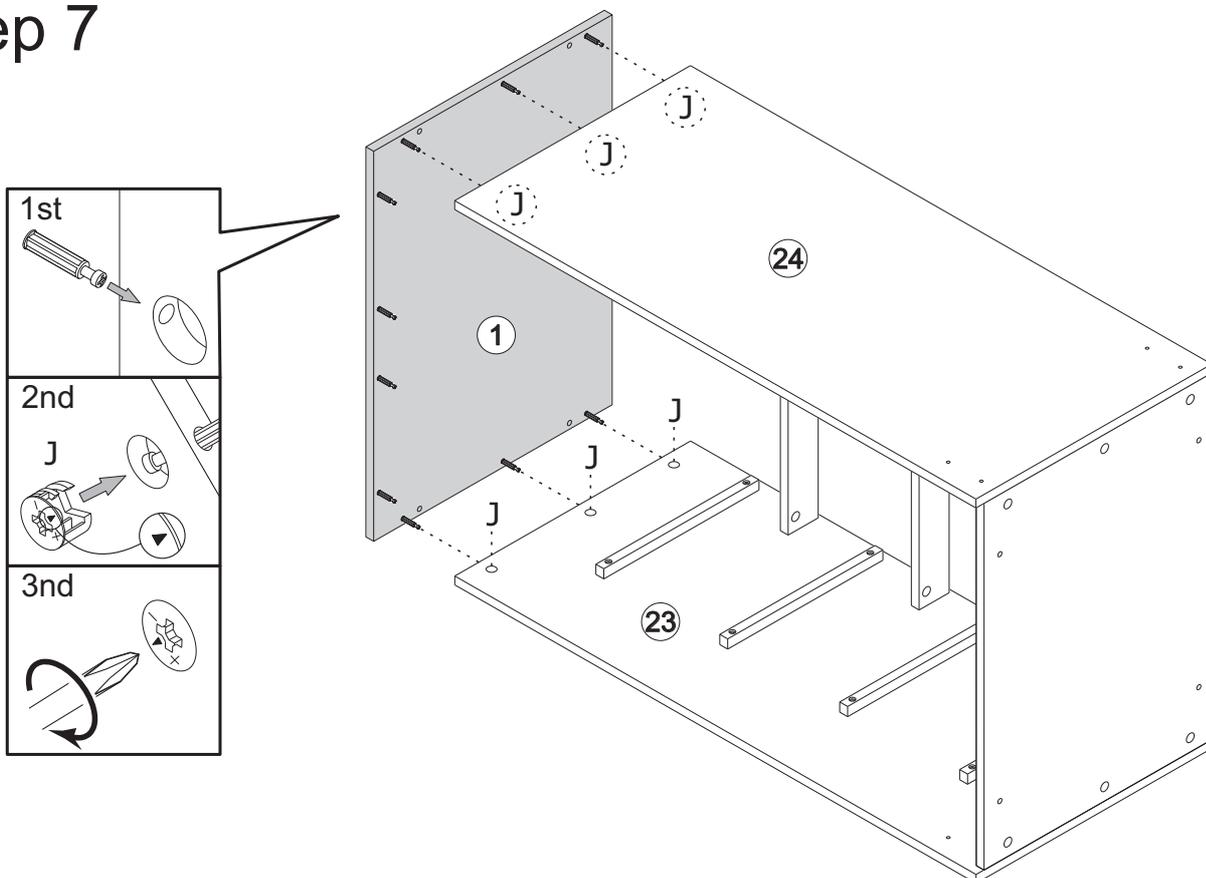

Secure part (1) to parts (23) and (24). Insert cam locks (J) into parts (23) and (24). Tighten with a screwdriver.



Step 8


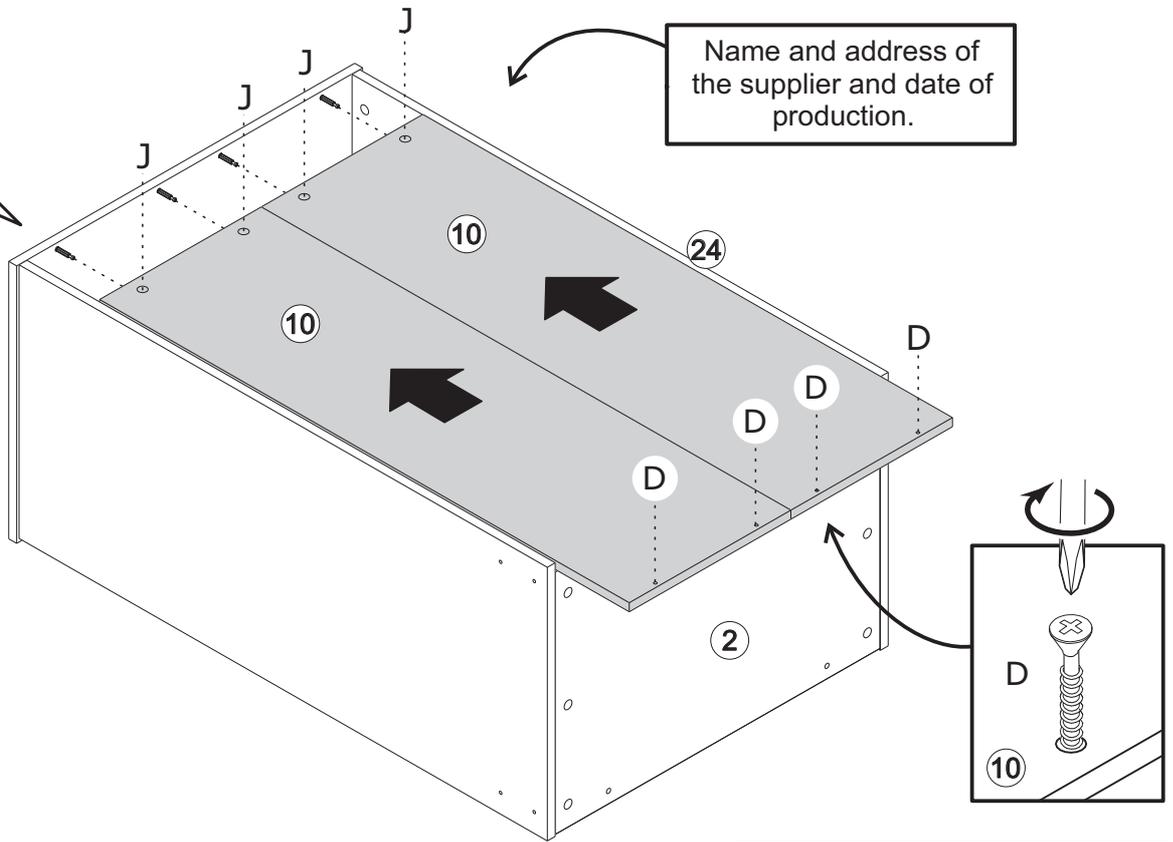
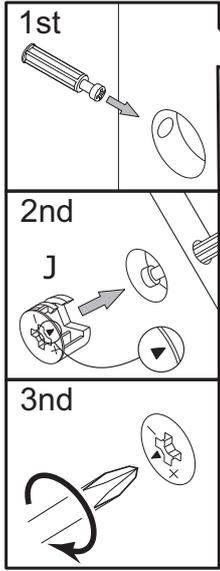


Insert back panel (10) between parts (23) and (24), secure with cam locks (J) after this attach part (10) with part (2) using screw (D) and tighten with a screwdriver.

J		04
D		04

Ø3,5*35mm

Step 9

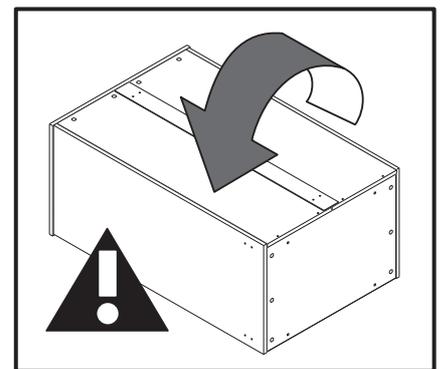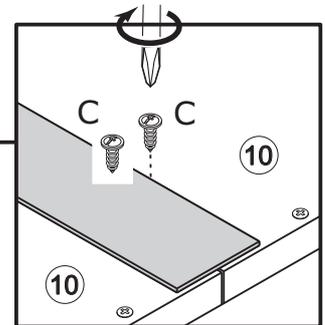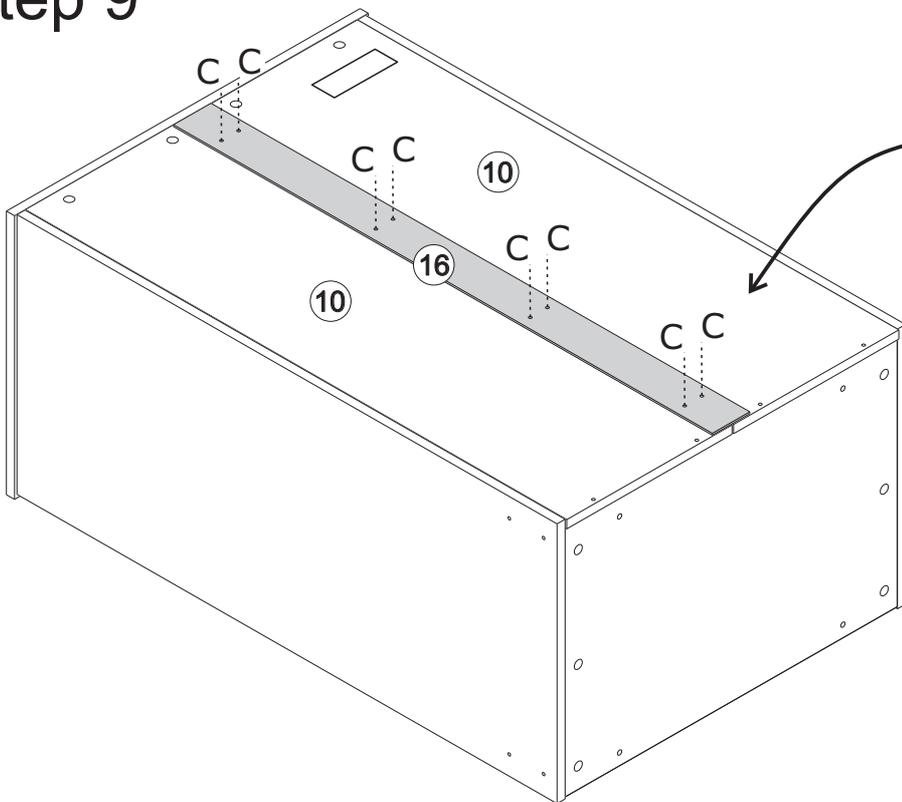


Secure back lock (16) as shown above with screw (C) and screwdriver.


C		08
---	--	----

Ø3,5*12mm


Step 10

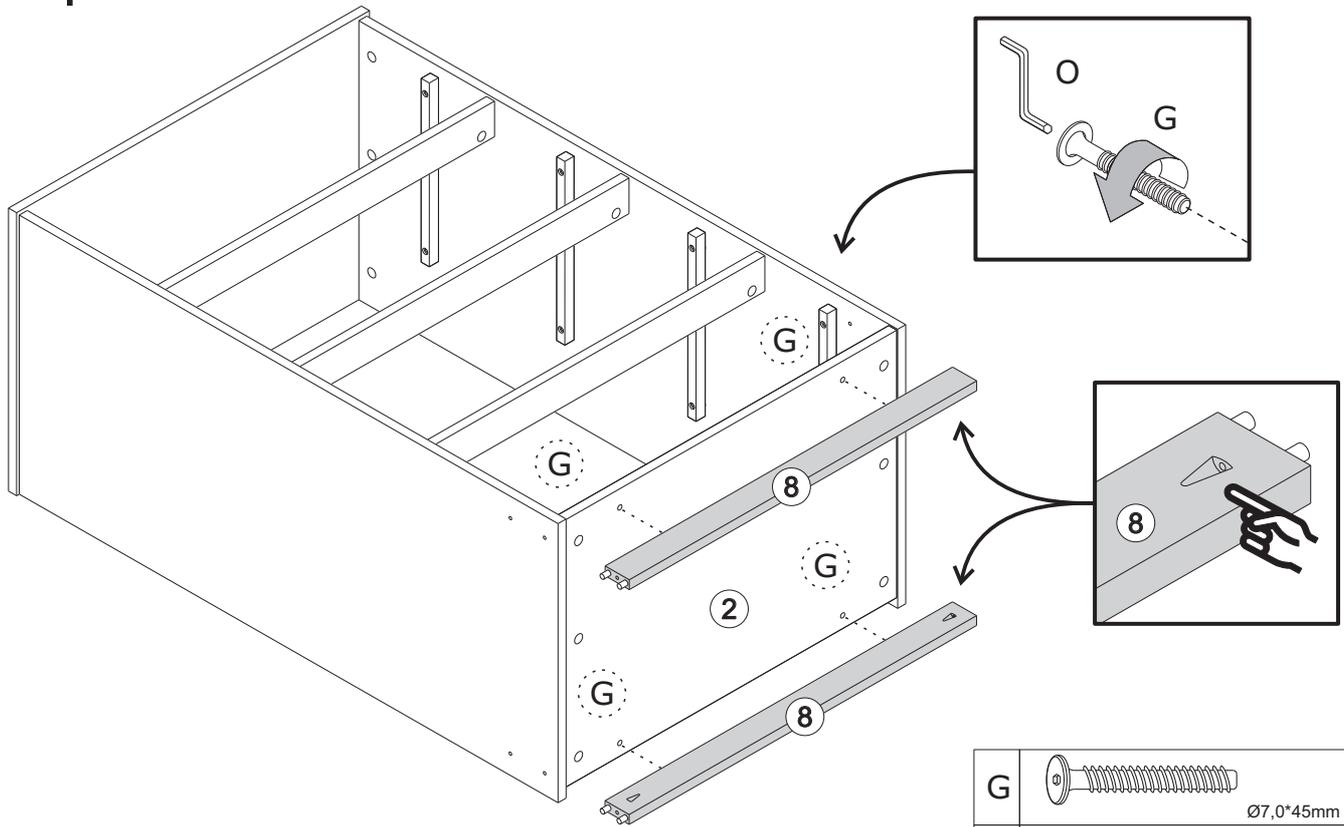


Secure parts (8) to part (2) with screw (G) and hex key (O).

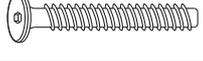G		04
$\varnothing 7,0 \times 45\text{mm}$		
O		01


Step 11

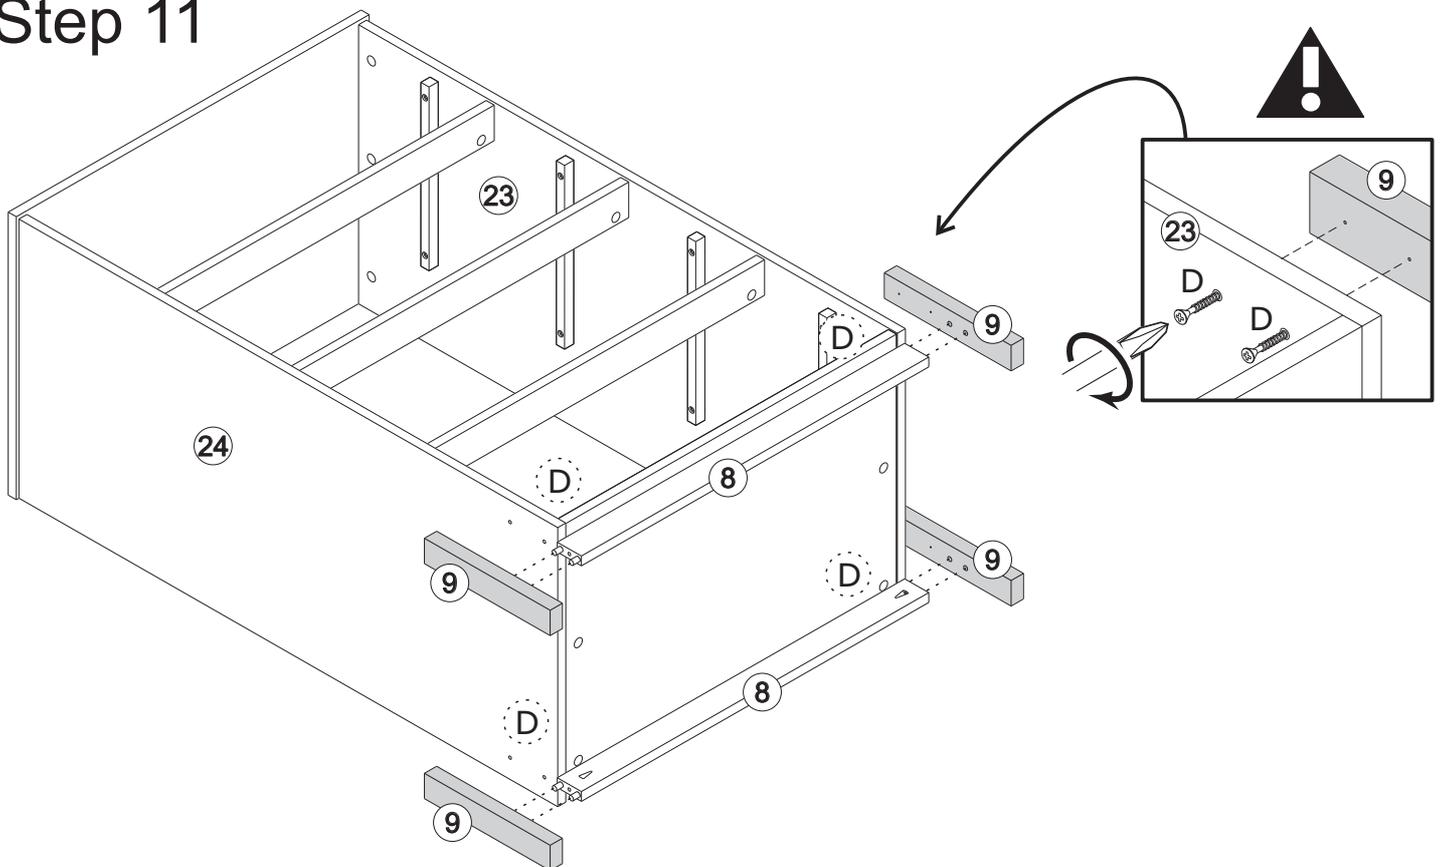


Secure parts (9) x2 to part (23) and parts (8) x2 with screw (D) using the predrilled holes through (23) into parts (9).
Secure parts (9) x2 to part (24) and parts (8) x2 with screw (D) using the predrilled holes through (24) into parts (9)

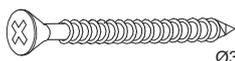D		08
$\varnothing 3,5 \times 35\text{mm}$		


Step 12

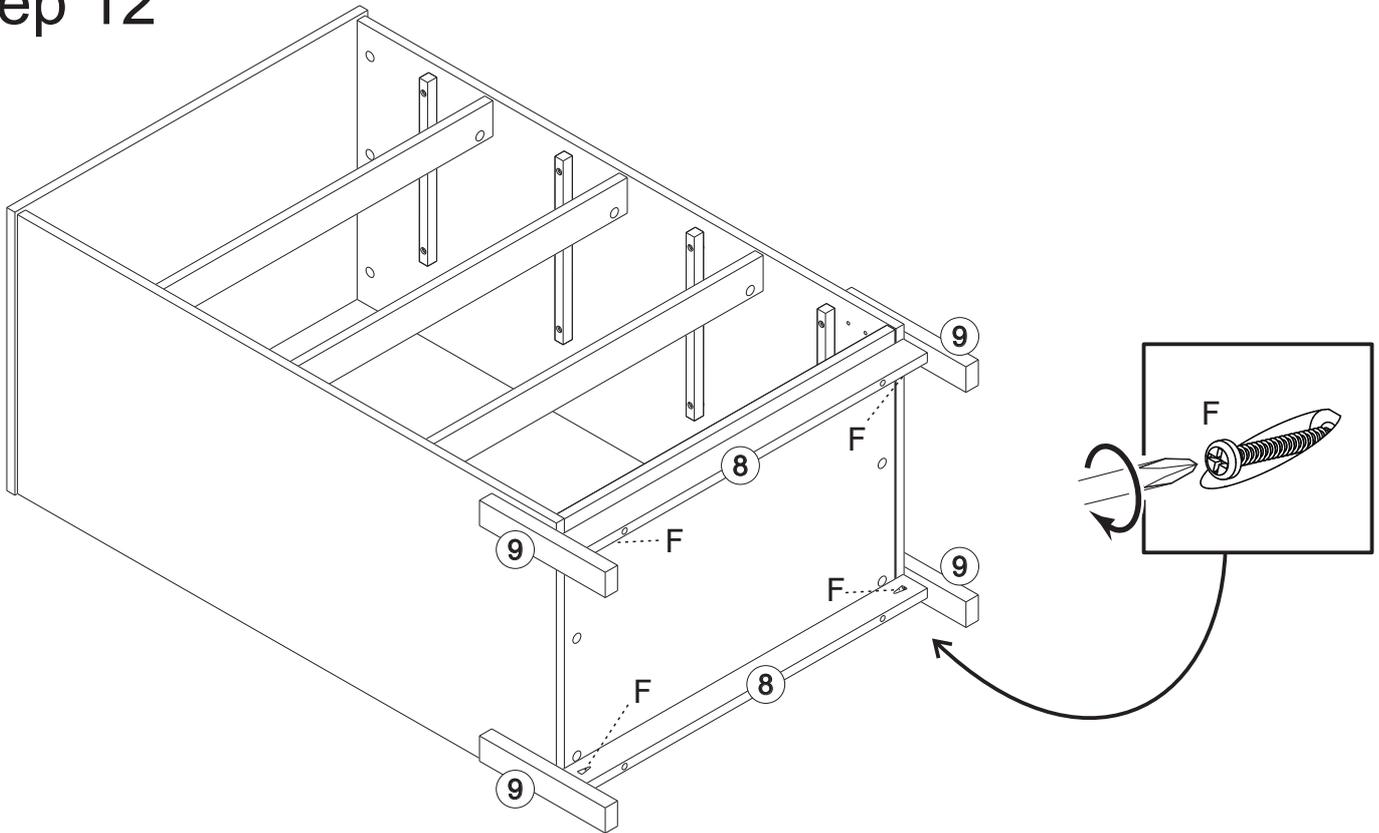

Secure part (9) to part (8) with screw (F) and screwdriver.

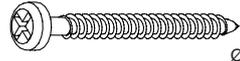F		Ø4,0*30mm	04
---	--	-----------	----



Step 13

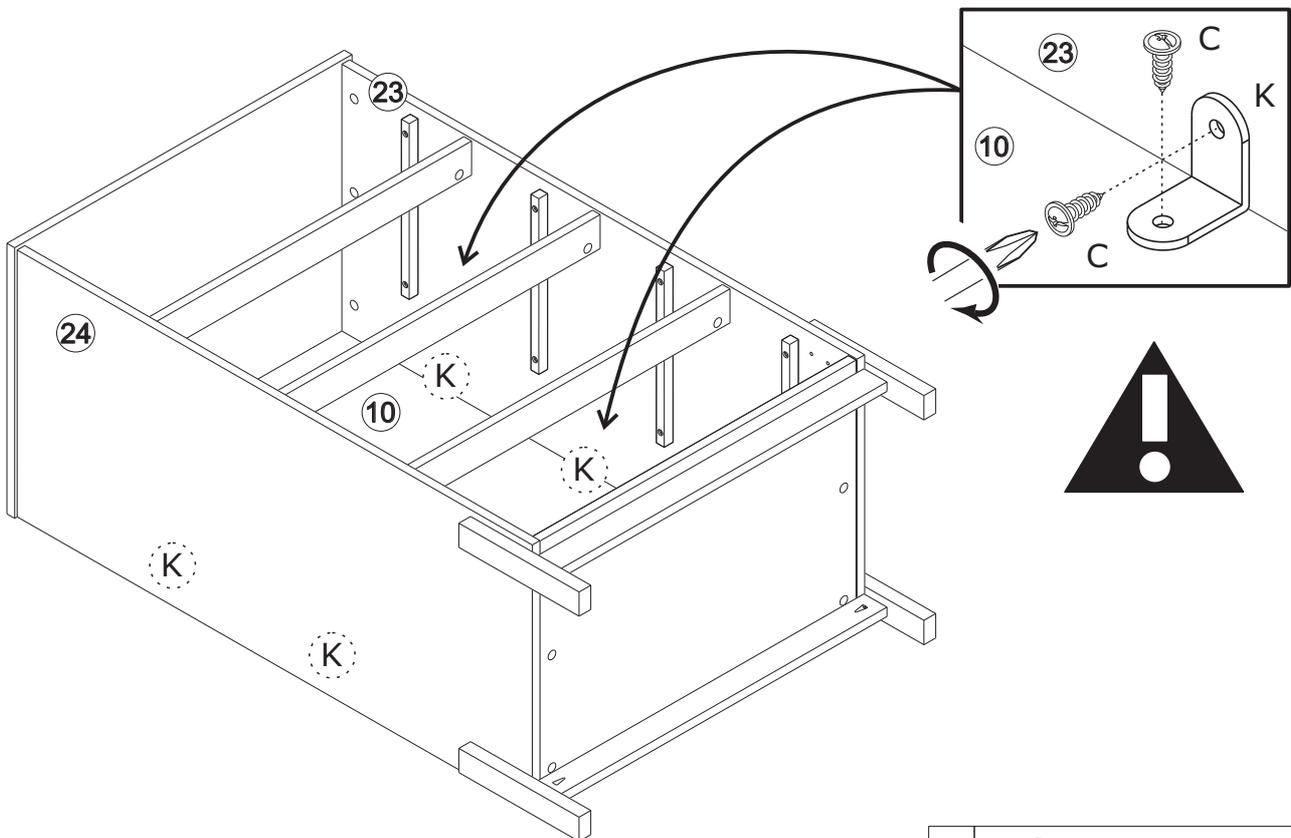

Joint parts (23), (24) and (10) using metal corner (K) and screw (C) and screwdriver.

C		Ø3,5*12mm	08
K			04

Step 14

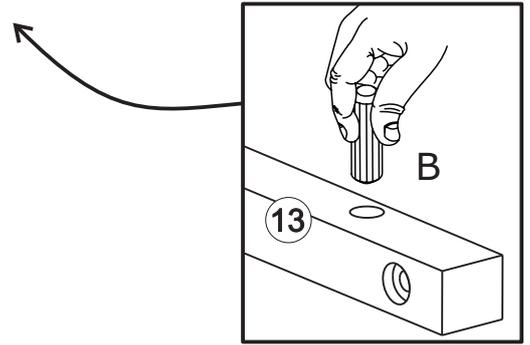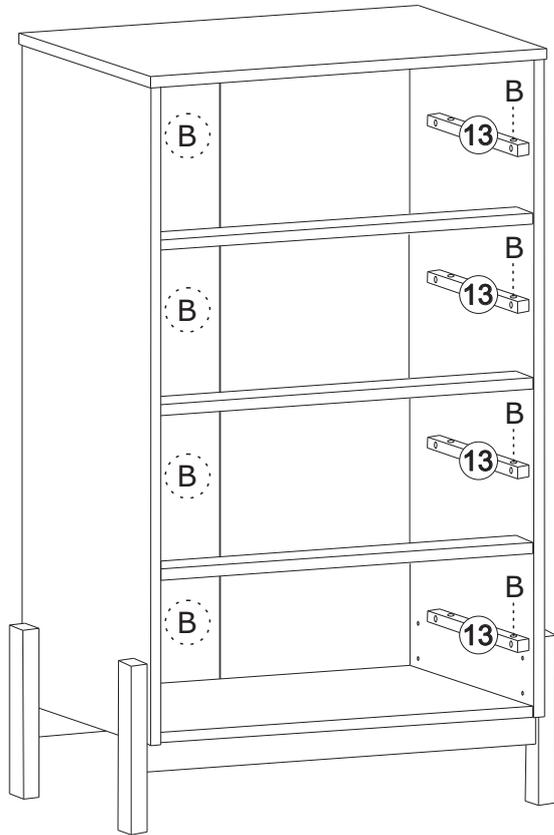


Insert wood dowel (B) into part (13) to be the stop of the drawer.




Step 15

4x

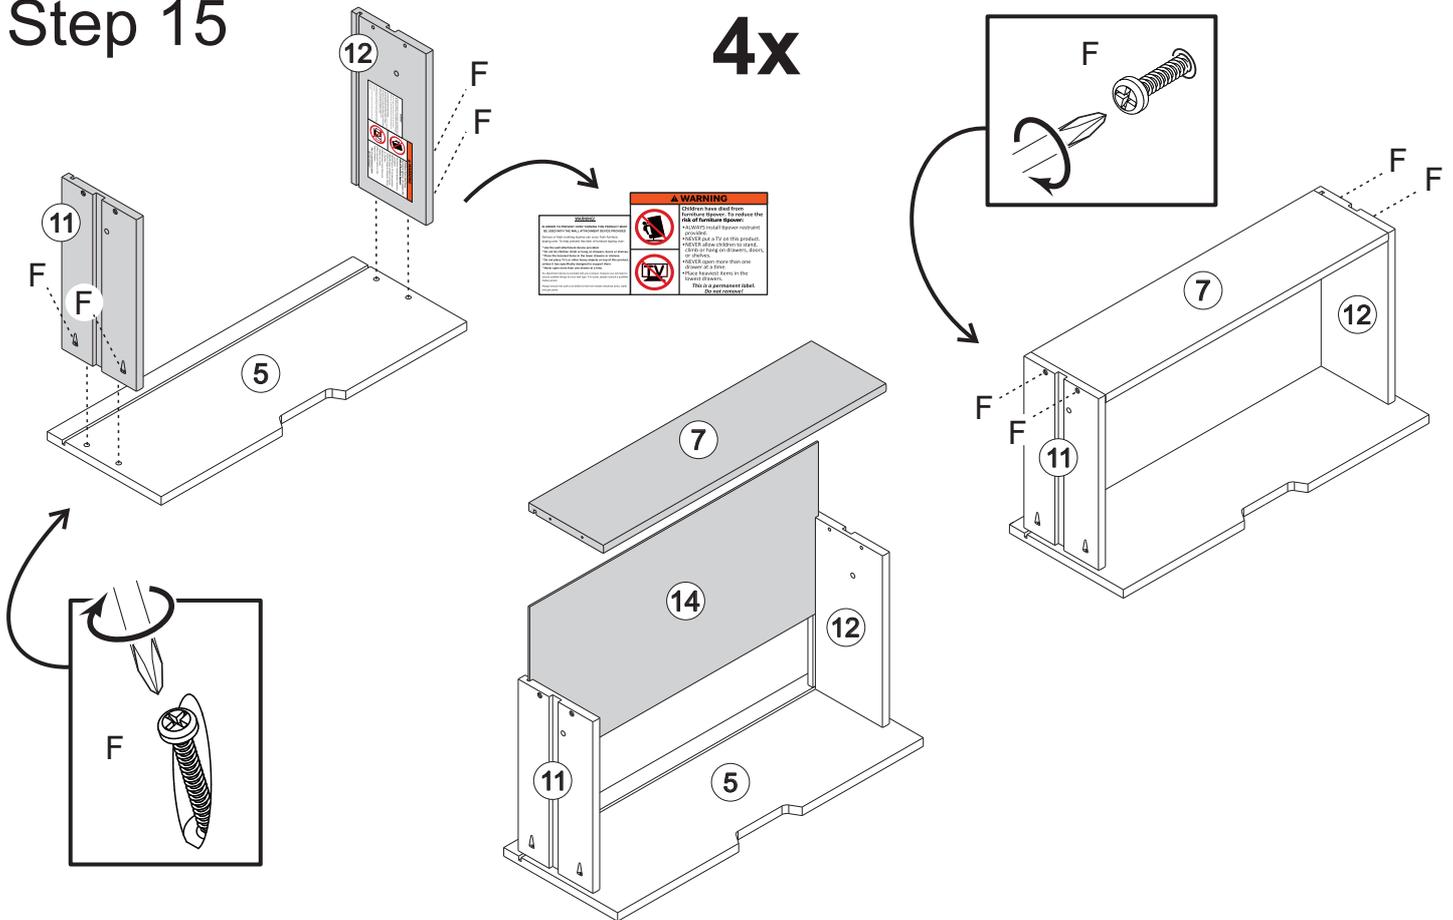



Secure part (11) and (12) to part (5) with screw (F) and screwdriver (not included).
 Insert part (14) and (7) between parts (11) and (12).
 Secure part (7) with screw (F) and screwdriver.

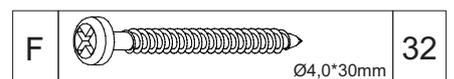

Step 16

Drawer Stop


Insert wood dowel (B) on the inside of the drawers, with the drawer inside the unit, after having passed the wood dowel that is in the drawer runner. Make sure the wood dowel is flush with the panel.

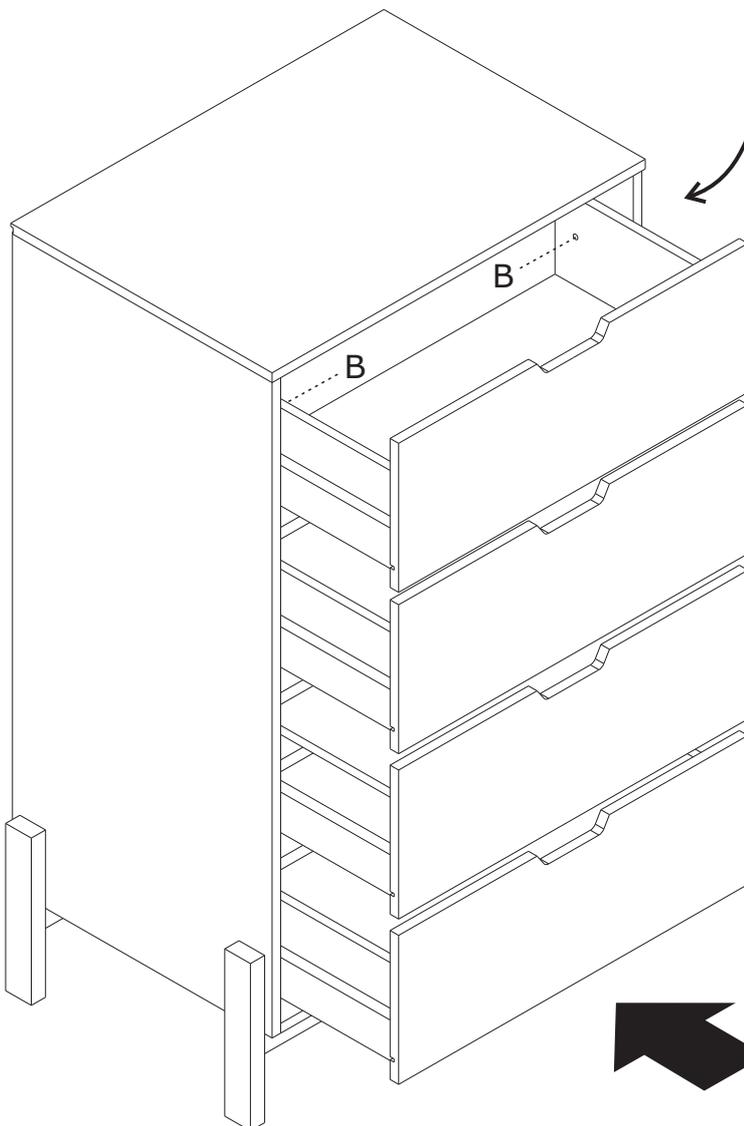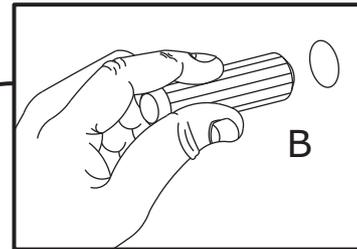

WARNING!
IN ORDER TO PREVENT OVER TURNING THIS PRODUCT MUST BE USED WITH THE WALL ATTACHMENT DEVICE PROVIDED
Serious or fatal crushing injuries can occur from furniture tipping over. To help prevent this item of furniture tipping over:
* Use the wall attachment device provided.
* Do not let children climb or hang on drawers, doors or shelves.
* Place the heaviest items in the lower drawers or shelves.
* Do not place TVs or other heavy objects on top of this product, unless it has specifically designed to support them.
* Never open more than one drawer at a time.
An attachment device is provided with your product, however you will need to source suitable fixings for your wall type. If in doubt, please consult a qualified trades person.
Always ensure the wall to be drilled is free from hidden electrical wires, water and gas pipes.

▲ WARNING	
	Children have died from furniture tipover. To reduce the risk of furniture tipover: <ul style="list-style-type: none">• ALWAYS install tipover restraint provided.• NEVER put a TV on this product.• NEVER allow children to stand, climb or hang on drawers, doors, or shelves.• NEVER open more than one drawer at a time.• Place heaviest items in the lowest drawers. <i>This is a permanent label. Do not remove!</i>
	

The side drawer with the WARNING LABEL, should be mounted in highest drawer.

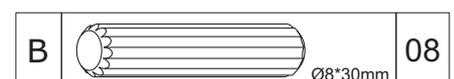

Step 17

WARNING




Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall anchor and hardware are included with this product.

Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

Attach screw (F) into washer (M), securing wall anchor (N) at the top middle part (1).


Drill your wall with a 6mm drill (not included) and insert hardware (L), securing wall anchor (N) into washer (M) and screw (F) in the wall.

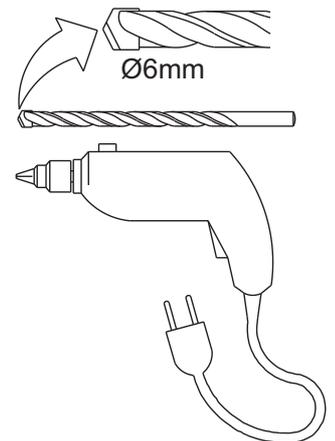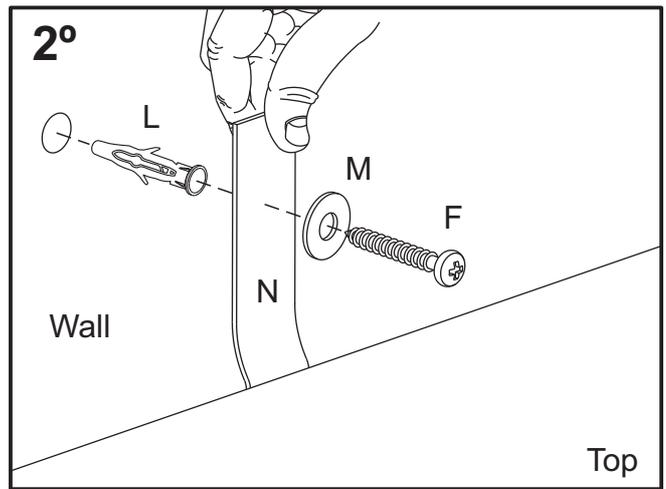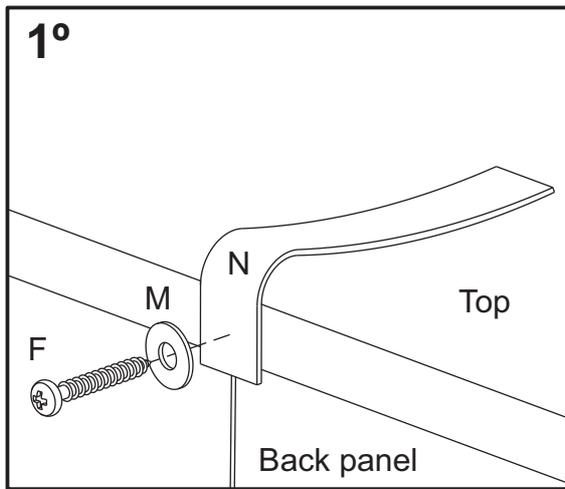

Name and address information for the manufacturer responsible for the anti-tip hardware and date of production can be found on the label on the back of the furniture.

F	Ø4,0*30mm	02
L		01
M		02
N		01

Step 18

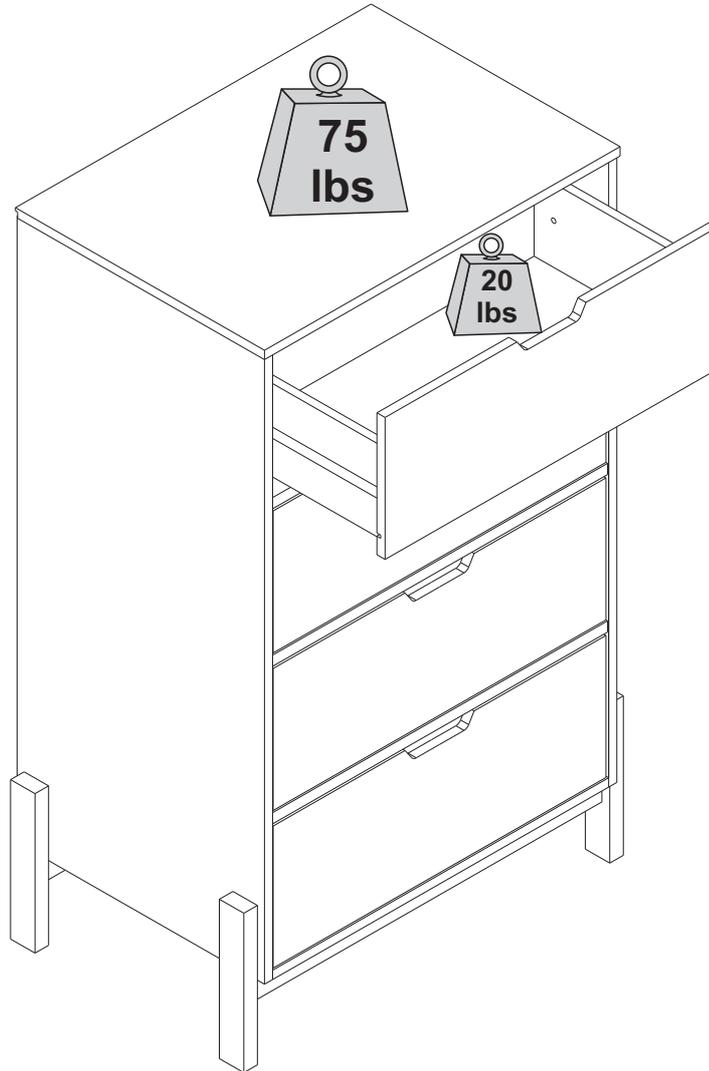

Assembly Complete!

Maintenance Guide

To maintain long term performance and easy gliding of your solid wood drawers, we recommend applying wax to the wooden guide rails.

1. Bee's wax is recommended or Paraffin wax from a standard candle can be used.
2. Apply the wax by rubbing it on the wooden guide rails where there is wood-on-wood contact when opening and closing the drawer. (Wax should be room temperature, do not melt the wax onto the wood)
3. Wax should be applied every few months for the first year and then only when needed after that to keep the drawers sliding smoothly.