




BEST CHOICE  
PRODUCTS

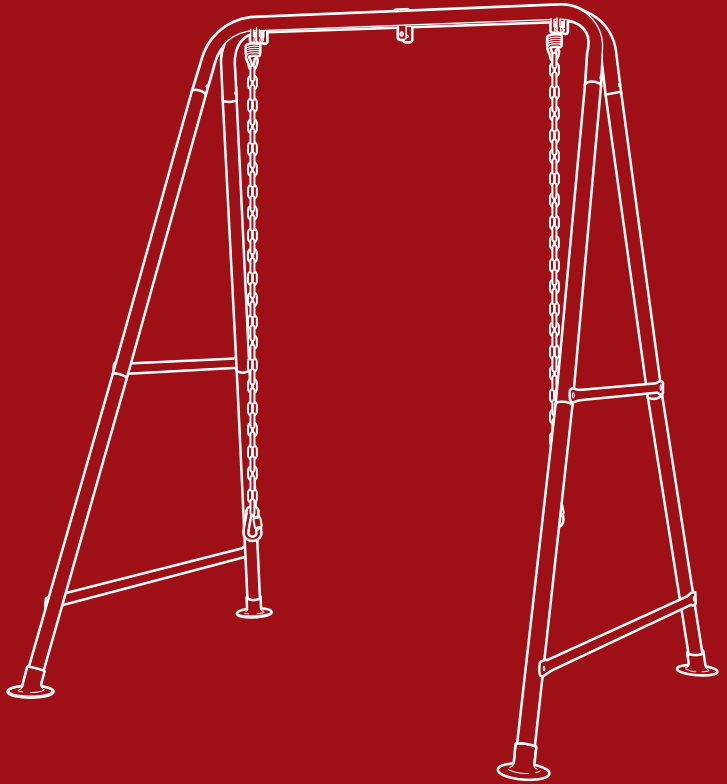

# INSTRUCTION MANUAL

---

Hanging Chair Stand



**BEST CHOICE  
PRODUCTS**

---

As shoppers, we're always trying to find the perfect balance between quality & value. At BCP, we believe we've achieved that. Our diverse catalog of everyday essentials is tailored especially to our customers & guaranteed to hit that sweet spot of high quality & low price.

— Always. —

## ! NOTICE

Please retain these instructions for future reference.

- This product is only the chair stand; the chair is sold separately.
- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this product as a step ladder.
- Firmly secure all bolts, screws, and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Be aware that some parts are heavy and have sharp edges.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product contains small parts for assembly. Keep small children and pets away during assembly.
- Assemble this product on a flat, level surface near its intended space.
- This product is intended for residential use only.

## TOOLS REQUIRED



ALLEN WRENCH  
(PROVIDED)



WRENCH  
(PROVIDED)



350 LBS  
CAPACITY



2 PERSON  
ASSEMBLY



UP TO 30 MIN.  
ASSEMBLY

## HARDWARE

1

M8 x 45mm  
BOLT & NUT  
SET



4 PCS

2

M8 x 50mm  
BOLT & NUT  
SET



8 PCS

3

SPRING  
HOOKS



2 PCS

4

LOCKING  
CARBINERS



2 PCS







5

47-INCH  
CHAIN



2 PCS

## PARTS

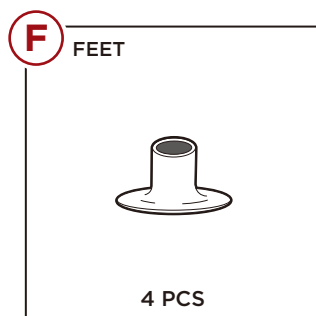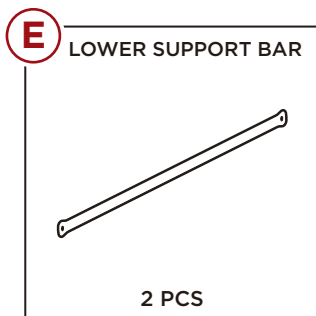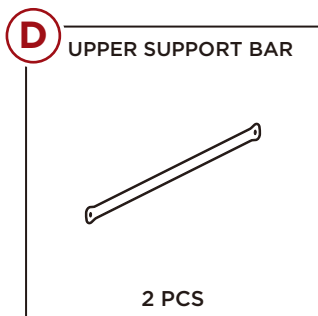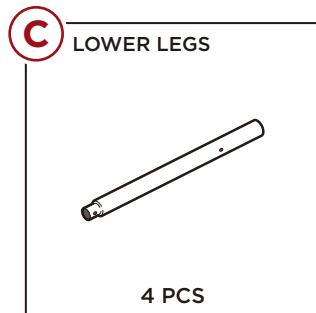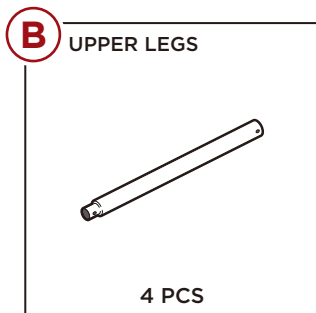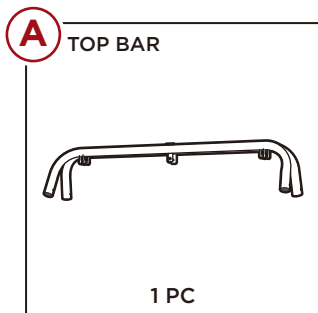


## PRODUCT ASSEMBLY

1

Lay the **part A top bar** on its side, then attach four **part B upper legs** with four **part 1 bolt and nut sets**.

**NOTE:** Insert the bolts so that the nut cap sits on the outer edge of the legs.

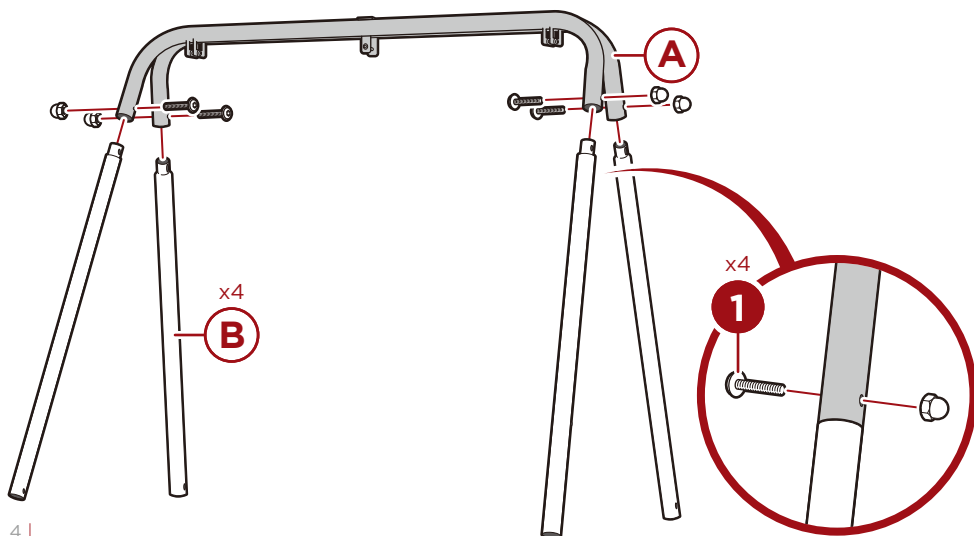


## PRODUCT ASSEMBLY

2

Insert one **part C lower leg** into each **part B upper leg**, four lower legs total.

Align the fastening holes of each leg segment, then secure two **part D upper support bars** with four **part 2 bolt and nut sets**, two sets per bar.

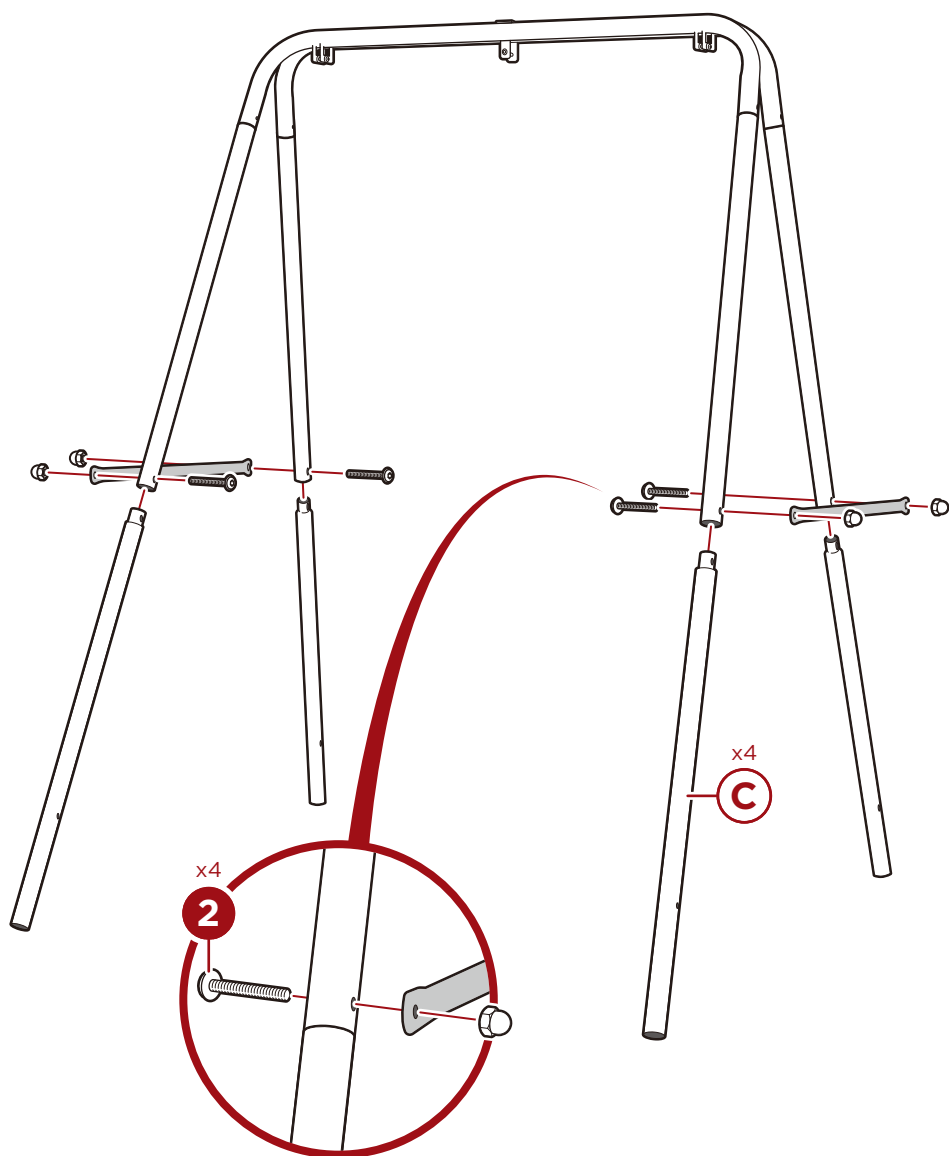


## PRODUCT ASSEMBLY

3

Attach two **part E lower support bars** with four **part 2 bolt and nut sets**.

Attach the **part F feet** to the **part C lower legs**, four feet total. Make sure all feet are oriented so the stand is level.

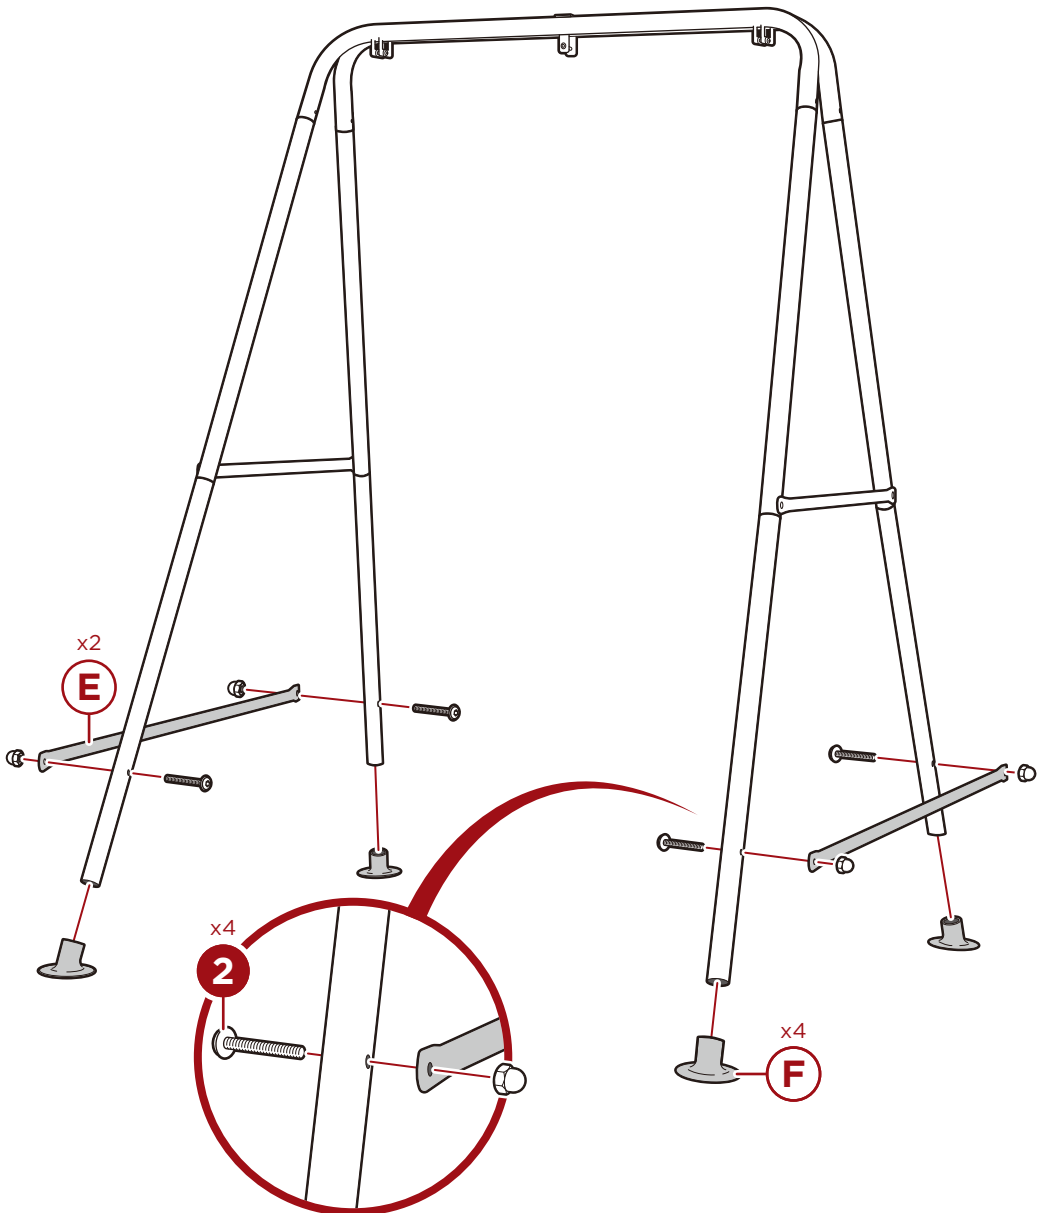


## PRODUCT ASSEMBLY

4

With a second person's help, stand the product upright then attach either the **part 3 spring hooks** or the **part 4 carabiners** to the connection points on the **part A top bar**. Secure the **part 5 chains** to your chosen connectors.

**NOTE:** There are three connection points to accommodate your preferred seating and this step will vary depending on that seat's specifications.

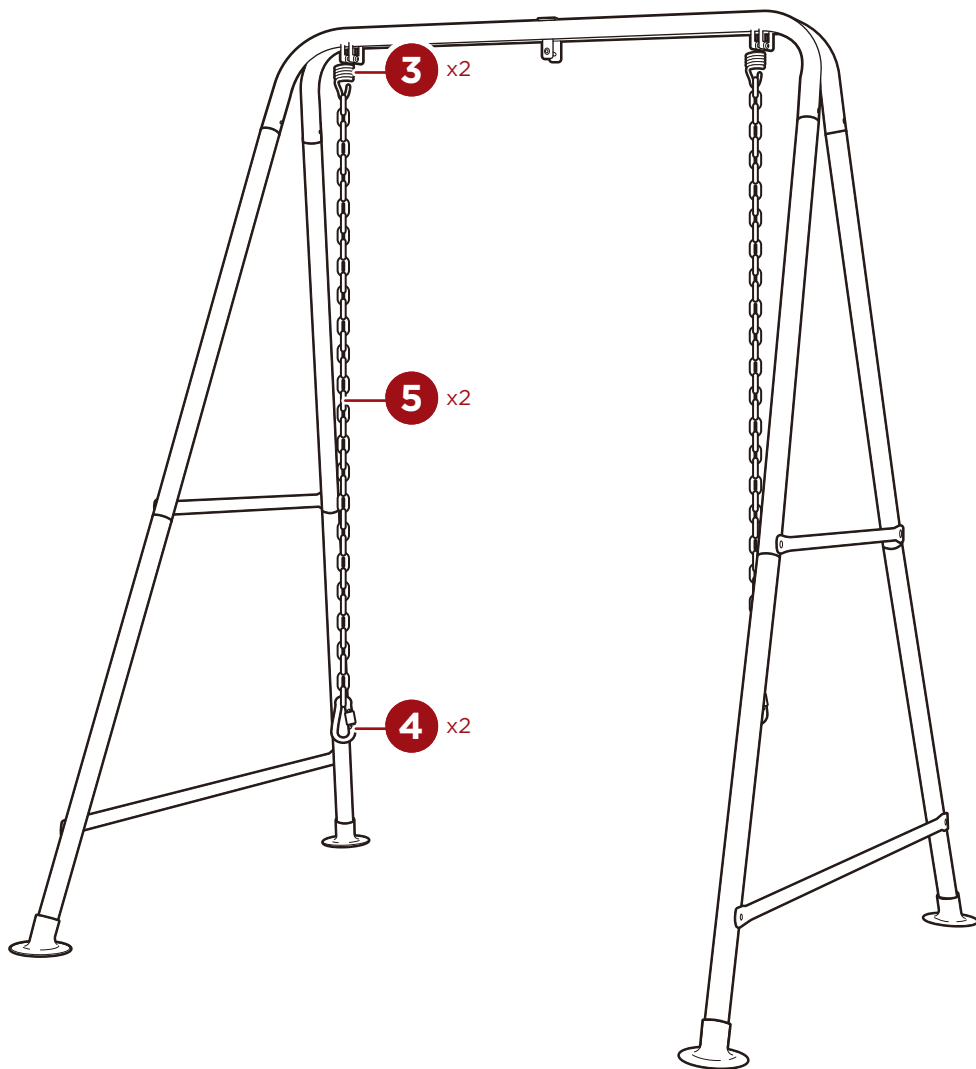



# HELP CENTER



Question about your product? We're here to help. Visit us at:

[help.bestchoiceproducts.com](http://help.bestchoiceproducts.com)



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

## PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

## WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.