



bestchoiceproducts



INSTRUCTION MANUAL

Kitchen Island Utility Cart



bestchoiceproducts

As shoppers, we're always trying to find the perfect balance between quality & value. At BCP, we believe we've achieved that. Our diverse catalog of everyday essentials is tailored especially to our customers & guaranteed to hit that sweet spot of high quality & low price.

— Always. —

! NOTICE

Please retain these instructions for future reference.

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws, and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- If any parts are missing, broken, damaged, or worn, stop using this item until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

TOOLS REQUIRED



PHILLIPS
SCREWDRIVER



WRENCH
(PROVIDED)



55 LBS
CAPACITY
TABLETOP



44 LBS
CAPACITY
SHELF



1 PERSON
ASSEMBLY



APPROXIMATELY
60 MIN.
ASSEMBLY

HARDWARE

A CAM BOLT



22 PCS

B CAM LOCK



22 PCS

C DOWEL



14 PCS

D M6 x 60mm BOLT



10 PCS

E ANCHOR NUT



10 PCS

F M6 x 25mm SCREW



2 PCS

G M4 x 18mm SCREW



4 PCS

H HANDLE



2 PCS

I LOCKING CASTER



2 PCS

J CASTER



2 PCS

K M4 x 35mm SCREW



4 PCS

L M4 x 30mm SCREW



8 PCS

M M3 x 12mm SCREW




















16 PCS

N DRAWER SLIDES




4 SETS


PARTS

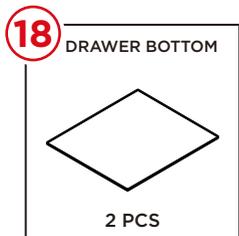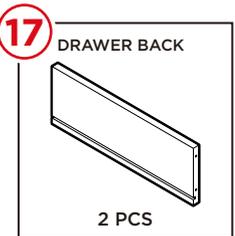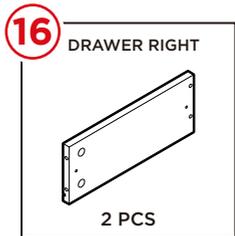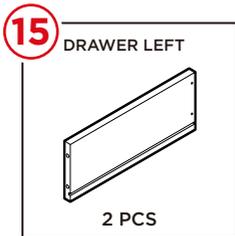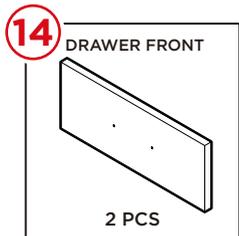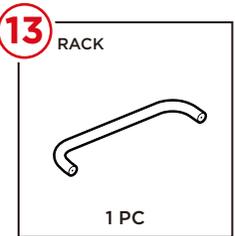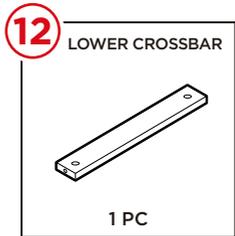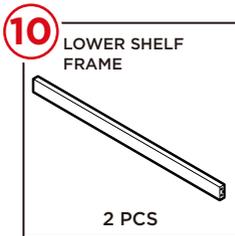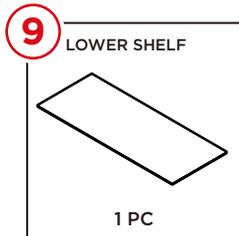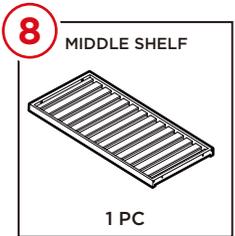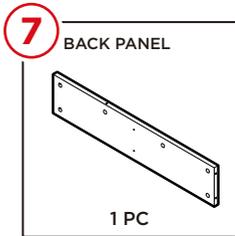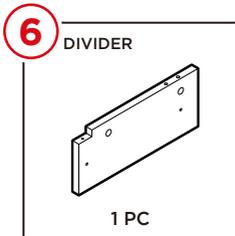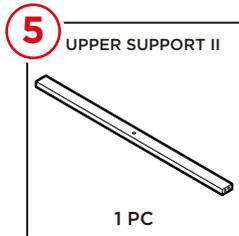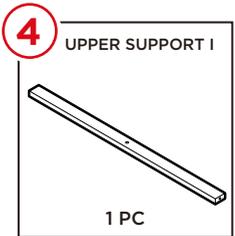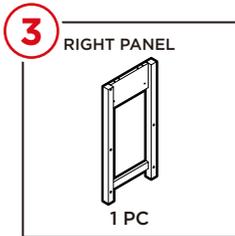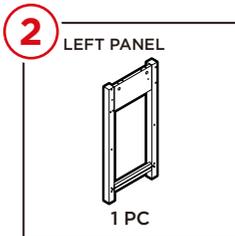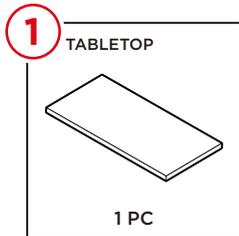


TIGHTENING CAMLOCKS

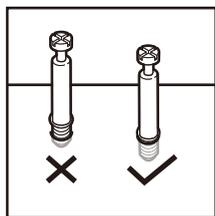

1. Screw cam bolt in completely.

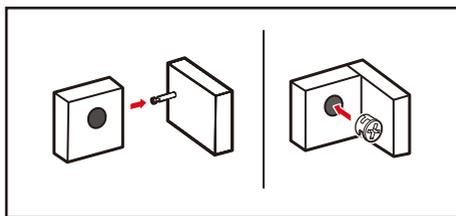

2. Insert cam bolt and cam lock into designated holes.

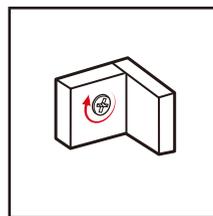


3. Screw cam lock clockwise to secure cam bolt.

PRODUCT ASSEMBLY


1

Screw eight part A cam bolts into part 1 tabletop.

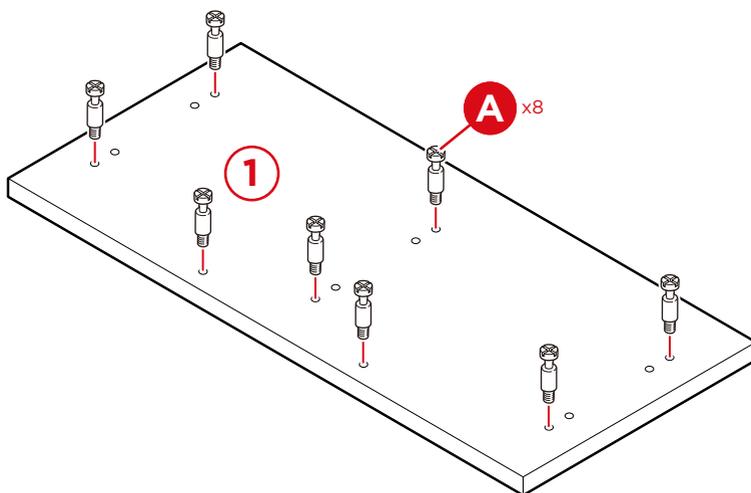

2


Screw two part A cam bolts into two part 10 lower shelf frames.

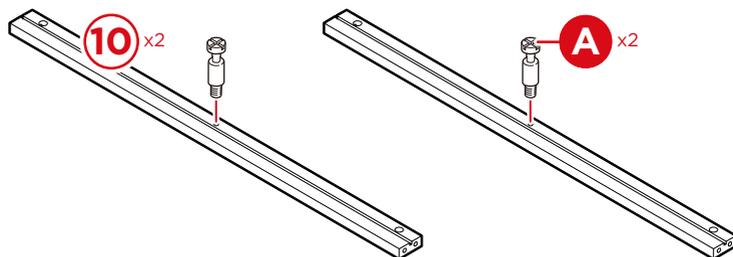

PRODUCT ASSEMBLY


3

Separate the inner and outer railings from four part N drawer slides

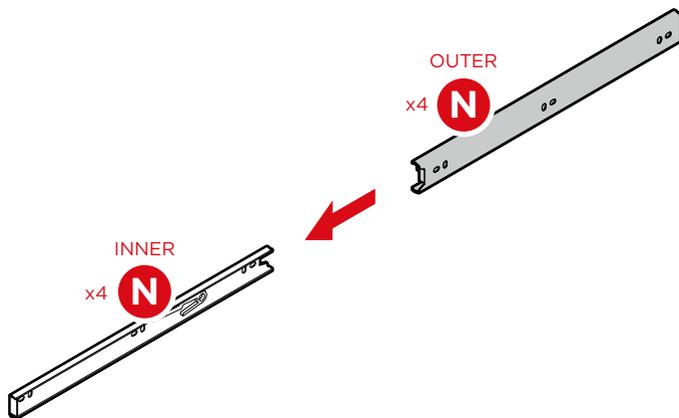

4


Attach an outer railing from a part N drawer slide to part 2 left panel with two part M screws. Screw in two part A cam bolts.

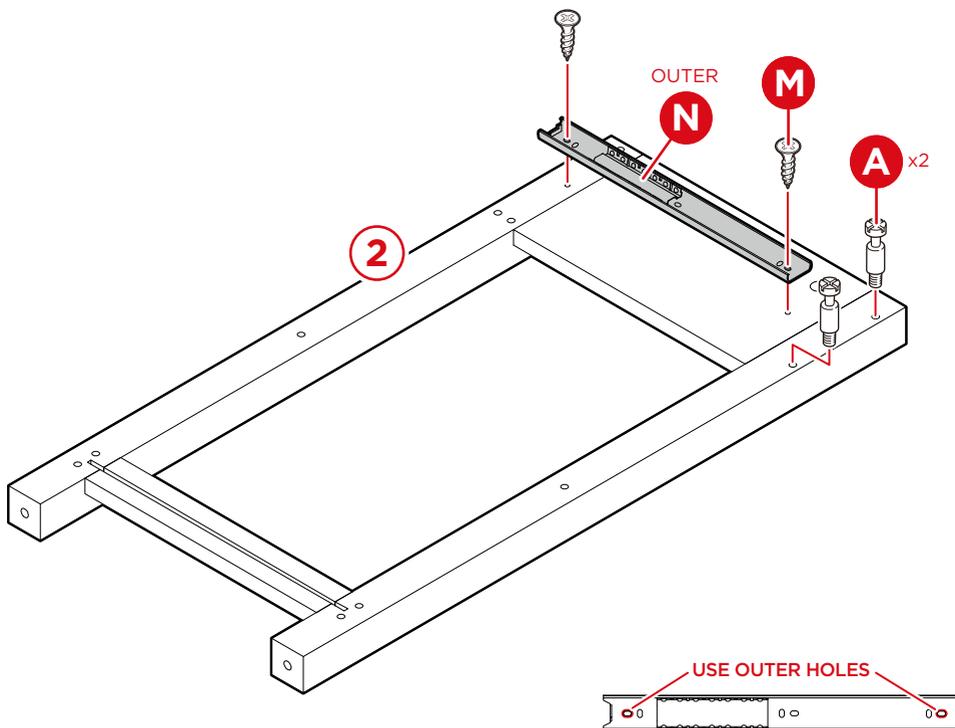

PRODUCT ASSEMBLY


5

Attach an outer railing from a part N drawer slide to part 3 right panel with two part M screws. Screw in two part A cam bolts.

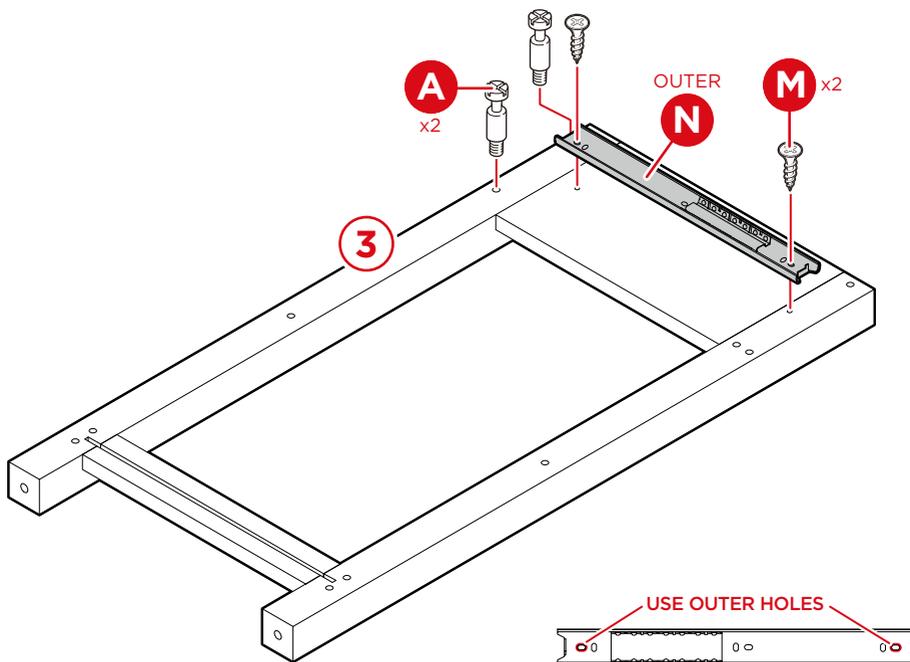

6


Attach two outer railings from two part N drawer slides to part 6 divider with four part M screws.

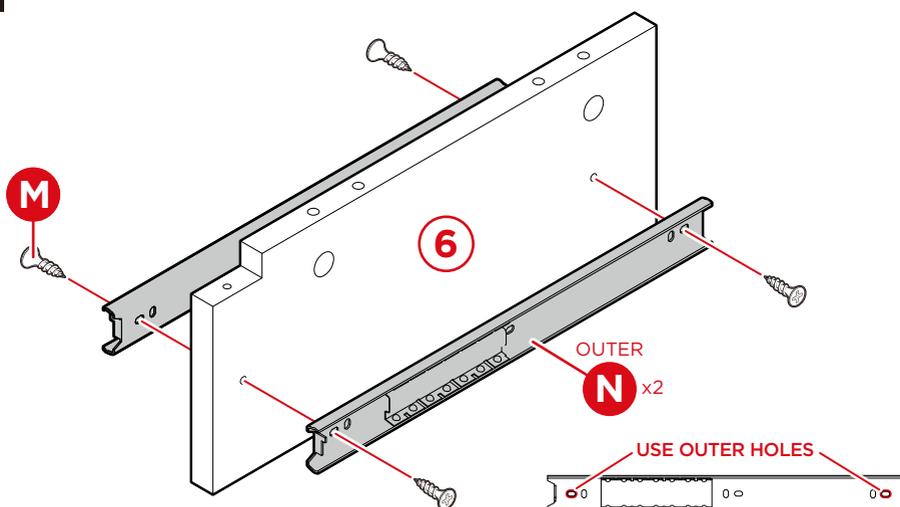

PRODUCT ASSEMBLY


7

Attach part 15 and part 16 drawer sides to part 17 drawer back with four part L screws. Slide in part 18 drawer bottom. Screw four part A cam bolts into part 14 drawer front.

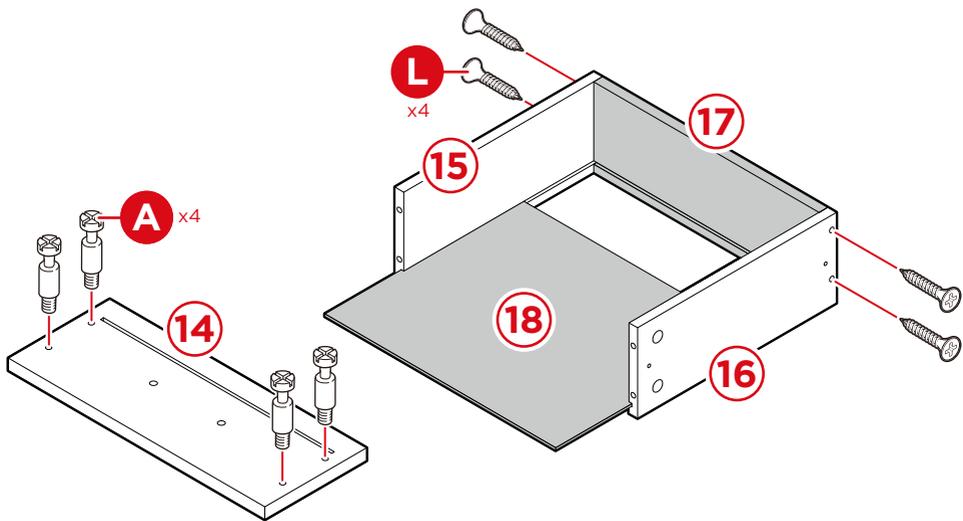

8

Attach part 14 drawer front with four part B cam locks.

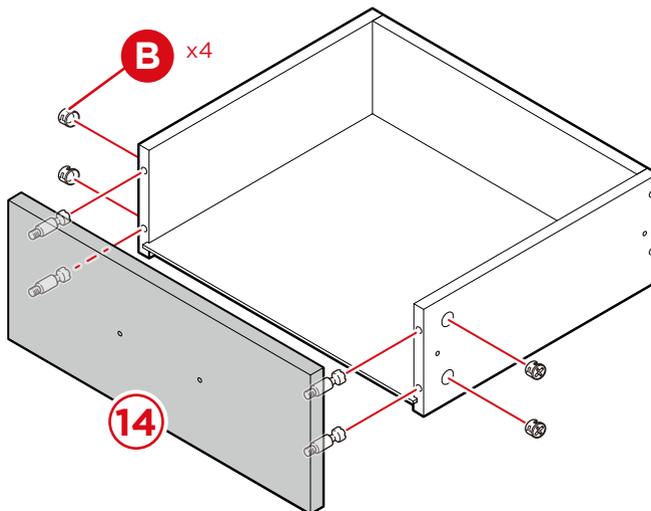


PRODUCT ASSEMBLY

9


Attach two inner railings from two part N drawer slides with four part M screws. Attach a part H handle with two part G screws.

Repeat steps 7 to 9 to build another drawer.

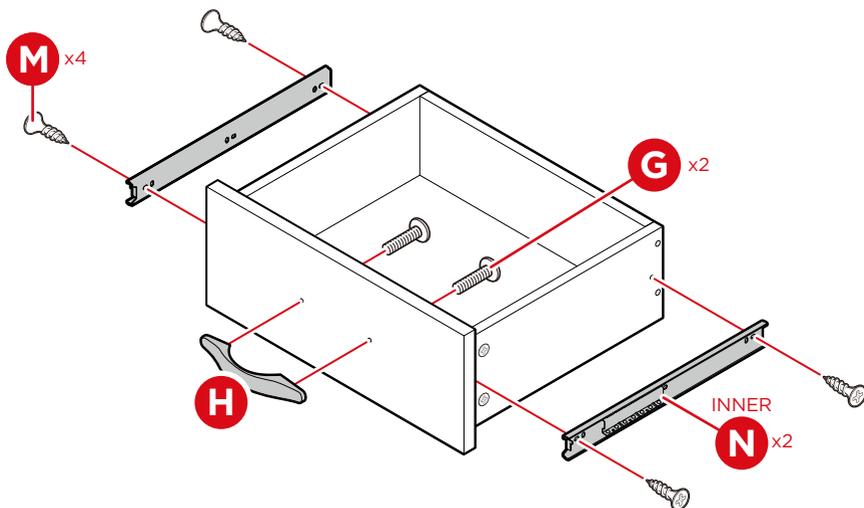

10


Attach part 4 and part 5 upper supports to part 6 divider with two part K screws. Attach part 7 back panel with two part K screws.

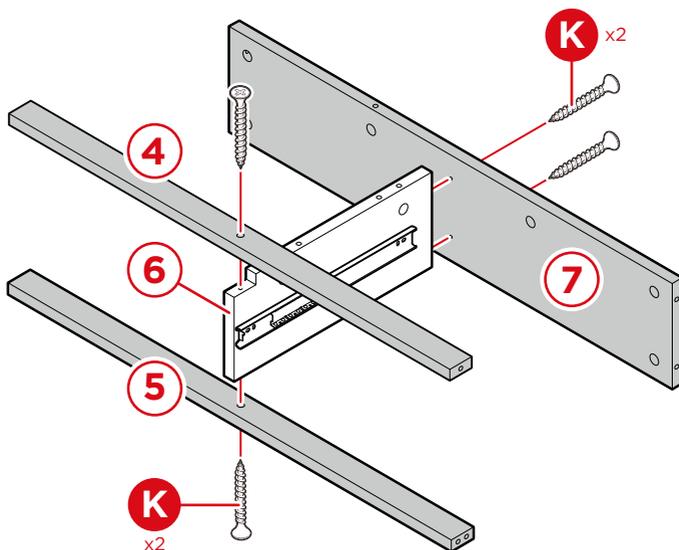

PRODUCT ASSEMBLY


11

Attach two part 10 lower shelf frames to part 12 lower crossbar with two part B cam locks.

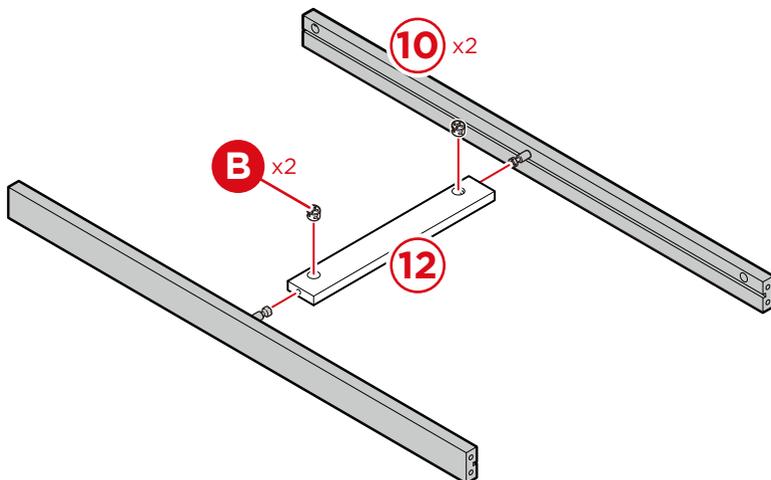

12


Attach part 2 left panel to upper assembly with a part D bolt, part E anchor nut, two part C dowels, and two part B cam locks.

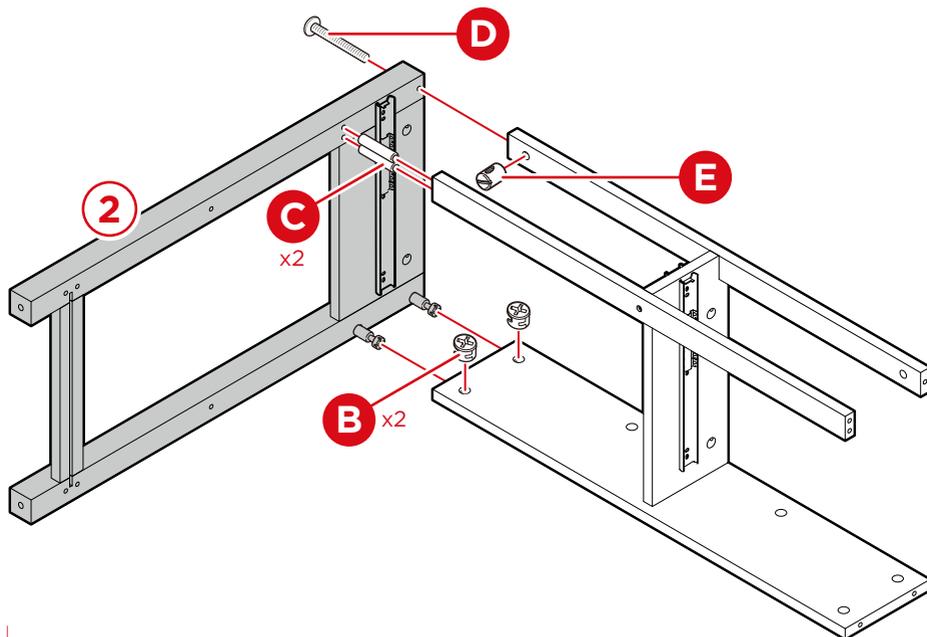

PRODUCT ASSEMBLY


13

Attach part 8 middle shelf with two part D bolts and two part E anchor nuts.

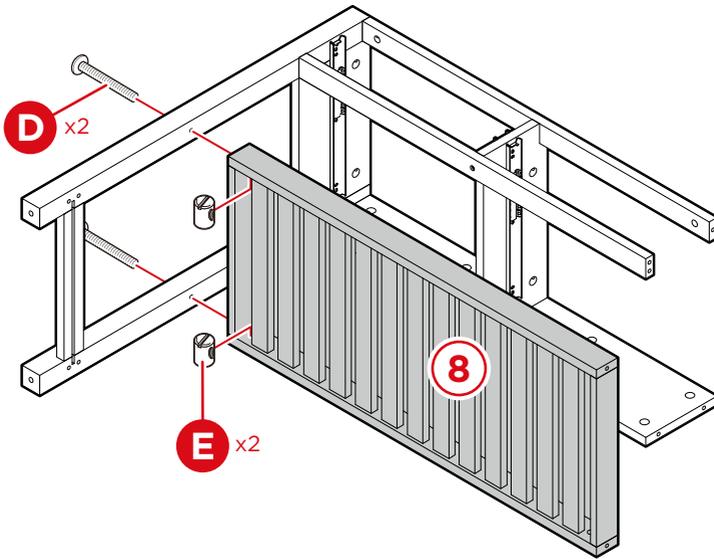

14


Attach lower shelf assembly with two part D bolts, two part E anchor nuts, and two part C dowels.

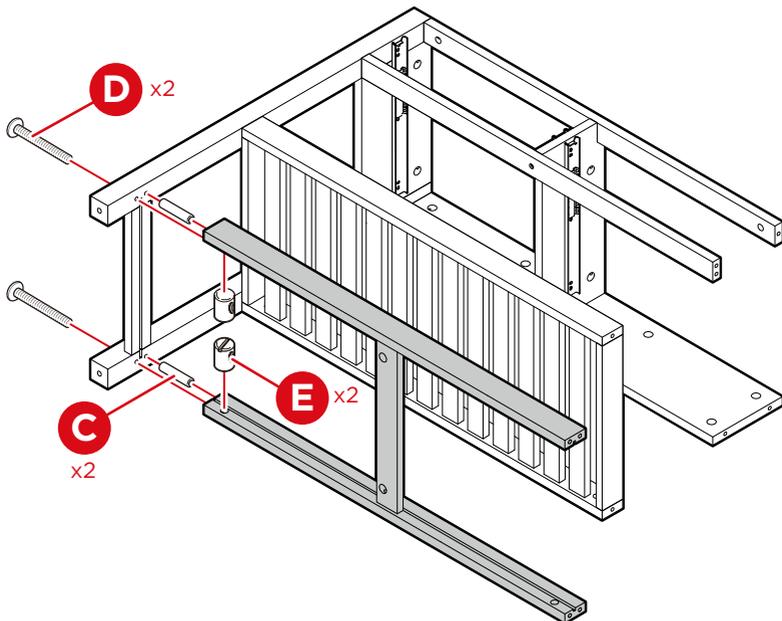

PRODUCT ASSEMBLY


15

Slide in part 9 lower shelf.

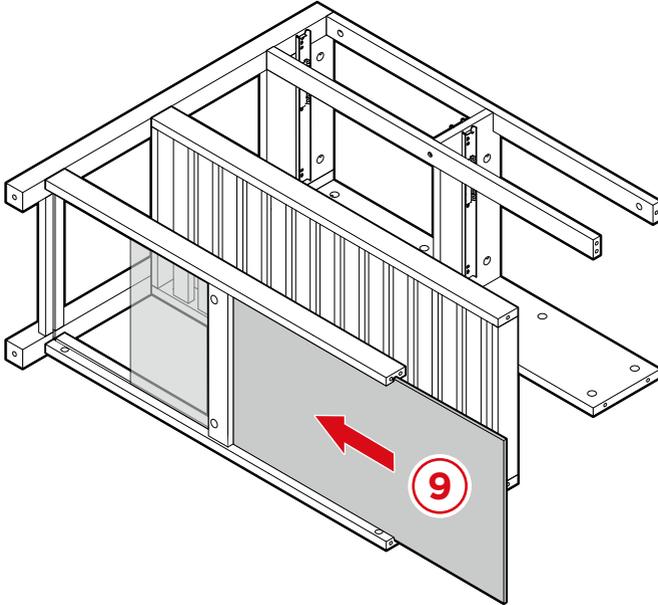

16

Attach part 3 right panel with five part D bolts, five part E anchor nuts, four part C dowels, and two part B cam locks.

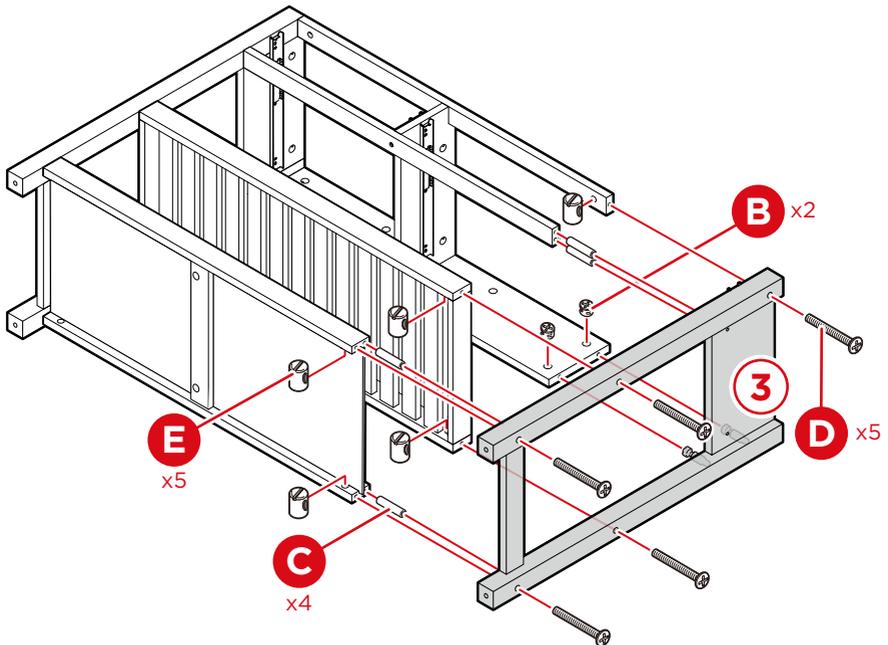


PRODUCT ASSEMBLY

17

Attach part 13 rack with two part F screws.


Attach part 1 tabletop with eight part B cam locks and six part C dowels.

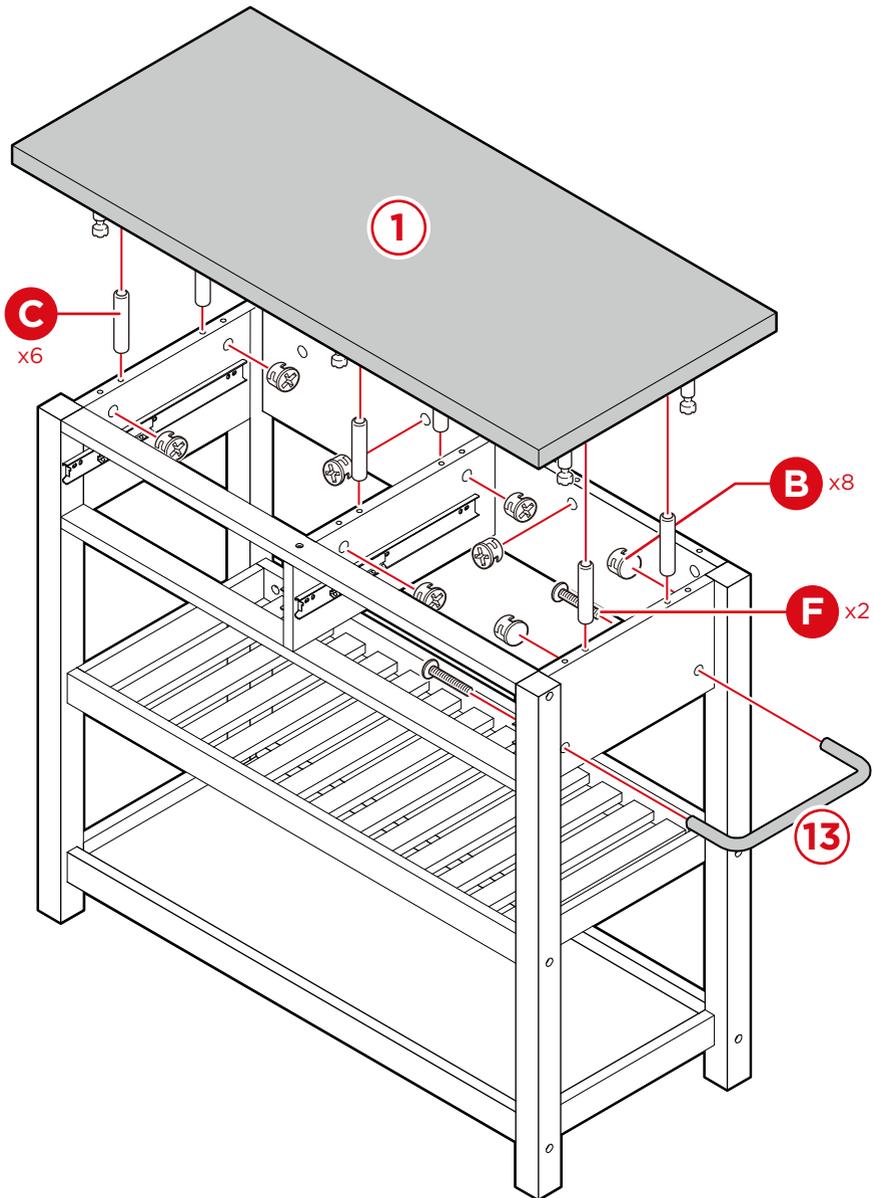

PRODUCT ASSEMBLY


18

Use the provided wrench to screw in two part I locking casters and two part J casters.

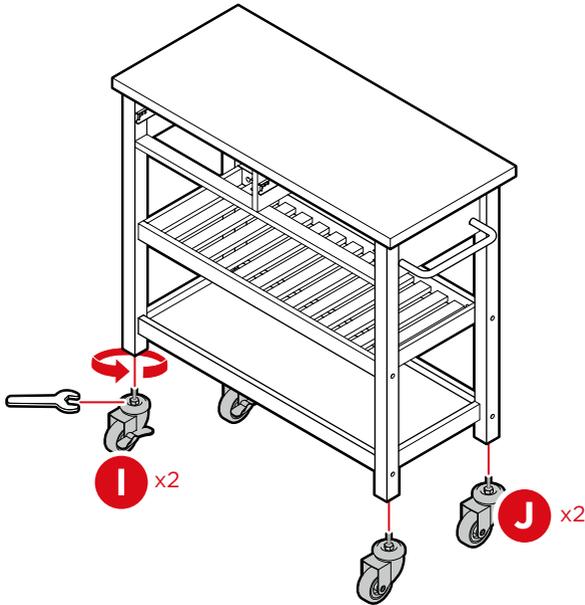

19

Insert the two drawers by lining up the railings.

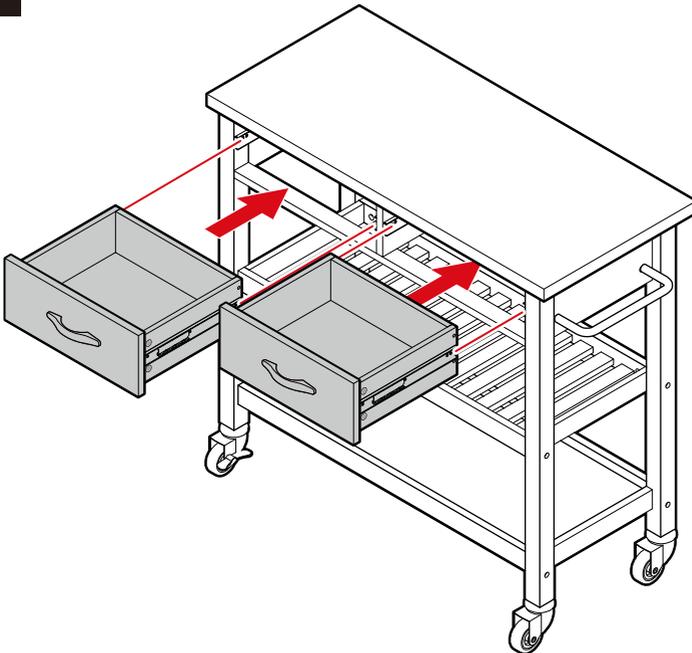

Earn points while you shop. Join today!

bestchoiceproducts
rewards

Join | Earn | Redeem

Give your friends 15% off their first order! For each successful referral you'll receive 100 points.

bestchoiceproducts.com



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.