


ASSEMBLY INSTRUCTION

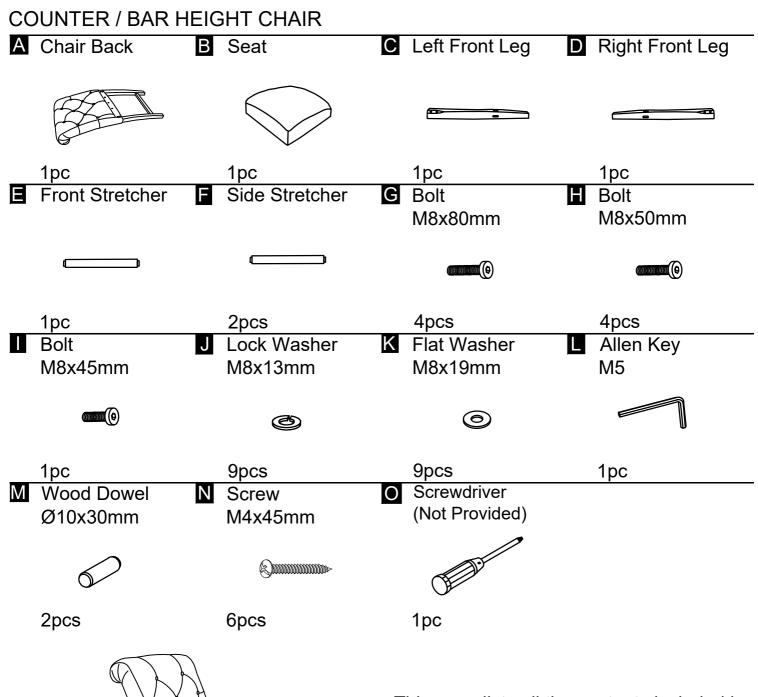


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage. 1 Attach Front Stretcher (E) to Left Front Leg (C) and Right Front Leg (D), then attach Left Front Leg (C) & Right Front Leg to the Seat (B) using Bolt (H), Lock Washer (J) and Flat Washer (K) on both holes of Seat (B) by Allen Key (L). Turn the Allen Key (L) in Bolt (H). But not too tight. Attach Wood Dowel (M) to Seat (B).

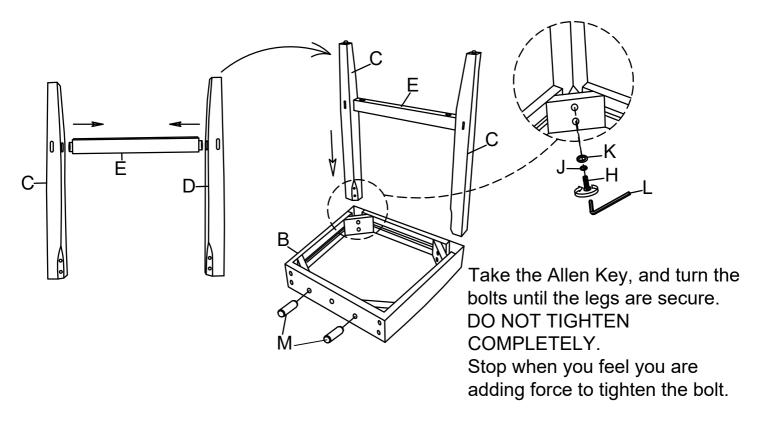

2 Put Chair Back (A) on a smooth flat surface, attach the Seat (B) to the Chair Back (A) using Bolt (G) & Bolt (I), Lock Washer (J), Flat Washer (K) in both holes of Seat (B) and Chair Back (A). Turn the Allen Key (L) in Bolt (G) & Bolt (I).

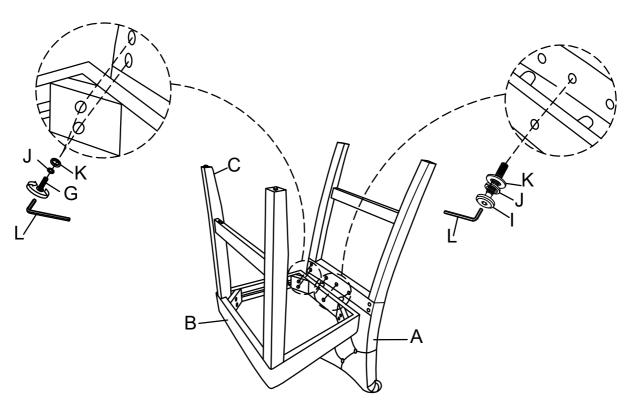

3 Attach Side Stretcher (F) to Left Front Leg (C), Right Front Leg (D) & Chair Back (A), using Screw (N) by Screwdriver (O) to tighten all stretchers.

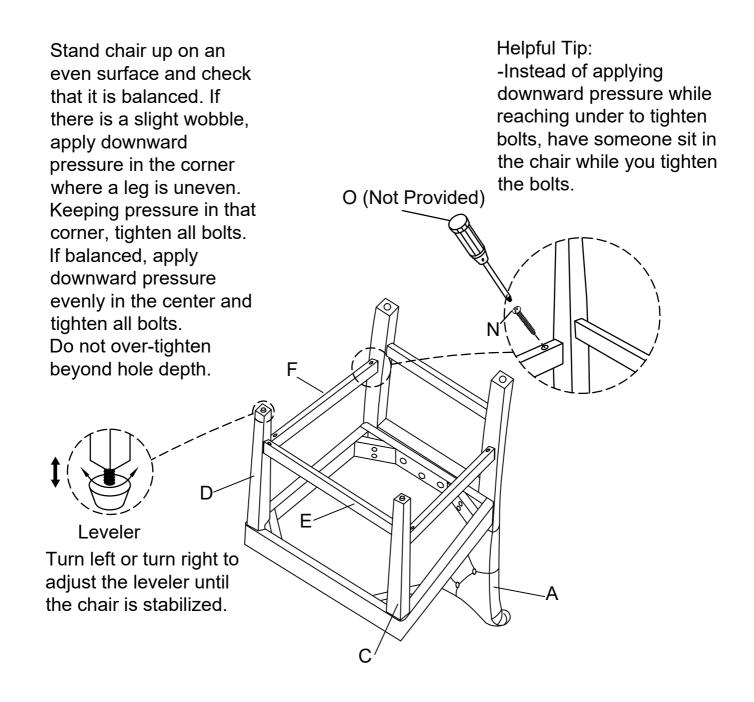

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.