



## Starling Smart Bassinet featuring CryAssist™ Quick Reference Guide

After assembling the Starling Smart Bassinet as described in the enclosed instructions, refer to this sheet for additional information and frequently asked questions about your bassinet.


### Power

- Tap to turn on the bassinet.
- Press and hold the Power icon  plus Motion 1  for 10 seconds to reset the bassinet and pair it with Wi-Fi (while using the Connected Family app).
- Blinks red if the bassinet encounters an obstruction that prohibits movement. Remove the obstruction and tap again to restart the bassinet motion.
- Solid red when the bassinet is in standby.

### Wi-Fi Indicator

- Blinks slowly while in pairing mode.
- Blinks quickly if it fails to connect to a network while in pairing mode. Check your network credentials or consult your internet service provider.
- Solid white when paired with a Wi-Fi network.

### Lock/Unlock Indicator

- Shows whether the touch panel is locked. Press and hold the Timer icon  for 5 seconds to lock or unlock the touch panel.
- You can also unplug the bassinet and plug it back in to unlock the touch panel.

### Motion

-  Motion 1 — Cradle  
Lulls your child back and forth.
-  Motion 2 — Sway  
Rocks from side to side.
-  Motion 3 — Flutter  
Loops out and around.
-  Motion 4 — Cascade  
Gently lifts up and down.
-  Motion 5 — Zephyr  
Wafts in an arc and curls back.

- There are 5 motions with 3 speeds each. Tap a Motion icon to begin movement. Additional taps of the same Motion icon will increase the speed. The fourth tap turns the motion off.

#### Motion Speed Indicators

- Shows the selected speed level for the current motion.

### Sounds and Music

- Tap to cycle through 5 soothing built-in sounds. Press and hold for 2 seconds to turn sounds off.
- When Bluetooth is enabled, tap to Play/Pause music or media from your smartphone via Bluetooth. Press and hold for 2 seconds to return to the built-in sounds.

### Volume

- Tap up to five times to set the sound and music volume level. Tap a sixth time to turn the volume off.

### Timer

- Tap to select default Timer 1 (30 minutes) or Timer 2 (180 minutes). Use the Connected Family app to customize timers.

- Press and hold for 5 seconds to lock or unlock the touch panel.

#### Timer Indicators

- Shows whether Timer 1 (left) or Timer 2 (right) is activated.

### Scenes


- Tap to enable the default motion and sound scene.
- Blinks twice when cry activation is enabled.
- Press and hold for 3 seconds to activate or deactivate the default scene only when baby cries.
- Use the Connected Family app to create and manage scenes.

### Bluetooth<sup>®</sup> Speaker

- Press and hold for 3 seconds to connect to your smartphone via Bluetooth.
- Blinks slowly while connecting. You'll also hear a chime when in pairing mode and again once successfully paired.
- Blinks quickly if it fails to connect.
- This appears as Maxi-Cosi Starling in the Bluetooth menu on your smartphone.

## Frequently Asked Questions


### Why did my Starling Bassinet stop moving and the Power icon start blinking red?

This can occur when the bassinet encounters an obstruction that prohibits movement. To restart the bassinet motion, simply remove the obstruction and tap the Power icon . Keep clear of the bassinet while restarting it.

### Why does the Wi-Fi indicator blink quickly?

The Wi-Fi light blinks slowly while in pairing mode and quickly when it fails to connect to a known network. Review your network credentials or consult your internet service provider for issues with your connection.

### Why did my Starling Bassinet start when my baby cried?

Scenes can be set up to activate automatically when baby's crying is detected. To deactivate this, press and hold the Scenes icon  for 3 seconds on the bassinet or disable the feature from the Connected Family app.



Scan to  
Learn More