 




BEST CHOICE
PRODUCTS

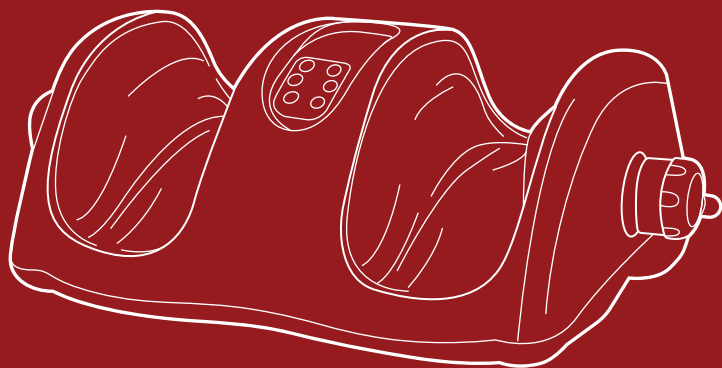

INSTRUCTION MANUAL

Foot Massager

SKY5999 + SKY6000 + SKY6001 + SKY6002 + SKY8696 + SKY8697
SKY8698 + SKY8699 + SKY8700 + SKY8701



**BEST CHOICE
PRODUCTS**

As shoppers, we're always trying to find the perfect balance between quality & value. At BCP, we believe we've achieved that. Our diverse catalog of everyday essentials is tailored especially to our customers & guaranteed to hit that sweet spot of high quality & low price.

— Always. —

WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



WARNING

- a) Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- b) Even used batteries may cause severe injury or death.
- c) Call a local poison control center for treatment information.
- d) Battery CR2025 (3V)
- e) Non-rechargeable batteries are not to be recharged.
- f) Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- g) Ensure the batteries are installed correctly according to polarity (+ and -).
- h) Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- i) Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- j) Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

! NOTICE

Please retain these instructions for future reference.

- Please read the operation instructions before using this product.
- Do not allow children to operate this product. Keep out of reach of children.
- Close supervision is necessary when this product is used near children.
- For household, indoor use only. This product is intended for residential use only.
- This product is not for use as a personal medical treatment/self-diagnosis device.
- Make sure the voltage specifications on the power cord are compatible with your power outlet.
- Unplug this product if left unattended and before disassembly or cleaning.
- Consult a physician before use if you have, cancer, osteoporosis, high fever, impaired consciousness, diabetes, erythema, epilepsy, malignant tumors, active tuberculosis, severe cardiac dysfunction, bleeding disorders, possible pregnancy, or allergic constitution.
- Do not use this product in conjunction with the following electronic medical devices: Cardiac pacemakers, respiratory equipment, ECG scanners, and other implanted devices.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience unless they have been given supervision or instruction concerning use of this product by a person responsible for their safety.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

! WARNING

To reduce the risk of burns, fire, electric shock, or injury:

- Do not leave this product unattended when plugged in.
- Do not stand on or in massager; only use while seated.
- Keep this product out of direct sunlight and other sources of heat (stove, heater, etc.).
- Do not run power cord over sharp edges/corners or a hot surface.
- Be aware of heated surfaces as it may cause burns. Do not administer heat to insensitive skin areas or if you have poor circulation.
- Be aware of children or incapacitated persons when in the proximity of heated surfaces.
- Do not use this massage device in a poorly ventilated area, such as under covers, blankets, or pillows, as this can potentially cause a fire, overheating of the device, electric shock, or other injury.
- Do not operate this product with the air openings blocked. Keep air openings free of lint, hair, etc.
- Do not immerse this product in water or store in wet/humid areas.
- Do not spill water on the electrical components or connectors.
- Do not operate with wet hands.
- Do not use this product in an excessively humid or dusty environment.
- Do not use this product where aerosol spray products are being used or where oxygen is being administered.
- Do not use this product in a room whose temperature exceeds 104°F (40°C).
- Do not use this product if you are receiving medical treatment or feel unwell.
- Do not use this product an hour before or after eating.
- Do not use this product for longer than 30 minutes at a time.
- Do not use this product while inebriated or otherwise impaired.
- Do not use this product with wet feet or while sleeping.
- Do not use this product as a step stool.
- Do not insert any object into any opening of this product.
- Do not drop as it may damage this product.

⚠️ WARNING

- Do not unplug this product by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
- Do not pull or carry this product by the power cord.
- Do not use if the plug, power cord, or any components are damaged.
- This product uses a polarized plug (one blade wider than the other), so the plug must be oriented correctly to fit into the outlet. Do not modify the plug in any way.
- Do not use any accessory or attachment other than original accessories and attachments.
- Do not use if this product is malfunctioning or operating abnormally.
- To reduce the risk of electric shock, immediately turn off and unplug the product after operation and before cleaning.

SPECIFICATIONS

Rated Voltage	120V/60Hz
Power	40w

CARE AND STORAGE

- Immediately unplug the product after operation and before cleaning.
- Do not use any abrasive or harsh chemicals to clean this product.
- Use a dry cloth when cleaning this product.
- Store this product in a dry, dust-free location. Do not store this product with the power cord uncoiled.
- Do not store this product in direct sunlight, near an open flame, or in intense heat.

DIAGRAM



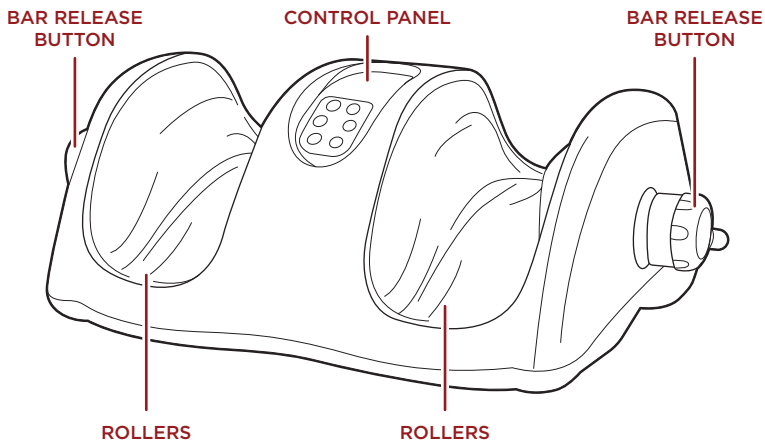 


DIAGRAM: BOTTOM VIEW

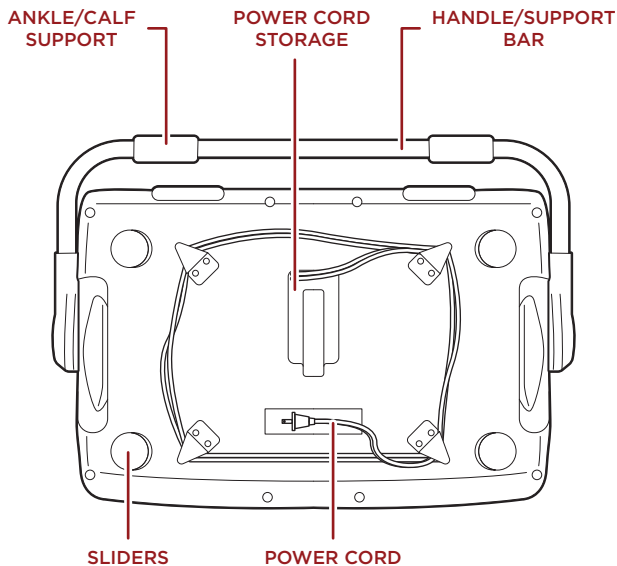 


CONTROL PANEL DIAGRAM

 - **ON/OFF:** Press to turn the product on or off. Starts at 15 minutes.
- **AUTO:** Press to cycle between preset programs, "M1, M2, M3, MANUAL."
- **TIME:** Press to adjust massage time from 5 minutes to 30 minutes.
NOTE: Do not run the massager longer than 30 minutes at a time. Doing so may result in malfunction and possible injury.
- **HEATING:** Press to turn the heating function on/off.
- **SPEED:** Press to cycle between three speeds: "high, medium, and low."
- **DIRECTION:** Press to alter the rotation of the rollers: clockwise & counterclockwise.

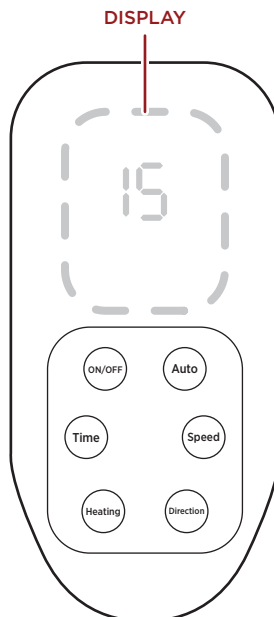

REMOTE DIAGRAM

 - **ON/OFF:** Press to turn the product on or off. Starts at 15 minutes.
- **AUTO:** Press to cycle between preset programs, “M1, M2, M3, MANUAL.”
- **TIME:** Press to adjust massage time from 5 minutes to 30 minutes.
NOTE: Do not run the massager longer than 30 minutes at a time. Doing so may result in malfunction and possible injury.
- **HEATING:** Press to turn the heating function on/off.
- **SPEED:** Press to cycle between three speeds: “high, medium, and low.”
- **DIRECTION:** Press to alter the rotation of the rollers: clockwise & counterclockwise.

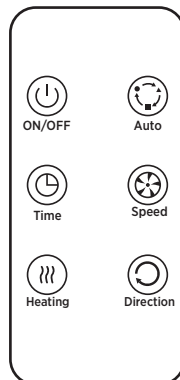

360° ADJUSTABLE BAR

- This bar doubles as an adjustable support and carrying handle.
- Rotate the bar to adjust the angle of the machine and improve your massage experience.
- Make sure the bar is properly locked before use.

HOW TO ADJUST THE BAR

 
1. Press and hold the round buttons on both sides of the machine, then adjust bar angle until it reaches the desired position.
2. Release to lock the bar in position.
NOTE: Make sure the lock is secure when lifting this product.

MASSAGE FUNCTION


1. Plug in the massager and the display will illuminate. Press the “On/Off” button.
NOTE: When using the manual input, make sure the control panel is facing you; this will prevent harm to your feet and ankles.
2. Press the “Auto” button to browse the preset levels of pressure and intensity.
NOTE: This device starts on “M1”
3. Press the “Time” button to adjust the length of your massage. This massager starts on 15 minutes and increases in 5-minute intervals up to a maximum 30 minutes.
4. Press the “Direction” button to adjust the rotation of the massagers.
5. Press the “Speed” button to increase or decrease the frequency of pressure in the rollers.
6. Press the “Heating” button to turn the heat function on/off.
7. Once settings are inputted, gently insert your feet, and enjoy.

FOOT MASSAGING THEORY

MEDIAL SIDE OF BOTH FEET

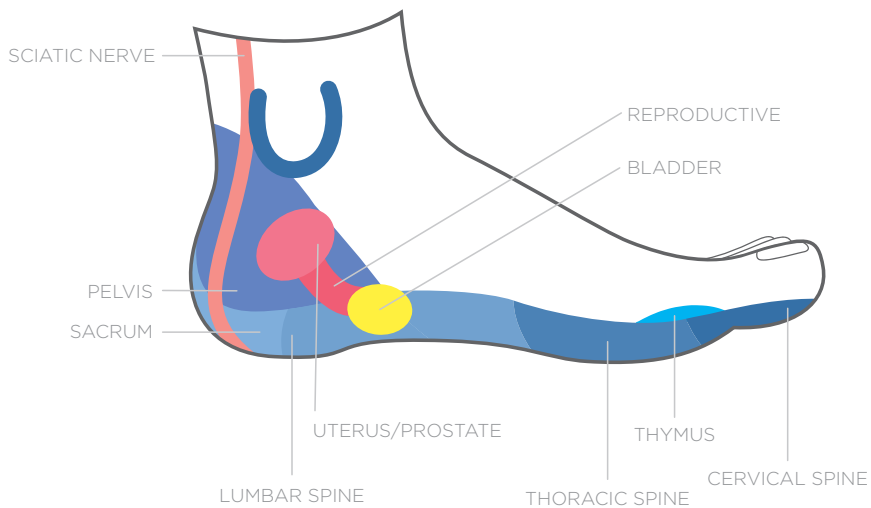

LATERAL SIDE OF BOTH FEET

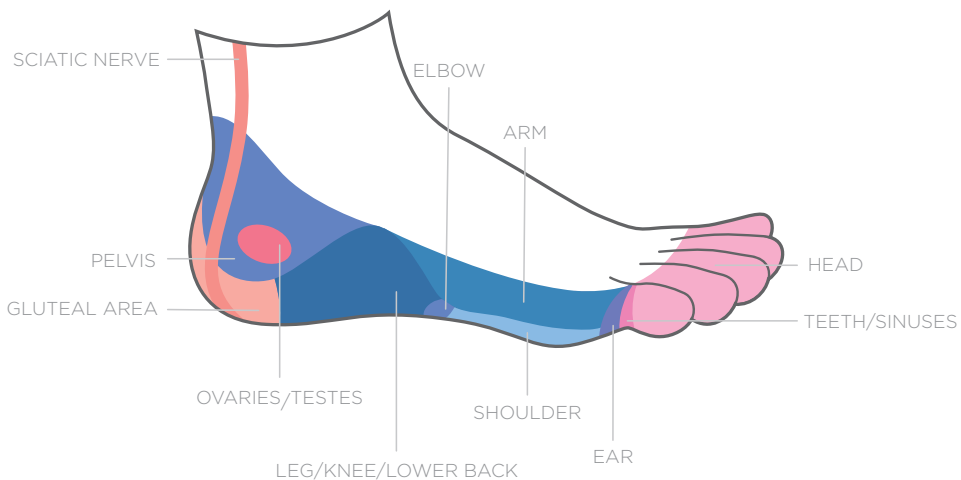 

REFLEXOLOGY DIAGRAM

RIGHT SOLE



LEFT SOLE





**BEST CHOICE
PRODUCTS**

Check out more great products:

[bestchoiceproducts.com](https://www.bestchoiceproducts.com)

Earn points while you shop. Join today!

bestchoiceproducts
rewards\$

Join | Earn | Redeem

Give your friends 15% off their first order! For each successful referral you'll receive 100 points.

bestchoiceproducts.com



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledged by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Tustin, CA 92780

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.