

Salter Megastone 24cm Frypan - Silver

BW05746S1EU7

Please retain instructions for future reference.

Care and use

Before using the cookware for the first time, thoroughly hand-wash it and precondition the non-stick surface by wiping the inside with vegetable oil, heating it gently, allowing it to cool completely, and then wiping clean with a soft cloth. The cookware is suitable for use on gas, electric solid hot plates, halogen, radiant ring, and induction hobs; however, it is not designed for use in a domestic or microwave oven, for deep fat frying, under a grill, or on an open fire or barbecue. To prevent scorching the soft-touch coating on the handles, avoid placing the cookware on hob rings that are larger than the base size or allowing flames to extend beyond the sides. It is appropriate to use heat-resistant plastic, silicone, wooden, or metal utensils under normal conditions, but cutting food directly in the cookware should be avoided as this may damage the surface. Never overheat empty cookware or use it over high heat, as the non-stick coating is only meant for medium heat settings. Always supervise the cookware while in use and ensure the kitchen is well-ventilated. When using ceramic hobs, take care not to scratch the surface by lifting and placing the cookware instead of dragging it. Be mindful that screws on the cookware may loosen over time; they should be retightened as necessary, particularly those on glass lids, as overtightening could cause damage. After use, allow the cookware to cool completely before cleaning, and while it is dishwasher safe, hand-washing is recommended to preserve the finish. Clean it using warm, soapy water with a mild detergent and a soft cloth, avoiding harsh or abrasive cleaners; rinse and dry thoroughly. If stubborn stains persist, a non-abrasive plastic mesh or pad with warm, soapy water may be used. Store the cookware in a dry, clean place, and avoid stacking unless a layer of paper is placed in between to prevent scratching or damage. Take care not to allow handles to overlap adjacent hob rings, as they may become hot during use; always use heat-resistant gloves when moving the cookware. Avoid boiling the cookware dry, exposing it to cold water, or other liquids directly after heating. If the cookware becomes overheated, allow it to cool to room temperature before removing it from the hob, and inspect it for damage prior to subsequent use, disposing of it carefully if any is found. Provided that these care and use instructions are followed, the Salter ten-year guarantee will replace, substitute, or refund any product that fails due to faulty workmanship or materials, although damage resulting from accidents or misuse is not covered under this guarantee, which is in addition to your statutory rights.

Made in **China**.

Manufactured by: UP Global Sourcing UK Ltd, Address: Victoria Street, Oldham, Manchester OL9 0DD. **UK**.

Ultimate Products Europe Ltd, Address: 19 Baggot Street Lower, Dublin, D02 X658. **ROI**.