

# Important safety

Please read carefully

Please retain instructions for future reference.

## SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge, if they have been supervised/instructed and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not perform cleaning or user maintenance, unless they are older than 8 and supervised.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances.
- Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.
- Do not immerse the electrical components of this appliance in water or any other liquid.
- Do not operate the appliance with wet hands or if any connections are wet.
- If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Do not use any damaged accessories.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not move the appliance whilst it is in use.
- Do not touch any moving parts on this appliance during use, as this could cause injury.
- Do not touch any sections of the appliance that may become hot during use, as this could cause injury.
- Always unplug the appliance after use and ensure it has cooled fully before any cleaning, user maintenance or storing away.
- Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
- Use of an extension cord with the appliance is not recommended.
- This appliance should not be operated by means of an external timer or separate remote control system.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.



**CAUTION:** Keep hands, fingers, hair and any loose clothing away from the rotating tools of the appliance.



**WARNING:** Do not touch sharp blades.

UK CE

**EN | Disposal of Waste Batteries and Electrical and Electronic Equipment**



This product is labelled with this crossed out wheel bin symbol in accordance with European Directive 2012/19/EC to indicate that it must not be disposed of with your other household waste. Due to the presence of hazardous substances, mixtures or components, electrical and electronic devices that are not subject to selective sorting are potentially dangerous to the environment and human health. Please check your local city office or waste disposal service for the return and recycling of this product.

Manufactured by:  
Ultimate Products UK Ltd.,  
Victoria Street, Manchester OL9 0DD. **UK.**  
Ultimate Products Europe Ltd.,  
19 Baggot Street Lower, Dublin D02 X658. **ROI.**  
**MADE IN CHINA.**

CD260324/MD000000/V1

## Storage

Reassemble the hand blender.

Check that the hand blender is cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the hand blender; wrap it loosely to avoid causing damage.

## Specifications

Product code: EK6215


Input: 220–240 V ~ 50–60 Hz

Output: 200 W

Power consumption (off mode): 0.11 W

# User manual

Hand blender

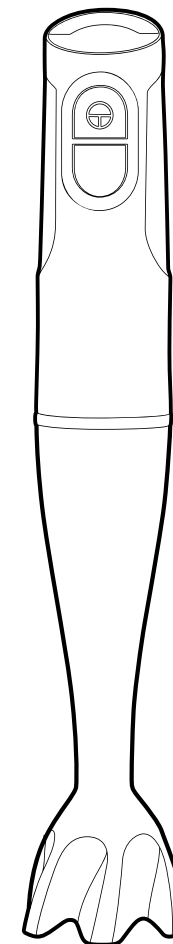

To register for your extended guarantee, scan the QR code or visit [guarantee.upplc.com/progress](http://guarantee.upplc.com/progress) and register your product within 30 days of purchase. For any further queries, visit [www.progresscookshop.com](http://www.progresscookshop.com).

Manufactured by:  
Ultimate Products UK Ltd.,  
Victoria Street, Manchester OL9 0DD. **UK.**  
Ultimate Products Europe Ltd.,  
19 Baggot Street Lower, Dublin D02 X658. **ROI.**


**MADE IN CHINA.**

©Progress trademark. All rights reserved.

CD170720/MD240925/V3

**progress**<sup>since 1931</sup>

**Description of parts**

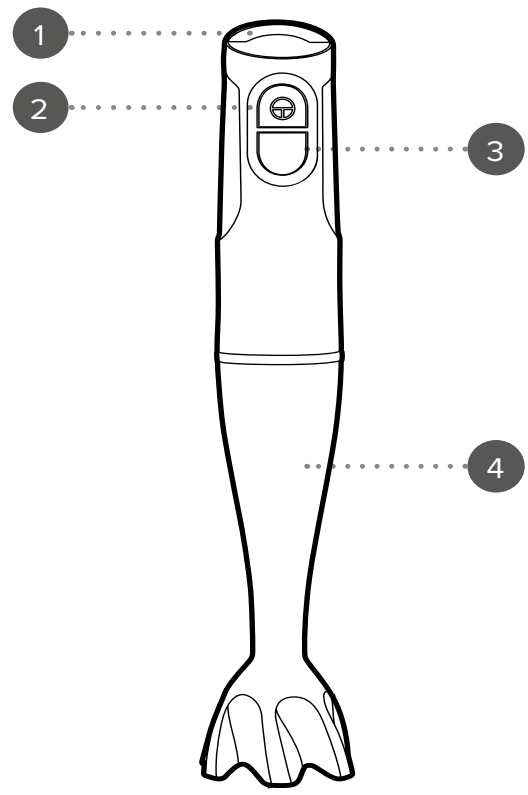

- 1. Hand blender unit
- 2. Power button
- 3. Turbo button
- 4. Blender attachment


Please retain instructions for future reference.


**Dos and don'ts**


- ✓ Switch off the hand blender and disconnect it from the mains power supply before changing or fitting accessories.
- ✗ Do not dry blend ingredients; always add a small amount of liquid.  
Do not use attachments or cutting/rotating blades if they are loose, damaged or broken.

**Care and maintenance**

- STEP 1:** Switch off and unplug the hand blender from the mains power supply before performing any cleaning or user maintenance.
- STEP 2:** Wipe the hand blender unit with a soft, damp cloth and allow to dry thoroughly.
- STEP 3:** Wash the accessories in warm, soapy water, then rinse and dry thoroughly.

 **NOTE:** The hand blender should be cleaned after every use. The hand blender is not suitable for use in a dishwasher.


 **CAUTION:** Handle the attachments with care, as the blades are sharp. Exercise caution when attaching, removing, cleaning or storing the attachments. If the blades get stuck, unplug the hand blender before removing the ingredients that block the blades.

 **WARNING:** Do not use harsh or abrasive detergents or scourers to clean the blender, as this could cause damage. Never touch the chopping blades; using extreme caution, clean the blades with a brush and dry carefully.

**Instructions for use**


**Before first use**


Before connecting to the mains power supply, clean the hand blender following the instructions in the section entitled '**Care and maintenance**'.

 **NOTE:** When using the hand blender for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the hand blender.

**Using the hand blender**

- STEP 1:** Before connecting the hand blender to the mains power supply, carefully attach the blender attachment to the hand blender unit by aligning the tabs and twisting in an anticlockwise direction until it clicks into place.
- STEP 2:** Place the food to be blended into a suitable bowl.
- STEP 3:** Plug in and switch on the hand blender at the mains power supply.
- STEP 4:** Holding the bowl steady, put the blade of the blender attachment into the food and press and hold the desired function button on the hand blender unit.
- STEP 5:** Once the food has been blended to the required consistency, release the button and wait for the blade to stop rotating before removing the hand blender from the bowl.
- STEP 6:** To remove the blender attachment from the hand blender, twist in a clockwise direction and pull away from the hand blender.

 **CAUTION:** The blender attachment must be securely fitted before use; do not attempt to remove it until the blades have stopped moving. Switch off and unplug the hand blender from the mains power supply before attempting to remove the blender attachment and before cleaning.

 **WARNING:** Do not operate the hand blender without food, as this can cause damage. Maximum operation time is approx. 30 seconds. Allow to cool for approx. 2 minutes before using the hand blender again.

**Troubleshooting**

Problem	Possible cause	Solution
The hand blender will not operate.	The hand blender is not connected to the mains power supply.	Plug in and switch on the hand blender at the mains power supply.
The blades will not move when in contact with ingredients.	The ingredients are hard vegetables such as potato, carrot and turnip, making it difficult for the hand blender to blend.	Only blend soft ingredients such as cooked vegetables or soft fruit.