





















INSTRUCTION MANUAL

10-in-1 Multi-Game Table

SKY5163 Ver. 3

(!) NOTICE

Please retain these instructions for future reference.

- Please read all instructions before attempting to install or assemble this item. Assembly should be done by adults only.
- This product contains small parts for assembly. Keep small children and pets away during assembly.
- Do not stand on or use any part of this set as a step ladder.
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Be aware that some parts are heavy and have sharp edges.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

AGE RANGE: 3 years old and up

TOOLS REQUIRED







 






 
HARDWARE

 























PARTS

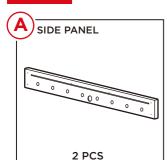


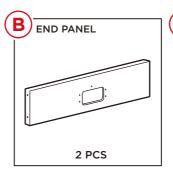





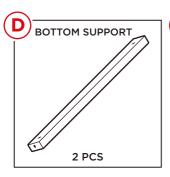





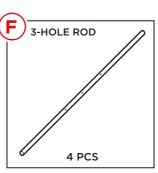


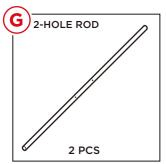


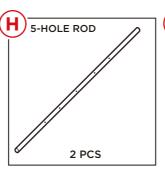

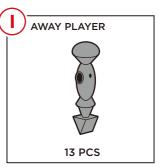


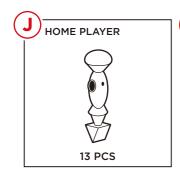


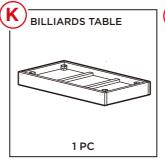

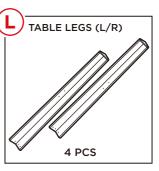


PARTS

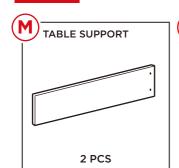

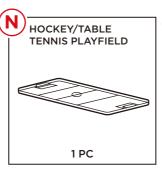





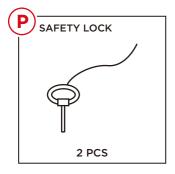



ACCESSORIES




 

 

 


   























▲ WARNINGADULT ASSEMBLY REQUIRED


▲ WARNING

CHOKING HAZARD - Small parts.
Not for children under 3 years old.


PRODUCT ASSEMBLY

Position two part A side panels upside down with the ball entry hole closer to the floor. Attach a part B end panel with four part 2 screws.


Flip part C soccer playfield upside down and slide it into the designated slots.

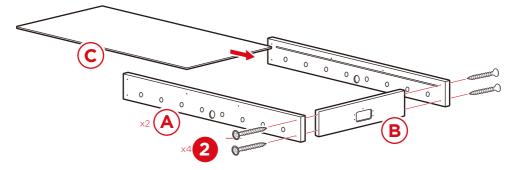

Attach another part B end panel and two part D bottom supports with eight part 2 screws.

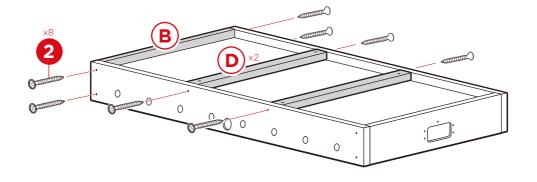


Flip the game table over. Attach two part E goal boxes with eight part 1 screws.

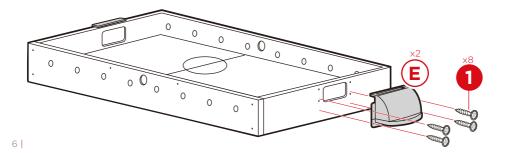


PRODUCT ASSEMBLY

Slide the appropriate number of part I and J away/home players onto the part F, G, and H rods. Slide two part 6 rubber bumpers onto each rod, one bumper on each side.

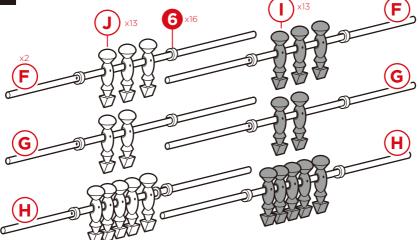

Slide one end of a rod into the designated hole, then slide the other end into the opposite hole. Repeat for all rods.


Secure players with twenty-six part 4 bolts and twenty-six part 7 nuts, one bolt/nut per player.

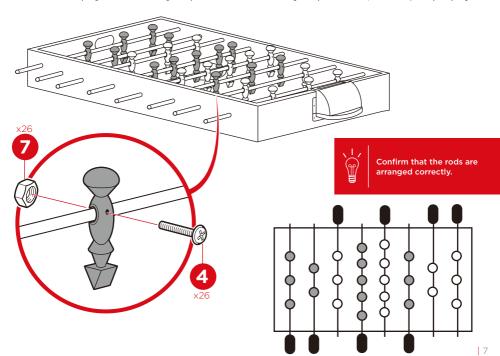

PRODUCT ASSEMBLY

6

Slide eight part 9 handles and eight part 8 end caps onto the rods, a handle and end cap per rod.

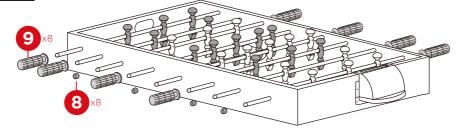


7

Flip the part K billiards table upside down. Attach four part L table legs (L/R) with twelve part 3 screws and twelve part 5 washers, three screws/washers per leg.

Note: Make sure screw holes on table legs align with the billiards table.

Attach two part M table supports with eight part 1 screws. Screw in four part 10 feet.

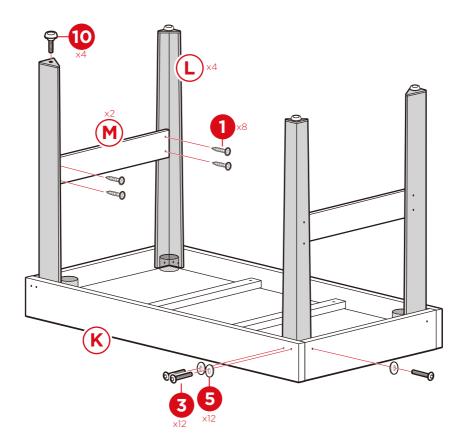

PLAYING GAMES

Rearrange the game table depending on the game you would like to play.

Billiards
 Checkers

• Foosball • Backgammon


Table hockey
 Shuffleboard

• Table tennis • Bowling

• Chess • Cards

Foosball:

Place the foosball table onto the frame of the billiards table and lock it with two part P safety locks, one on each side.

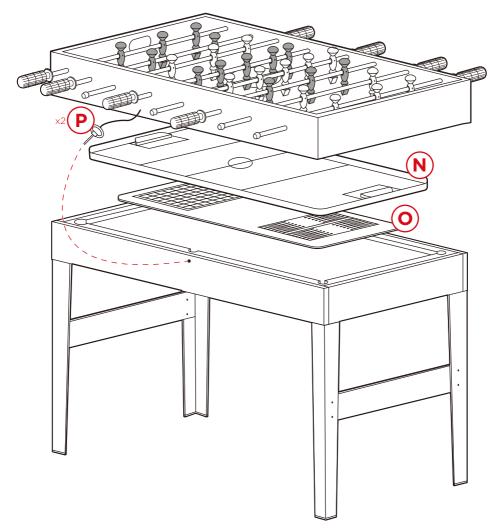

PLAYING GAMES

Multi-game board/hockey:

Place the part O multi-game board and part N hockey/table tennis playfield on the billiards table.

• Adhere the felt pads to the hockey pushers.


 


Table Tennis:

Flip part N to the table tennis playfield and place it on the billiards table. Insert the table tennis net into the designated holes.

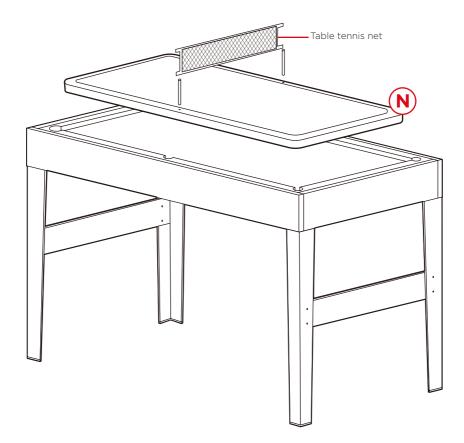

Earn points while you shop. Join today!

bestchoiceproducts reward\$ Join | Earn | Redeem

Give your friends 15% off their first order! For each successful referral you'll receive 100 points.

bestchoiceproducts.com



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com











Chat Support

Product Inquiry

Orders FA

Product Assembly

Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

△WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.