 
 


CAM LOCK FASTENER ASSEMBLY INSTRUCTIONS

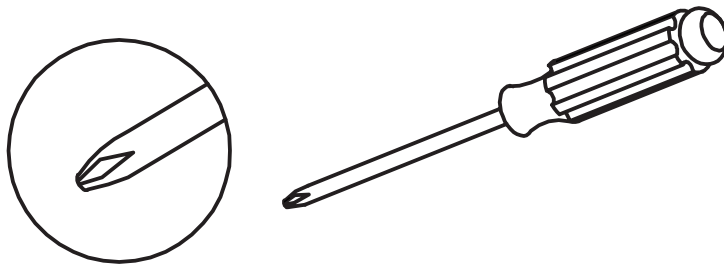 


Note: Every cam lock bolt must have a cam lock connector in order to fasten the parts together.


- (1)** Secure the threaded end of the cam bolt by using a screwdriver.

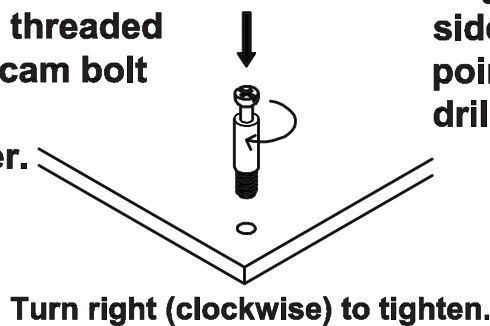

Align the cam connector with its side opening (or arrow) pointing to the small drilled hole.

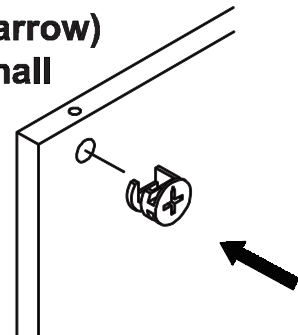

 
(2)

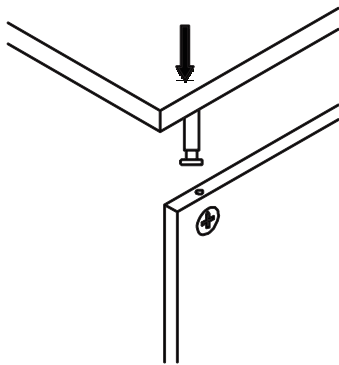


Insert the cam lock bolt into the pre-drilled hole above the cam connector.

(3)

 Two parts should fit snugly against each other.

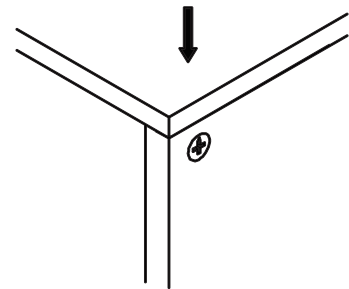

 (4)

 
 
 
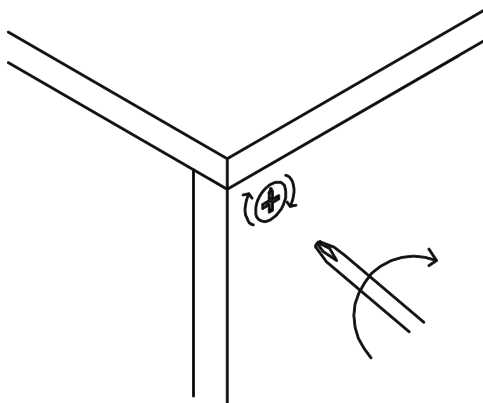 



 


 
 

 
 


 



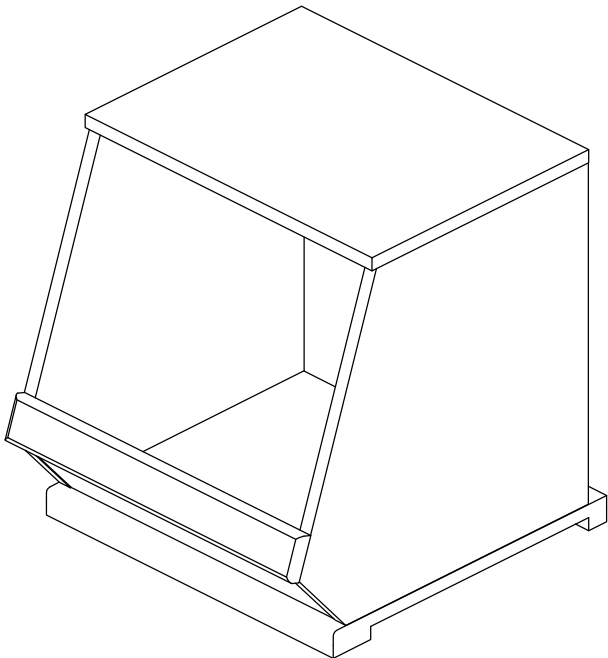 
Turn right (clockwise) to tighten.

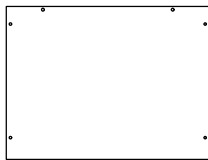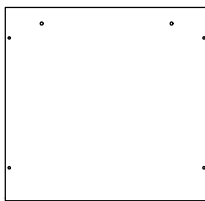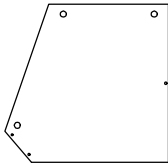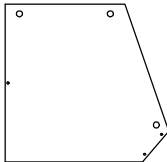Turn the cam connector with a screwdriver until it will not turn any more with light to moderate force.

ASSEMBLY INSTRUCTION

681A-1(3A) STACKABLE BOX 1 OPEN


A	Top Panel	B	Bottom Panel	C	Left Side Panel	D	Right Side Panel				
											
1pc		1pc		1pc		1pc					
E	Front Lower Panel	F	Front Panel	G	Back Panel						
											
1pc		1pc		1pc							
H	Minifix	I	Cam 0.47"	J	Wood Dowel	K	Screw 1.5"				
											
10pcs		10pcs		6pcs		4pcs					
L	Screw 1.26"	M	Glue								
											
2pcs		1pc									
N	Wall Anchor 1"	O	Screw #4x5/8"	P	Wall Hanger	Q	Bracket	R	Screw 0.14"x0.47"	S	Cable Tie 11.62"L
											
1pc		1pc		1pc		1pc		2pcs		1pc	




This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

***** Do not tighten screws & bolts until the entire unit is completely assembled.**

 
- 1** Insert Minifix(H) into the Top Panel(A), Right & Left Side Panel(C)(D) and Front Panel (F). Before insert Wood Dowel(J), using the Glue(M) into the Back Panel(G) of dowel holes.

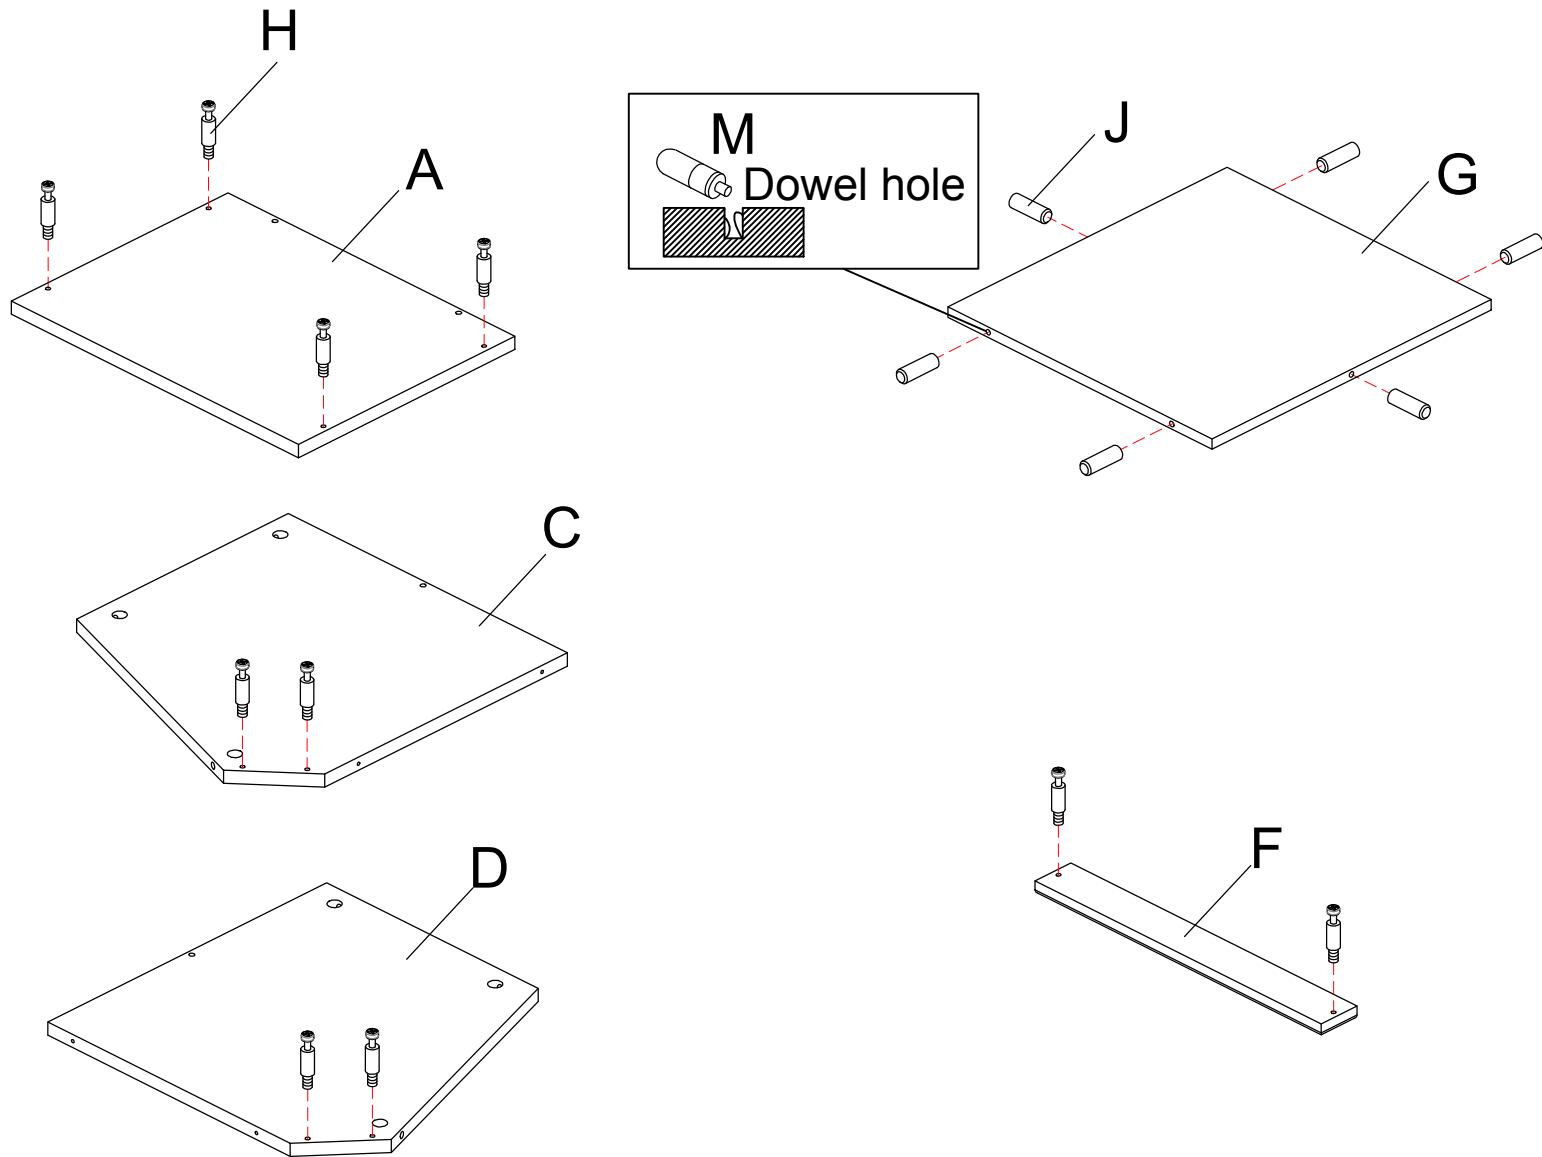

 
- 2** Assemble Left Side panel(C), Right Side Panel(D), Back Panel(G) and Front Lower Panel(E), using screwdriver (not provide) with Cam(I).

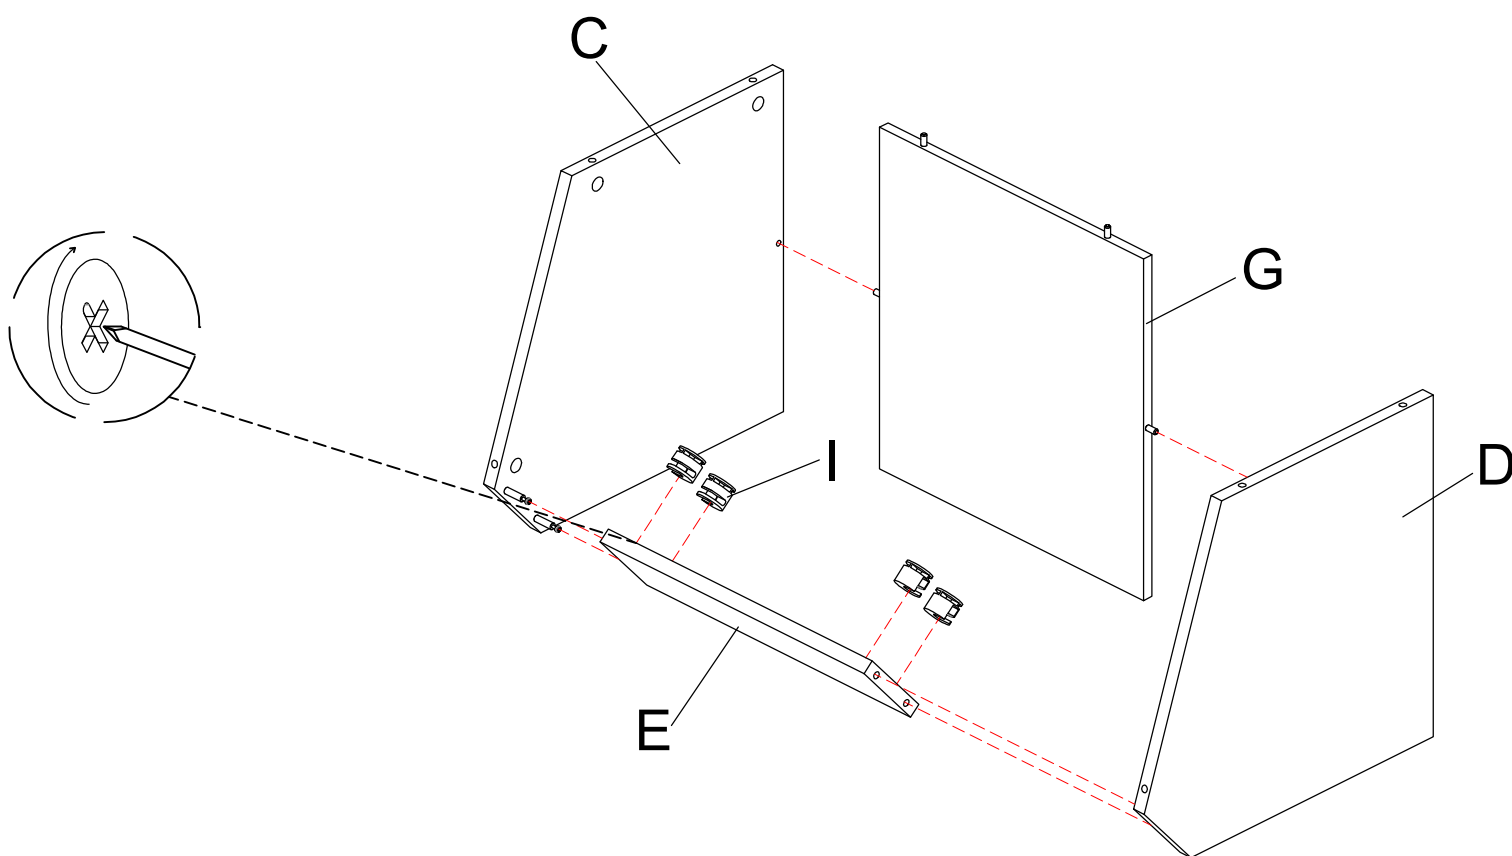

 
- 3** Insert Cam(I) into the Left & Right Side Panel(C)(D), to connect Front Panel(F), using screwdriver (not provide) with Cam(I).

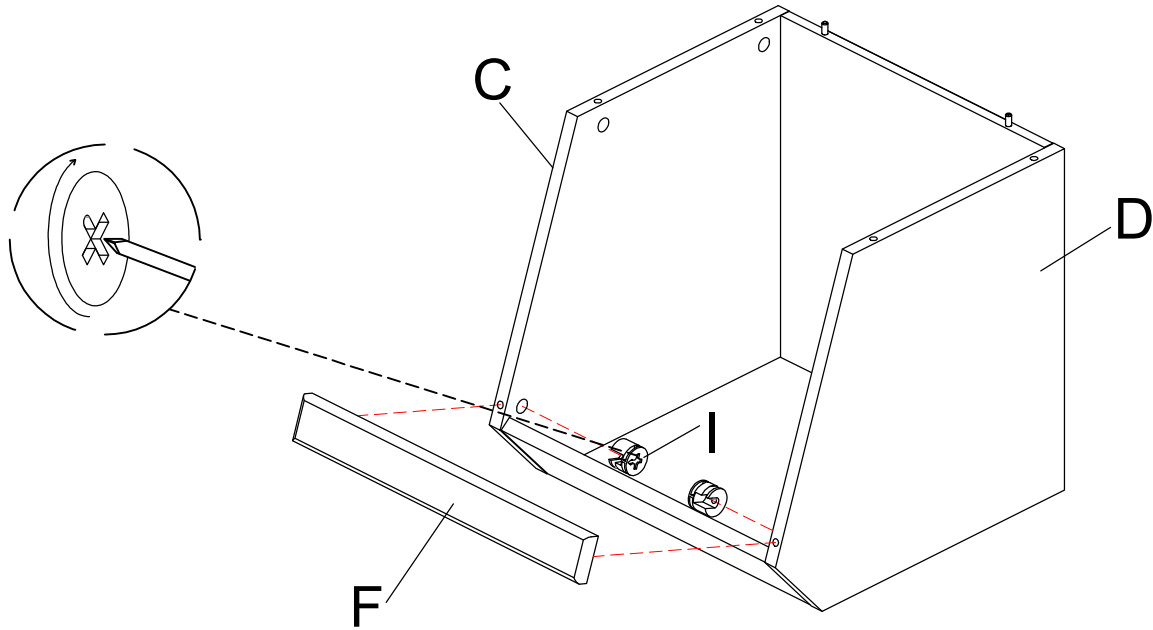

 - 4** Assemble Top Panel(A) to connect Left & Right Side Panel(C)(D) and Back Panel(G), using screwdriver (not provide) with Cam(I).

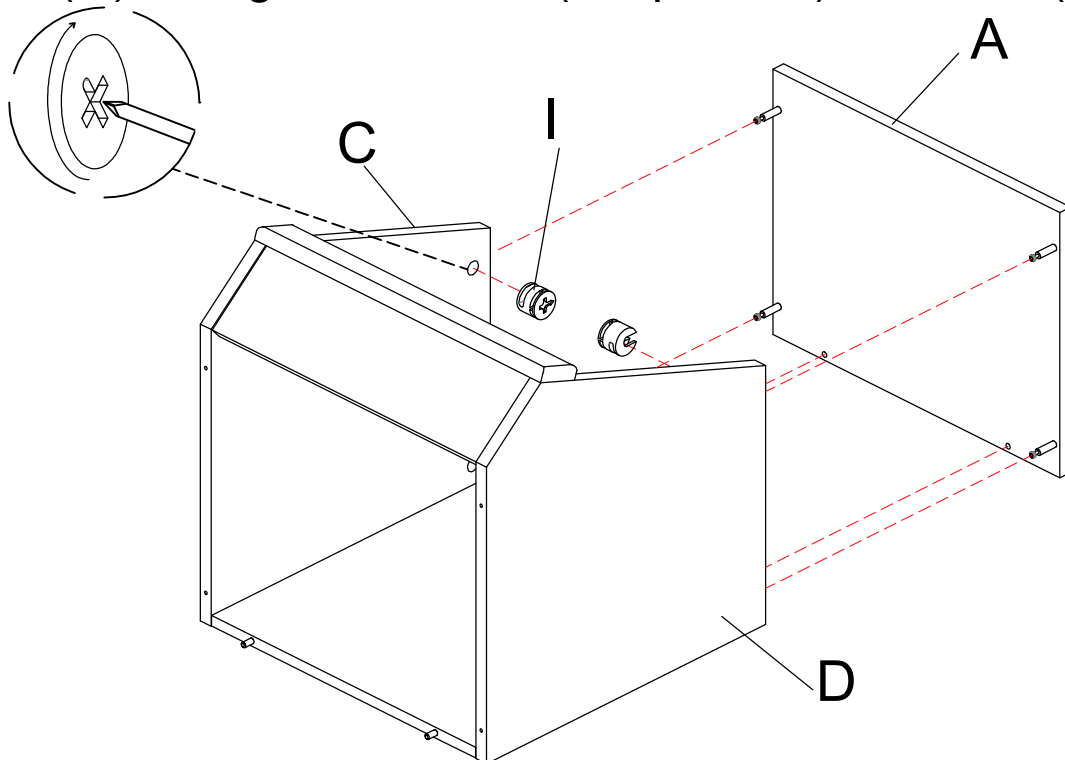


 - 5** Insert Screws(K) into the Left & Right Side Panel(C)(D) to connect Bottom Panel(B).

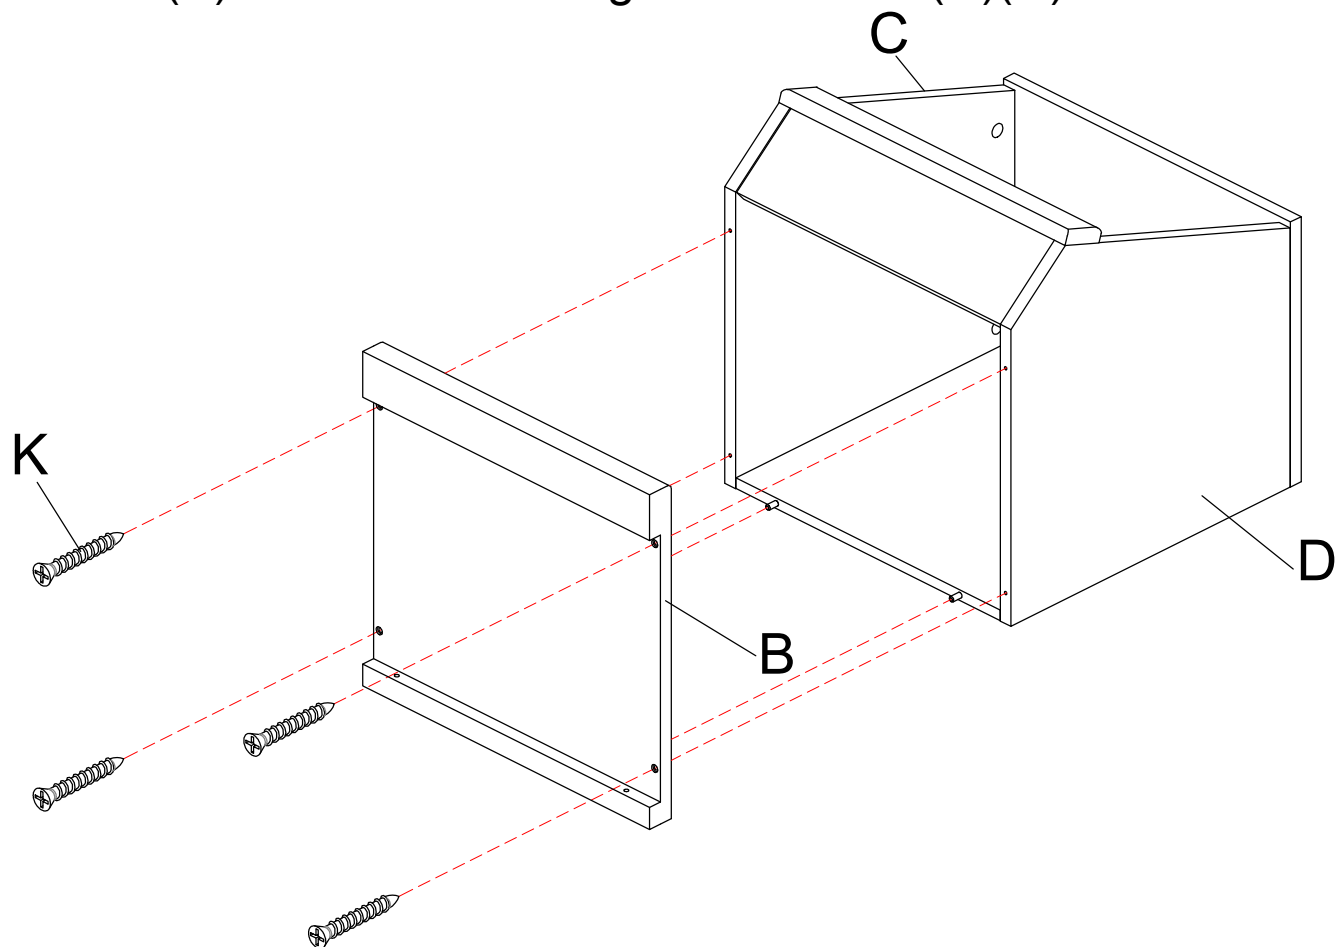

6

 Drill a 7mm hole on the wall and fix Wall Anchor(N) into it, then fasten Screw(O) on Wall Anchor(N) through Wall Hanger(P). Using Screw(R) fasten Bracket(Q) onto the panel and hitching Bracket(Q) and Wall Hanger(P) by Cable Tie(S).

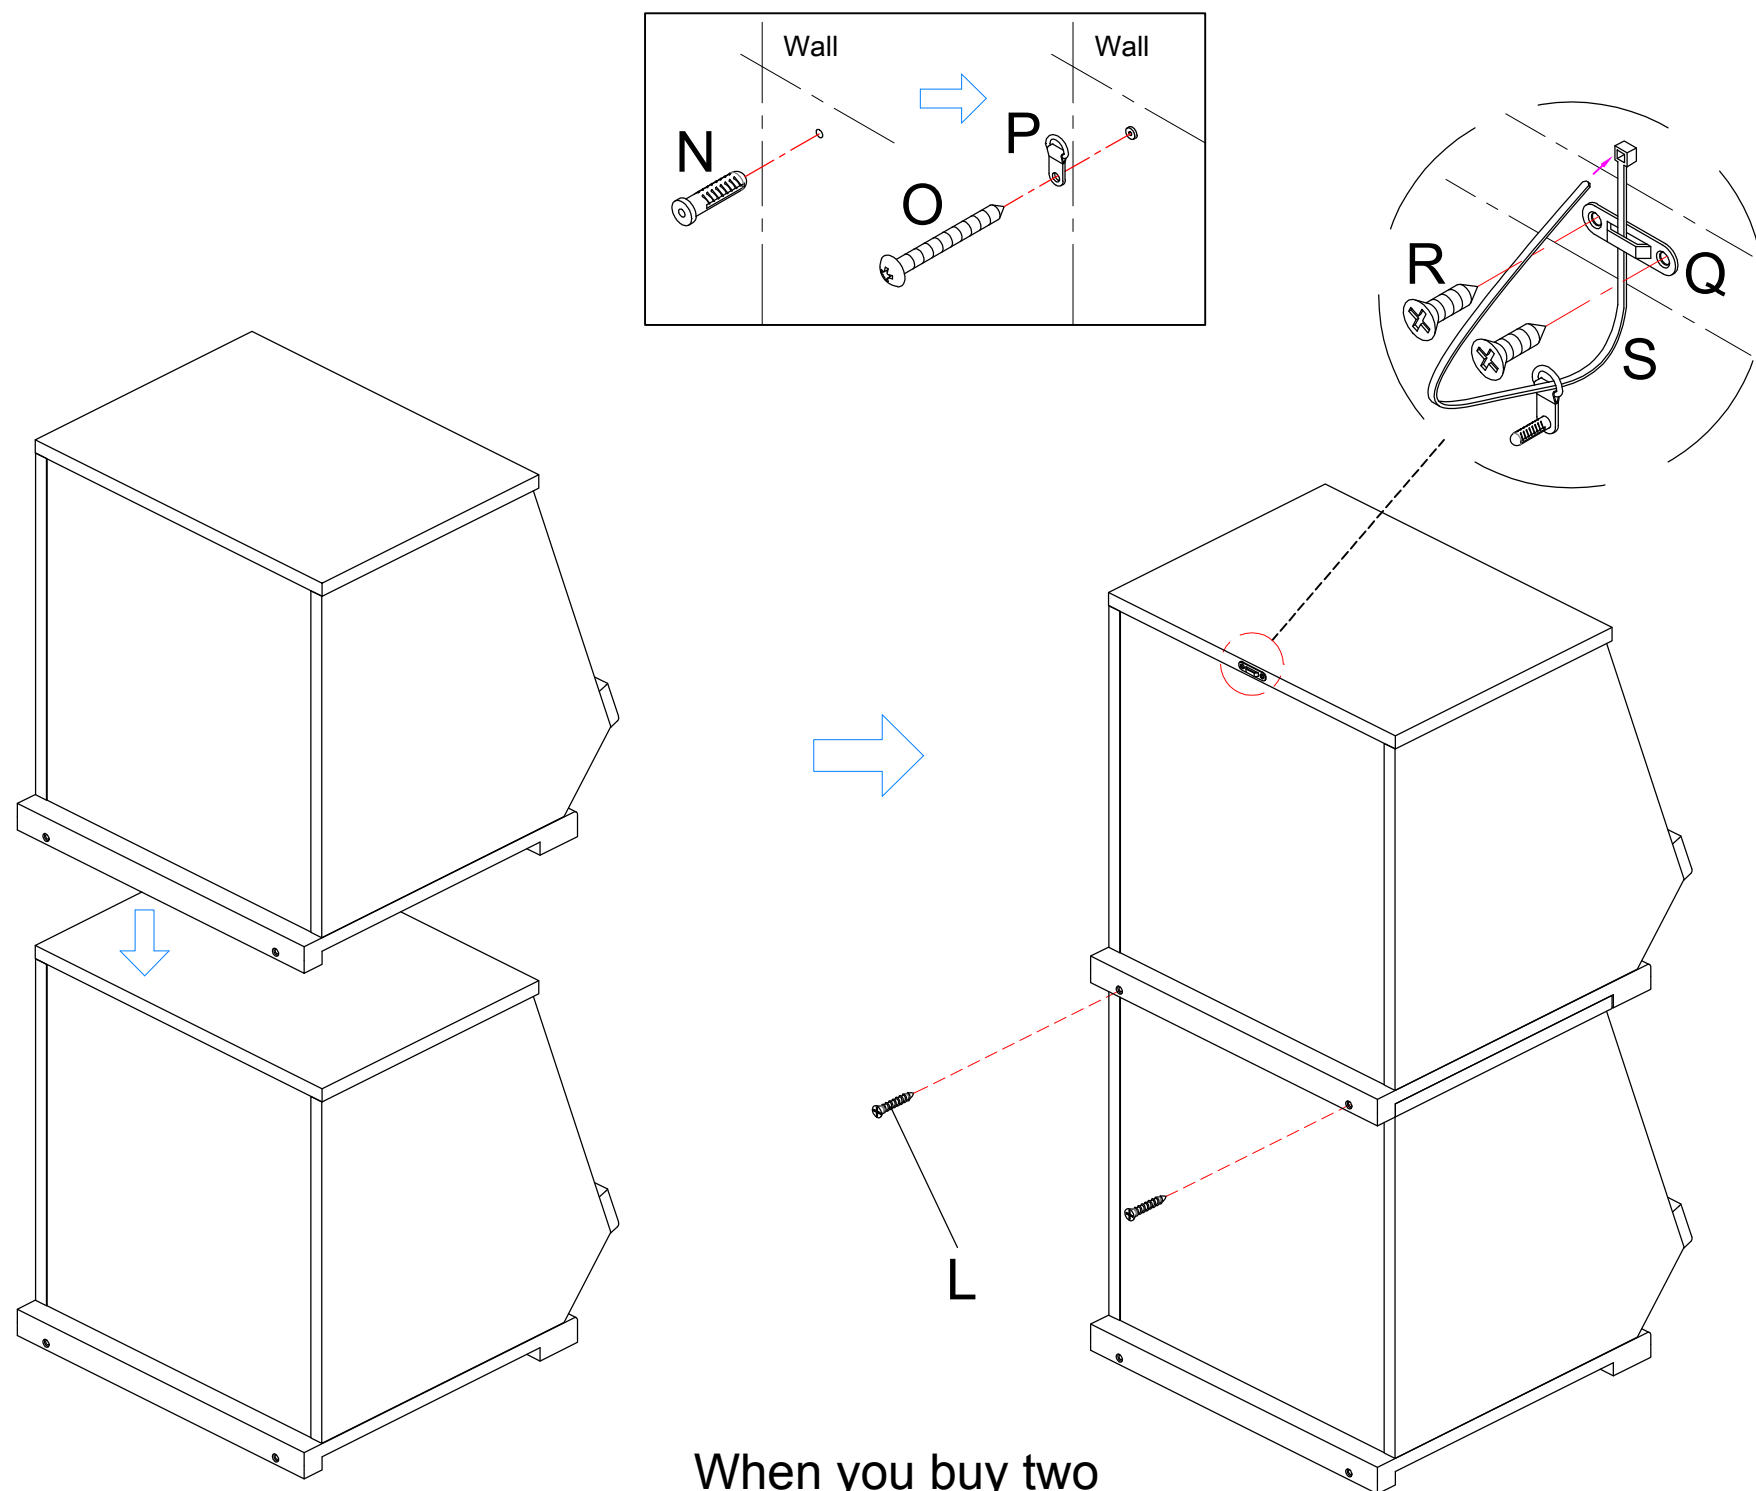

When you buy two boxes, please insert Screw (L) to connect.

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are right.