 
 
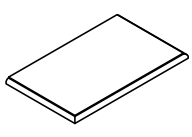 
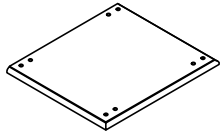 
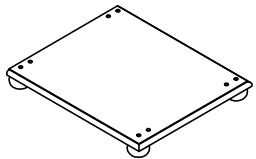 


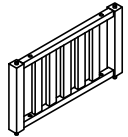


 
 

 



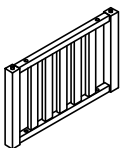



ASSEMBLY INSTRUCTION

E334-04(N1) END TABLE


A Table Top  1pc	B Middle Panel  1pc	C Bottom Panel  1pc	D Upper Back  1pc
E Lower Back  1pc	F Upper Post - Left  1pc	G Upper Post - Right  1pc	H Lower Post - Left  1pc
I Lower Post - Right  1pc	J Bolt $\text{\O}1/4\text{"}\times 50\text{mm}$  2pcs	K Bolt $\text{\O}1/4\text{"}\times 32\text{mm}$  8pcs	L Bolt $\text{\O}1/4\text{"}\times 15\text{mm}$  8pcs
M Lock Washer $\text{\O}1/4\text{"}$  18pcs	N Flat Washer $\text{\O}1/4\text{"}\times 15\times 1.5\text{mm}$  18pcs	O Angle Iron $30\times 18\times 20\text{mm}$  4pcs	P Allen Key M4  1pc
Q Wood Dowel $\text{\O}8\times 30\text{mm}$  8pcs			

  This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

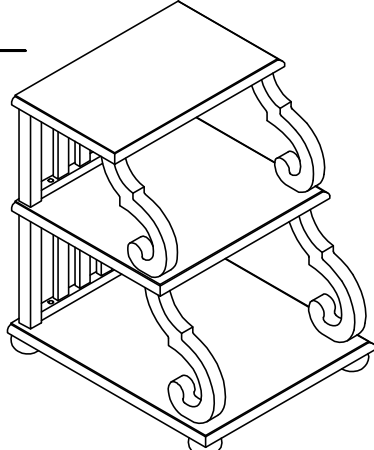
- 1** Put Table Top (A) on a smooth flat surface, attach the Upper Back (D) to Table Top (A), using Wood Dowel (Q) on holes of Table Top (A). then using Bolt (K), Lock Washer (M) and Flat Washer (N) on holes of Upper Back (D) by Allen Key (P). Attach the Upper Post - Left (F) & Upper Post - Right (G) to the Table Top (A), using Bolt (L), Lock Washer (M) and Flat Washer (N) on holes of Angle Iron (O) by Allen Key (P).

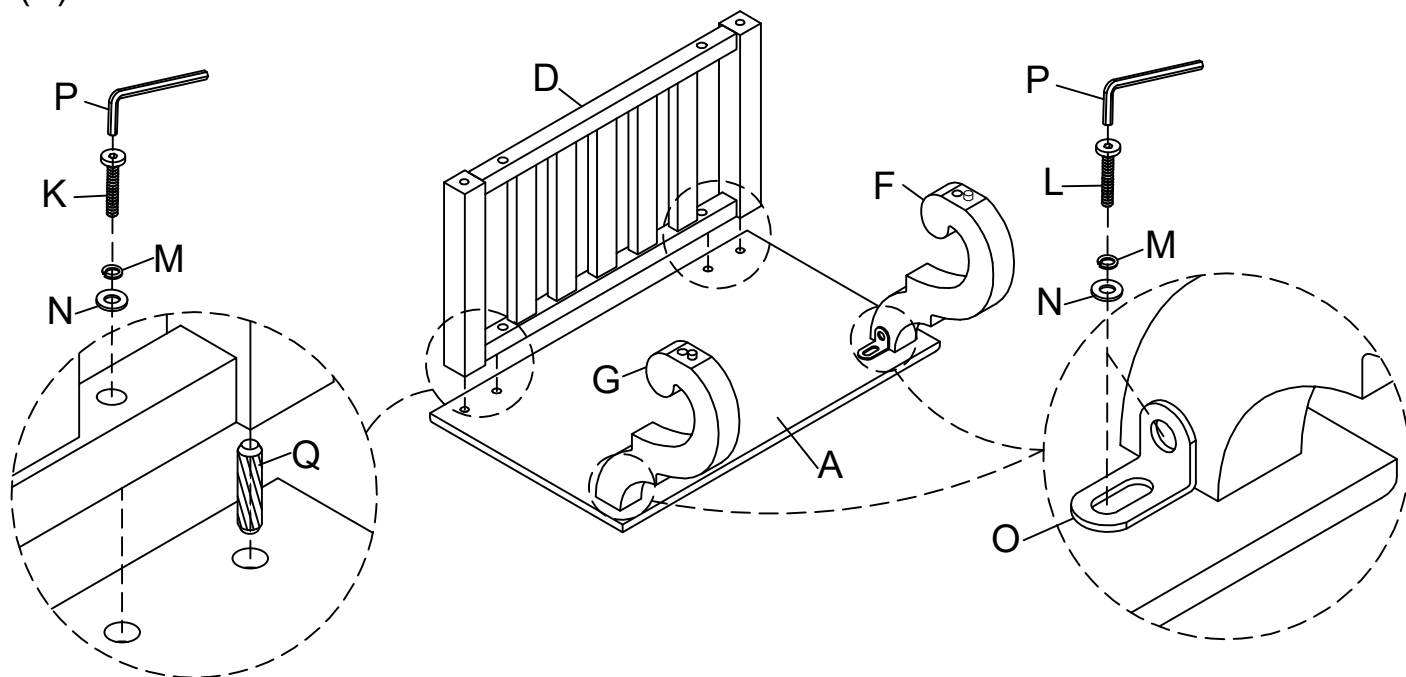 

 
- 2** Attach Upper Back (D) & Lower Back (E) to the Middle Panel (B), using Wood Dowel (Q), then using Bolt (J), Lock Washer (M) and Flat Washer (N) on holes of Lower Back (E) and through holes of Middle Panel (B) by Allen Key (P). Attach Middle Panel (B) to Upper Post - Left (F) & Upper Post - Right (G), then using Bolt (K), Lock Washer (M) and Flat Washer (N) by Allen Key (P).

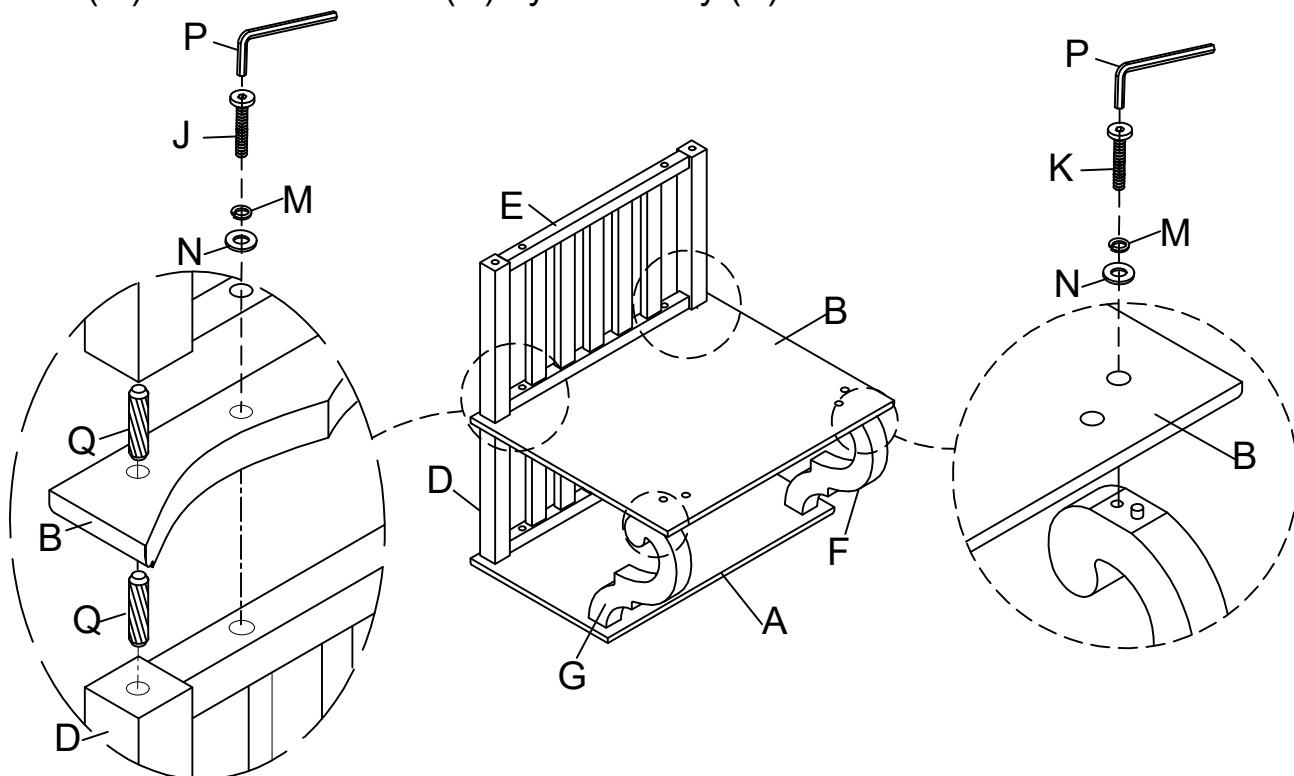

3 Attach Lower Post - Left (H) & Lower Post - Right (I) to Middle Panel (B), using Bolt (L), Lock Washer (M) and Flat Washer (N) on holes of Angle Iron(O). Turn the Allen Key (P) in Bolt (L).

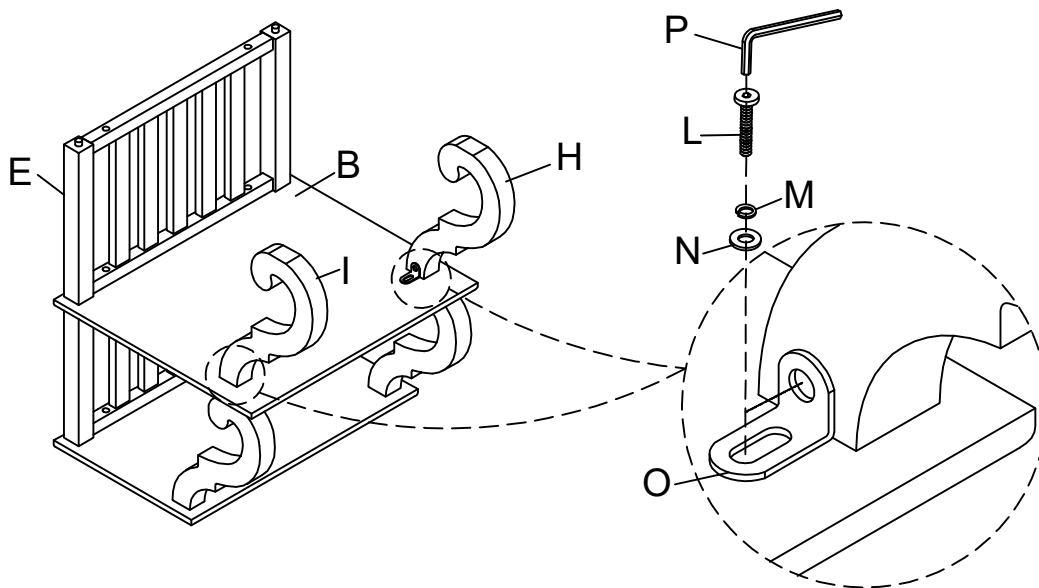 

4 Attach Bottom Panel (C) to Lower Back (E), Lower Post - Left (H) and Lower Post - Right (I) using Wood Dowel (Q), and then using Bolt (K), Lock Washer (M) and Flat Washer (N) on holes of Bottom Panel (C) by Allen Key (P).

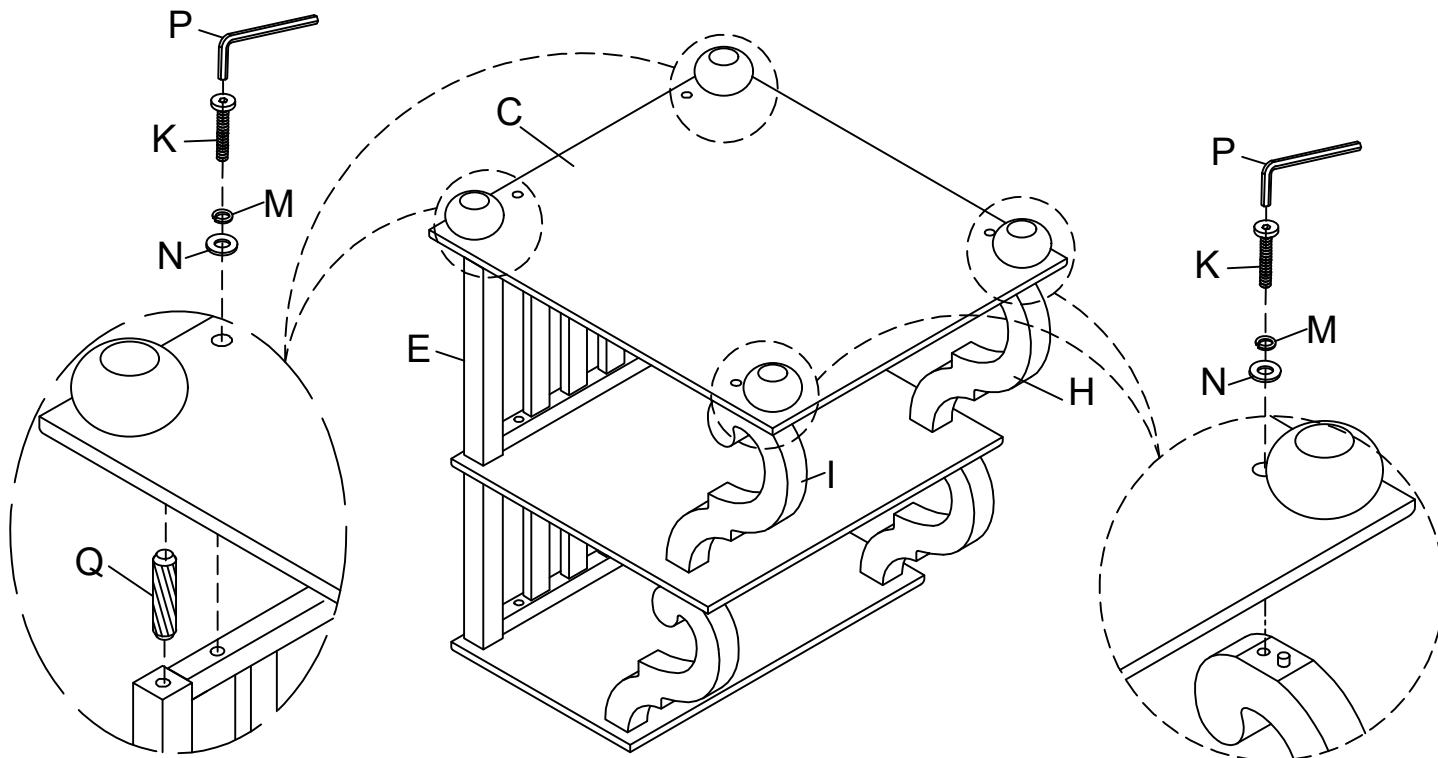 

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.