

HOW TO DISASSEMBLE

Remove the top panel and the side panels.



REMOVE
TOP PANEL

© 2010 IKEA