

ASSEMBLY INSTRUCTION

 
DOUBLE PEDESTAL DINING TABLE

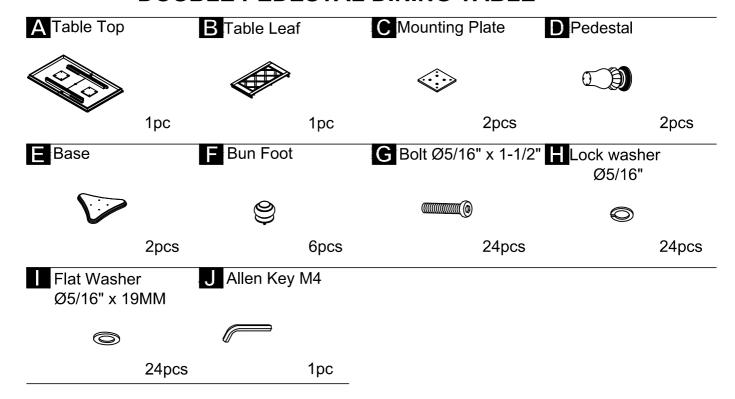

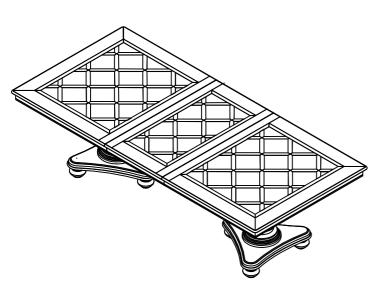


This page lists all the contents included in the box. Please take the time to indentify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

Place the Pedestal (D). Tighten the Mounting plate (C) on the face by bolts (G), lock washers (H) and flat washers (I) with allen key (J).




Take the Allen Key, and turn the bolts until the Mounting Plate are secure. DO NOT TIGHTEN COMPLETELY. Stop when feel you are adding force to tighten the bolt.


Place the Pedestal (D) upside down . Tighten the Base (E) on the face by bolts (G), lock washers (H) and flat washers (I) with allen key (J).

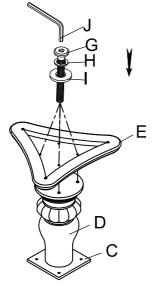


Place the Pedestal (D) upside down . Tighten the Bun Foot (F).

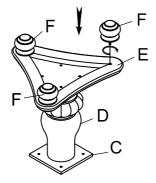


Place the Pedestal (D) upside side. Tighten the Mounting plate (C) to Table top(A) by bolt(G), lock washers (H) and flat washers (I) with allen key (J). Open the lock under Table top(A).

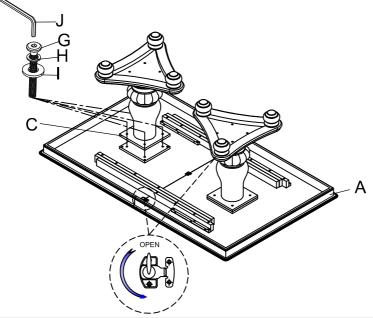

Place the Table Leaf (B) into the Table Top (A).

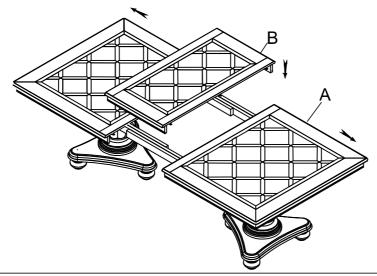

Fixed the Table Top (A) and the Table Leaf (B) by lock.

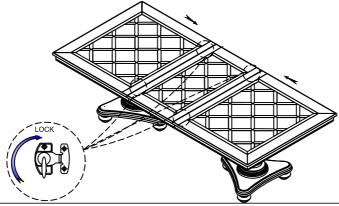

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surface with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen overtime. Periodically check that all connections are tight.