

LANGLEY 74W ENTERTAINMENT CONSOLE



ASSEMBLY INSTRUCTIONS




PARTS PACKING CONFIGURATIONS

A. CONSOLE 1 PC	B. LEG 4 PCS	C. SUPPORT LEG 1 PC

FULLY ASSEMBLED

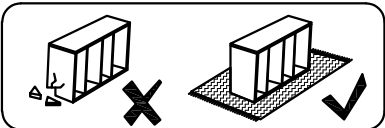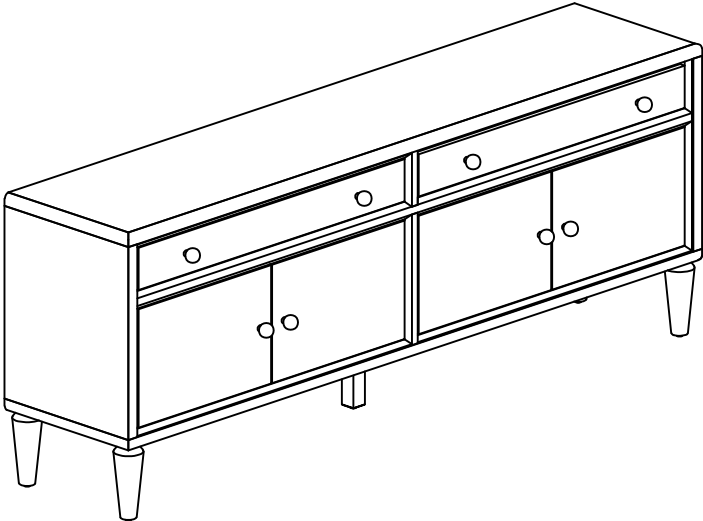

STEP 1:

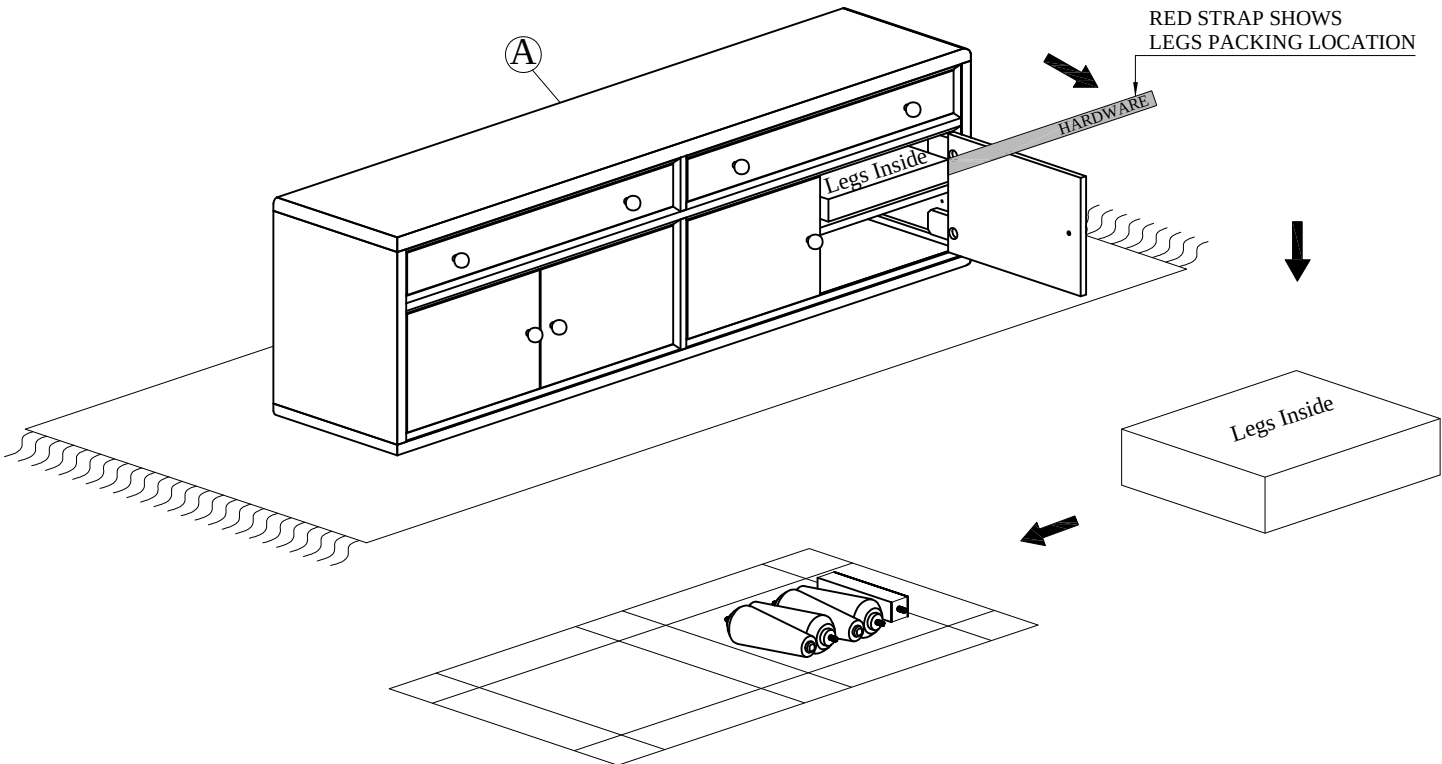


LANGLEY 74W ENTERTAINMENT CONSOLE


ASSEMBLY INSTRUCTIONS

MODUS
FURNITURE

STEP 2:

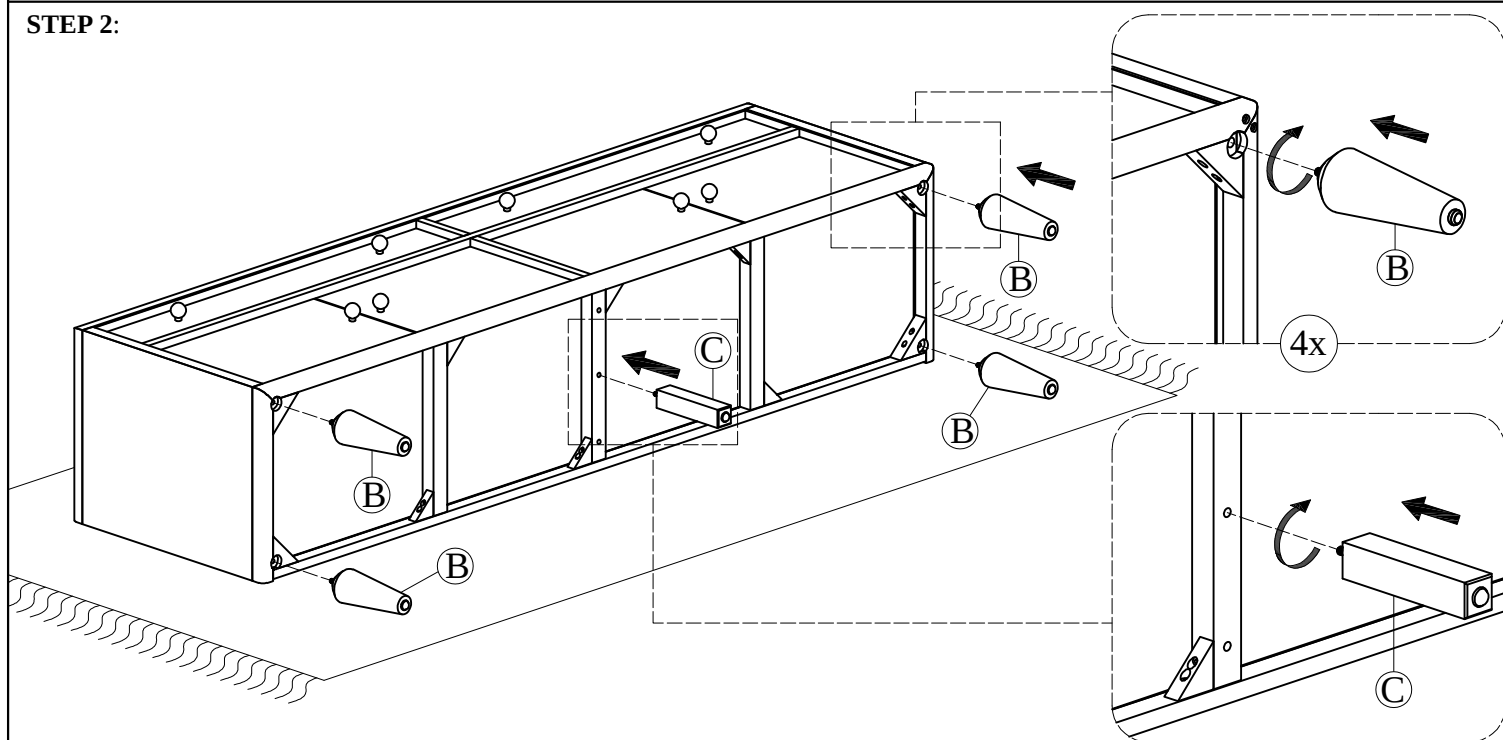

STEP 3:

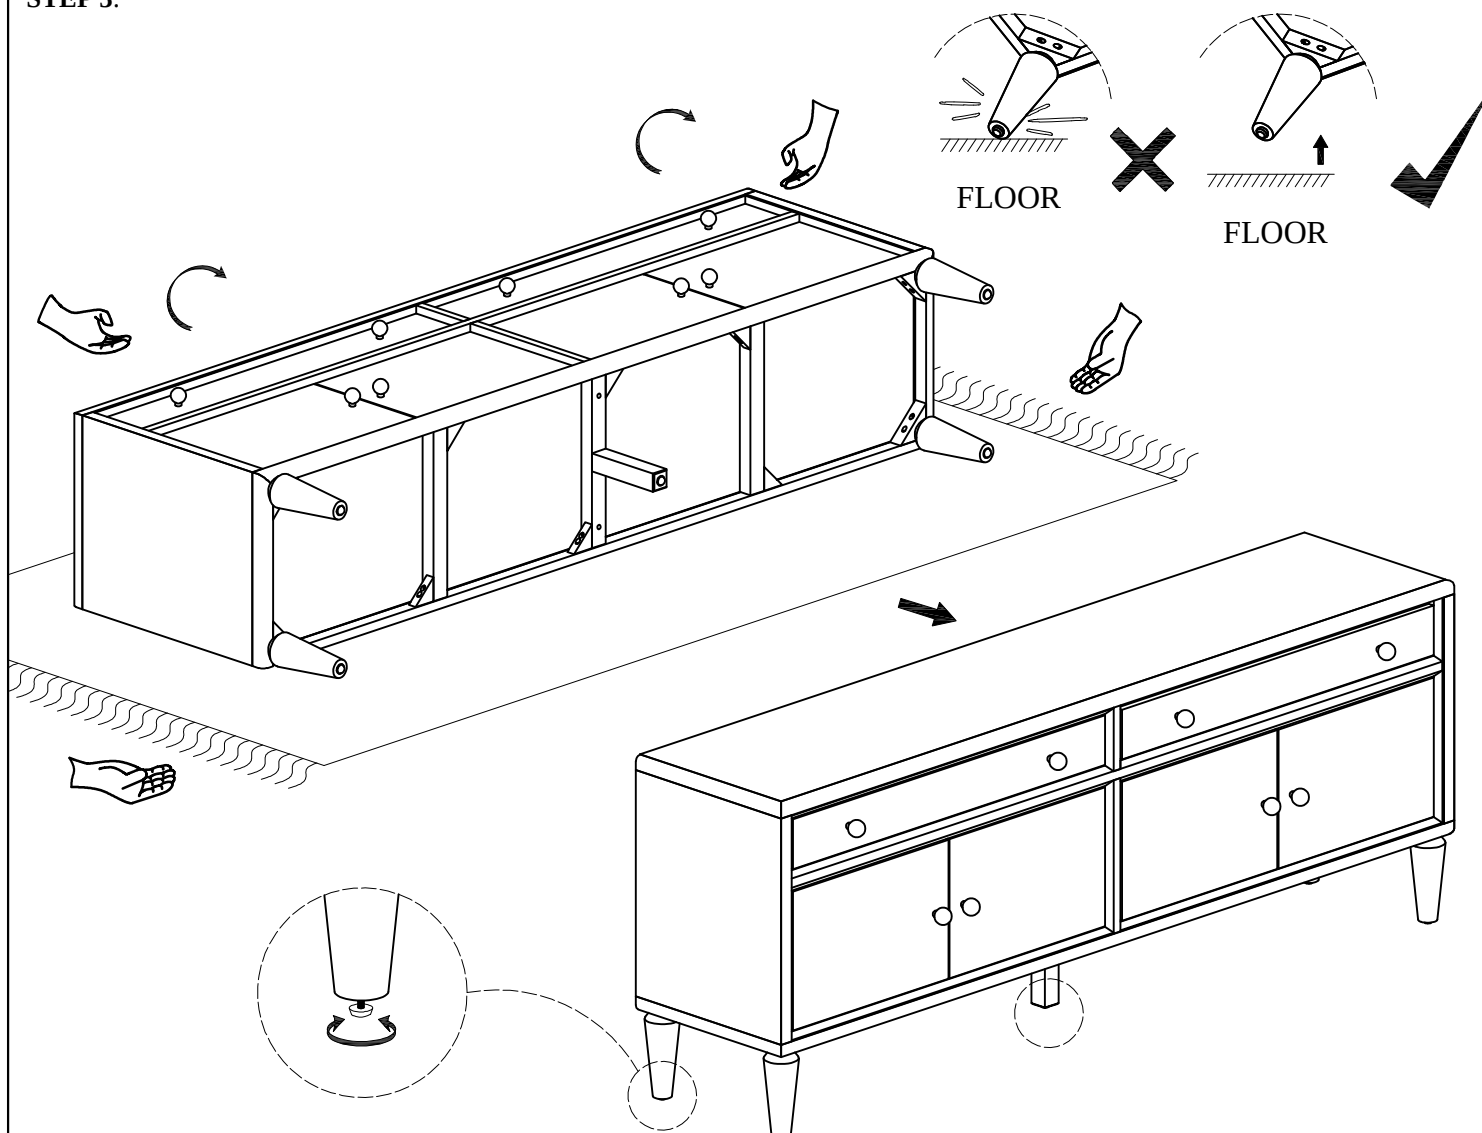

ASSEMBLY COMPLETE

PAGE 2 OF 2