

## ASSEMBLY INSTRUCTION




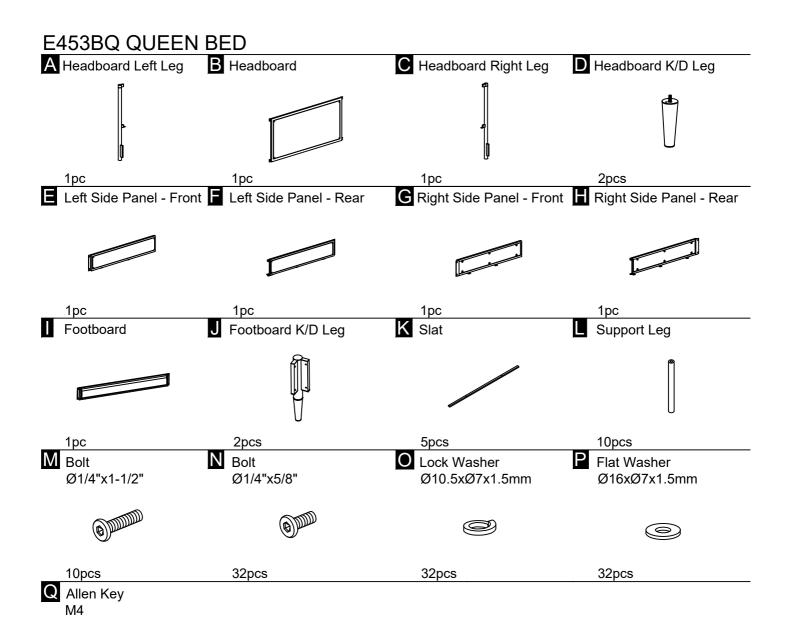


1pc

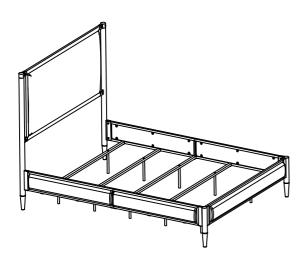


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this products. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage. 1 Attach Headboard (B) to the Headboard Left Leg (A) and Headboard Right Leg (C) using Bolt (N), Lock Washer (O), Flat Washer (P) by Allen Key (Q). Attach Headboard K/D Leg (D) to Headboard Right Leg (C) and Headboard Left Leg (A) as below picture shown.

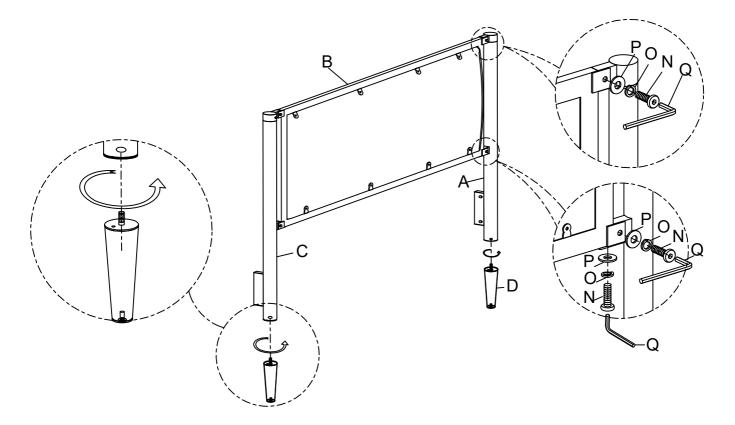


2 Attach Right Side Panel - Front (G) to Right Side Panel - Rear (H) using Bolt (N), Lock Washer (O), Flat Washer (P) by Allen Key (Q).

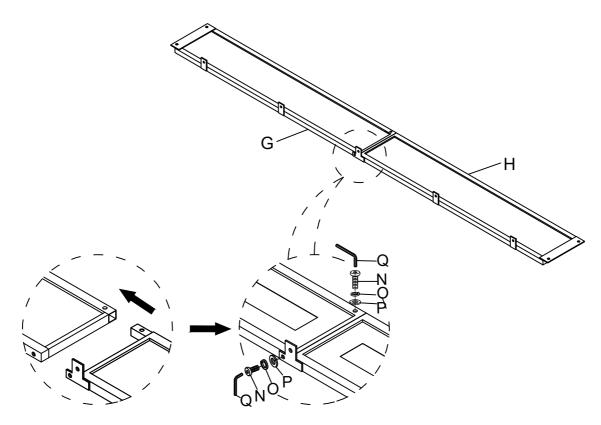


3 Attach Left Side Panel - Front (E) to Left Side Panel - Rear (F) using Bolt (N), Lock Washer (O), Flat Washer (P) by Allen Key (Q).

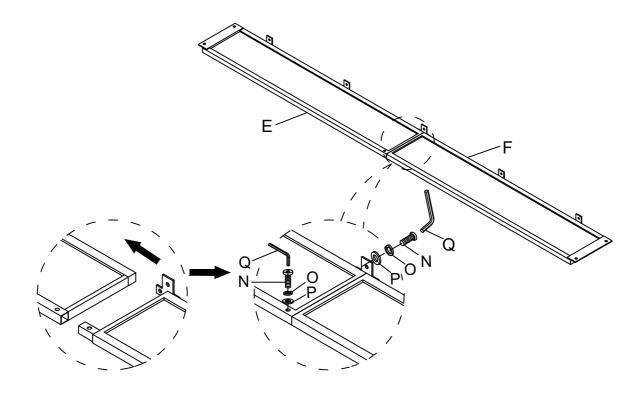


4 Attach Footboard K/D Leg (J) to Footboard (I) using Bolt (N), Lock Washer (O), Flat Washer (P) by Allen Key (Q). Connect Side Panel (H&F) and Footboard K/D Leg (J) using Bolt (N), Lock Washer (O), Flat Washer (P) by Allen Key (Q). Then attach Headboard K/D Leg (D) to Side Panel (G&E) using Bolt (N), Lock Washer (O), Flat Washer (P) by Allen Key (Q).

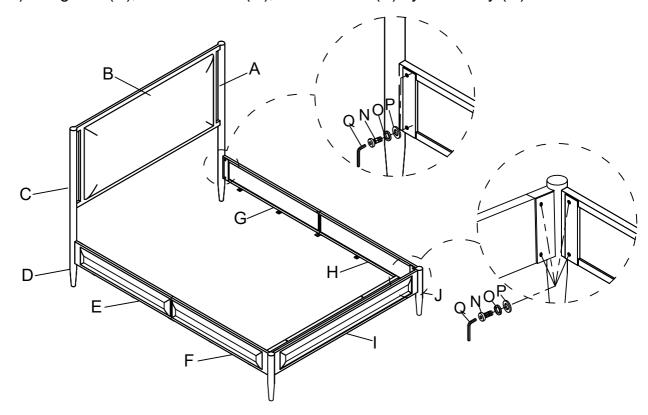

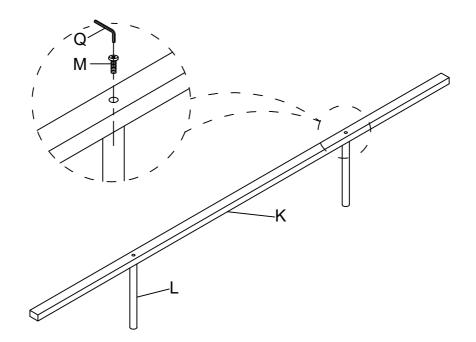

6 Attach Slat (K) to Side Panel (E), (G), (F), (H) using Bolt (N), Lock Washer (O), Flat Washer (P) by Allen Key (Q).

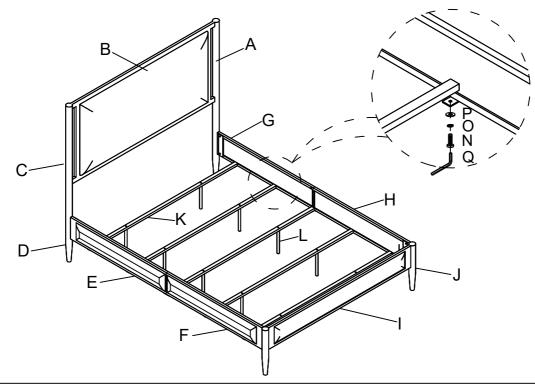

## Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.