 




OWNER'S MANUAL

HIGH VELOCITY WALL MOUNT FAN

WITH ENCLOSED MOTOR

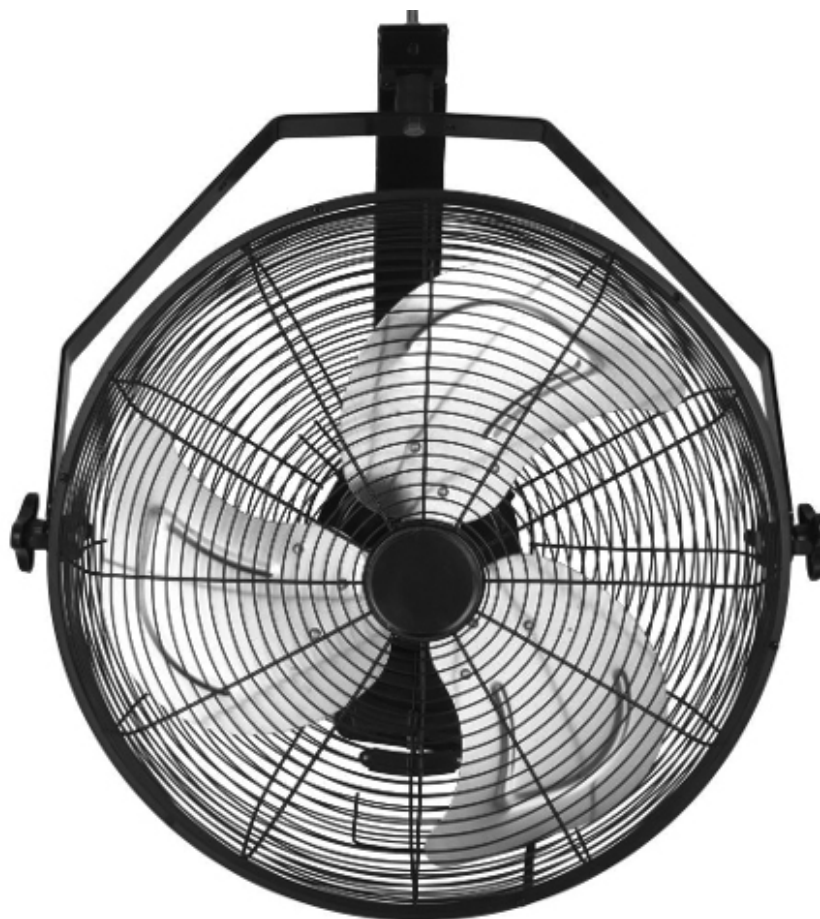

MODEL: 2VAFWLHV18, 2VAFWLHV20

PRODUCT SPECIFICATIONS

Model No.	2VAFWLHV18	2VAFWLHV20
Rated Voltage	120	120
Rated Power	110	120
Fan Speeds	LOW/MED/HIGH	LOW/MED/HIGH
Fan Blade Diameter	18 inch	20 inch

CONSUMER PRODUCT INFORMATION

For your own records, please attach a copy of your sales receipt to this manual. Also, write the store name/location and date purchased below:

Store Name: _____

Location: _____

Date Purchased: _____

CONTENTS

Important Instructions4

Product Diagram4

Assembly Instructions.....5

Operation Instructions.....5

Storage and Maintenance.....5

Troubleshooting6

IMPORTANT NOTE:

Please read and save these instructions. Read through this owner’s manual carefully before using this product. Protect yourself and others by observing all safety information, warnings, and cautions. Failure to comply with instructions could result in personal injury and/or damage to property. Illustrations in this manual are for explanatory purposes only, your actual product may look slightly different. **SAVE THIS MANUAL FOR FUTURE REFERENCE.**

 **WARNING:** Cancer www.P65Warnings.ca.gov

INSTRUCTIONS

IMPORTANT INSTRUCTIONS

PLEASE READ CAREFULLY- ALWAYS MAINTAIN SAFETY WHEN WORKING WITH ANY APPLIANCE

 
1. Check that the power supply voltage corresponds with the rating of the appliance before operating.
2. To protect against electric shock. Do not immerse cords plugs or appliances in water or any other liquid.
3. Do not leave any appliance unattended while it is operating.
4. Close supervision is necessary when any appliance is used by or near children or infirm persons.
5. Unplug from the outlet when not in use or before cleaning. Allow cooling before taking off any parts.
6. Do not operate the appliance with damaged power cords or plugs, and do not use a damaged appliance. If the power cord or appliance is damaged, it must be replaced by the manufacturer, service agent, or similarly qualified professional to avoid a hazard.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces
10. To disconnect-remove the plug from the outlet. Do not pull the plug out by the cord.
11. Do not use this product for anything other than its intended use. This appliance is for household use only.
12. No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.
13. Do not use the appliance without the protective grills.
14. Do not attempt to force the grill to make the fan turn or stop.
15. Never put objects into the grills when the appliance is connected to the mains.
16. It is not advisable to expose people, especially babies or older people, to a continuous cold air stream for a long time.

PRODUCT DIAGRAM

A. Mounting Bracket

B. Fan Body

C. Switch

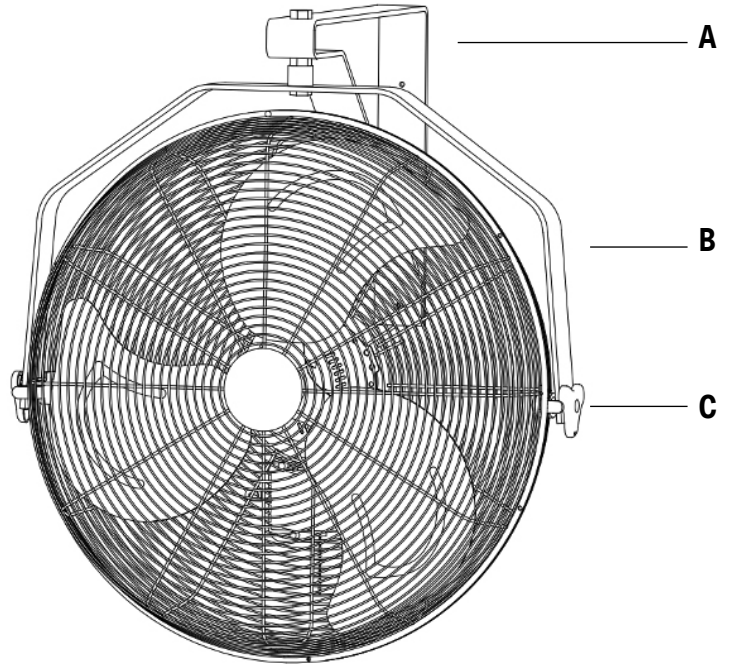

1. Fan Body x 1

2. Screws x 3

3. Mounting Bracket x 1

 
ASSEMBLY & OPERATION

ASSEMBLY INSTRUCTIONS

1. Securely attach the mounting bracket to a wall or ceiling using the correct orientation as pictured. Only mount the fan to a surface that can support its weight.


NOTE: The included heavy-duty screws are intended to mount the inline controller component only. Do NOT attempt to mount the main unit with these screws. Only use hardware appropriate for the chosen mounting surface.

2. Slide the bolt located at the top of the yoke through the appropriate holes in the mounting bracket for the desired mounting orientation.
3. Place the flat washer over the end of the bolt. Then thread the nut onto the bolt and tighten firmly.
4. If desired, attach the inline controller to a wall using the

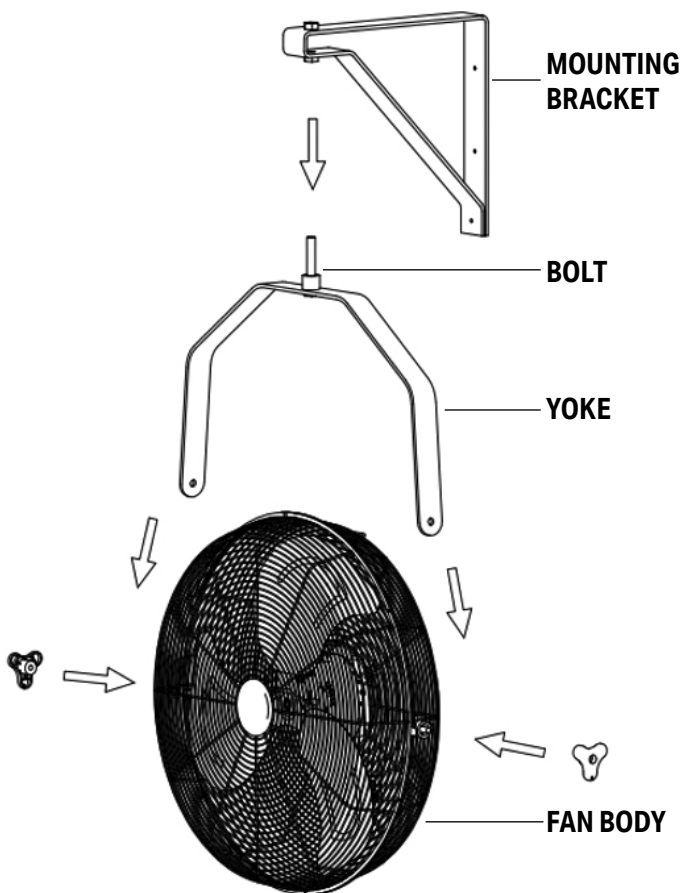

OPERATION INSTRUCTIONS

 1. Plug the power cord into 120V the volt AC wall outlet.
2. You can pull the speed switch to turn on or off the fan and select to different speeds.
(Low → Medium → High → Off → Low...)

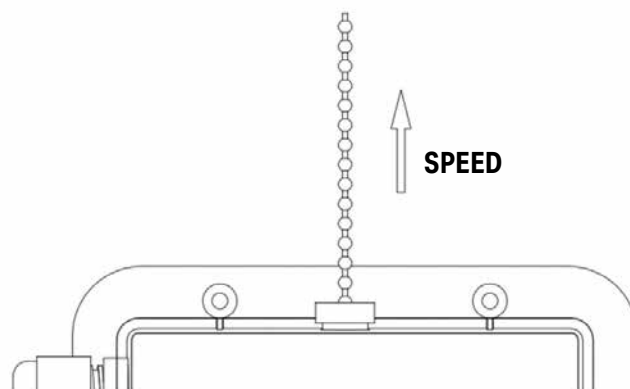

STORAGE & MAINTENANCE GUIDELINES

1. Turn the control OFF and unplug the fan before cleaning.
2. Use only a soft damp cloth to clean the fan.
3. Do not place the fan in water and never allow water to drip into the Motor Housing.
4. Do not use gasoline, paint thinner or other chemicals to clean the fan.
5. To clean the fan blade, remove the front grill and wipe the blade and grills.
6. Store the fan in its original box or cover the fan to protect it from dust.
7. Store it in a cool and dry place.

TROUBLESHOOTING

ISSUE	POSSIBLE CAUSE	RECOMMENDED SOLUTION
Fan not turning on	Power cord not plugged in securely	Ensure the power cord is fully inserted into a working outlet.
	Circuit breaker has tripped or fuse blown	1. Check your circuit breaker panel for a tripped breaker.
		2. Reset the breaker, or replace the fuse if blown.
	Fan switch not in the "On" position	Turn the fan speed control switch to the "On" position or desired speed.
	Faulty power outlet	Test the outlet with another device (e.g., a lamp) to ensure it's functioning. If the outlet is faulty, use another outlet.
	Motor issue	If the fan doesn't turn on after checking the power supply, unplug the fan and contact customer service.
Unusual noise during operation	Loose screws or parts	1. Turn off and unplug the fan.
		2. Inspect all screws on the housing and blades.
		3. Tighten any loose screws using a screwdriver.
	Fan blades are unbalanced	1. Turn off and unplug the fan.
		2. Inspect each blade for bends or damage.
		3. Remove any objects or debris obstructing the blades.
	Fan placed on an uneven surface	1. Ensure the fan is placed on a stable, level surface.
		2. If necessary, move the fan to a different location.
Fan vibrating excessively	Fan placed on an uneven surface	1. Ensure the fan is placed on a stable, level surface.
		2. If necessary, move the fan to a different location.
	Loose fan blade	1. Turn off and unplug the fan.
		2. Check if the fan blades are securely attached and tighten any loose screws.
Fan overheating	Dust or debris buildup in motor vents	1. Turn off and unplug the fan.
		2. Clean the motor vents using a soft brush to remove dust.
		3. Wipe down the fan blades and housing with a dry cloth.
	Prolonged use in a poorly ventilated space	1. Turn off the fan and allow it to cool down.
		2. Ensure it is operating in a well-ventilated area.
	Electrical issue	If the fan continues to overheat, unplug it and contact customer service for further assistance.
Reduced airflow	Dirty or obstructed fan blades	1. Turn off and unplug the fan.
		2. Clean the blades with a soft, dry cloth to remove dirt or debris.





4560 West 160th Street
Cleveland, OH 44135

833-950-1185 | support@visionairproducts.com | www.visionairproducts.com