

OVERSIZED X-FRAME CREEPER

Item Number W85014

OWNER'S MANUAL



Performance Tool®

▲WARNING: READ, UNDERSTAND AND FOLLOW ALL INSTRUCTIONS AND WARNINGS BEFORE OPERATING THIS TOOL. FAILURE TO DO SO MAY RESULT IN PERSONAL INJURY AND/OR PROPERTY DAMAGE AND WILL VOID WARRANTY.

PT®
Performance Tool

SAFETY GUIDELINES / DEFINITIONS

This instruction manual is intended for your benefit. Please read and follow the safety, installation, maintenance and troubleshooting steps described within to ensure your safety and satisfaction. The contents of this instruction manual are based upon the latest product information available at the time of publication. The manufacturer reserves the right to make product changes at any time without notice.

▲WARNING: Read and understand this entire instruction manual before attempting to assemble, install, operate or maintain this product. Failure to comply with the instructions may result in serious personal injury and/or property damage!

The following signal words are used to emphasize safety warnings that must be followed when using this product:

▲DANGER: Indicates an imminently hazardous situation that, if not avoided, **WILL** result in death or serious injury.

▲CAUTION: Indicates a potentially hazardous situation that, if not avoided, **MAY** result in minor or moderate injury.

▲WARNING: Indicates a potentially hazardous situation that, if not avoided, **COULD** result in death or serious injury.

▲NOTE: Indicates important information, which if not followed, **MAY** cause damage to equipment.

UNPACKING AND INSPECTION

After opening the carton, unpack your new product and related parts and accessories. Please inspect it carefully for any damage that may have occurred during transit. Please check it against the photograph on the carton. If any parts are missing, please call customer service at 1-800-497-0552 between 6 a.m. and 5 p.m. Pacific time.

▲WARNING: *DO NOT operate this product if damaged during shipment, handling or misuse. Do not operate the product until the parts have been replaced or the fault rectified. Failure to do so may result in serious personal injury or property damage. All damaged parts must be repaired or replaced as needed prior to operating this product. Check to see that all nuts, bolts and fittings are secure before putting this product into service.*

If you have any questions, or require assistance with damaged or missing parts, please contact our customer service department at 1-800-497-0552. Please have the serial number, model number, and date of purchase available for reference when calling.

SPECIFICATIONS:

Weight Capacity:300 lbs. (136 Kg)
Pad Dimensions:
..... 38 in. L x 14 in. W x 2 in. H (965 mm L x 356 mm W x 51 mm H)
Frame Dimensions:
..... 45 in. L x 25 in. W x 7 in. H (1143 mm L x 635 mm W x 178 mm H)
Clearance: 4 in.
Swivel Casters:..... (4) 5 in. (127 mm)

Specifications are subject to change without notice.


GENERAL SAFETY

- Keep the area clean and well lit. Cluttered or dark areas can cause accidents.
- Be aware of what you are doing and use common sense while using the tool. Do not use a tool when you are tired or under the influence of drugs, alcohol or medication. A moment of distraction while using a tool can cause serious personal injury.
- Use safety equipment. Always wear eye protection. Safety equipment such as dust masks, non-slip safety shoes, helmets or ear protection used in appropriate conditions will reduce the risk of injury.
- Do not rush. Maintain proper footing and balance at all times. This allows better control of the tool in unexpected situations.
- Dress appropriately. Do not wear loose clothing or jewelry. Keep hair, clothing and gloves away from moving parts. Loose clothing, jewelry or long hair can get caught in moving parts.
- Keep the tool away from children and do not allow the tool to be used by people who are not familiar with the operation of the tool. Tools are dangerous in the hands of inexperienced operators.
- Do not alter this product in any way and never use it other than for its intended purpose.


- DO NOT exceed rated capacity. Overloading the creeper can cause damage to or failure of the creeper.
- Use only on a hard, level surface capable of supporting the load. Use of creeper on other than hard level surfaces can result in creeper instability.
- DO NOT stand on the creeper. Serious injury can result if the creeper tips over or you accidentally fall onto the creeper.
- DO NOT expose to heat, sparks, open flame or other high temperature sources.
- Creeper service must be performed only by qualified repair personnel. Service or maintenance performed by unqualified personnel could result in a risk of injury.
- When servicing a creeper, use only identical replacement parts - refer to attached, product-specific parts list and diagram. Follow instructions in the Care & Maintenance section of this manual. Use of unauthorized parts or failure to follow maintenance instructions may create a risk of injury and may void any applicable warranty
- Maintain labels and nameplates on the creeper. These carry important information. If unreadable or missing, contact Performance Tool® for a replacement.

PARTS LIST

No.	Description	Qty.	No.	Description	Qty.
1	Pad Assembly & Frame1		5	5 in. Casters.....4	
2	Drop Frame Legs4		6	Sleeve Nuts (T40).....4	
3	3/16 in. Phillips Screws.....4		7	Lock Washers4	
4	1/2 in. O.D. Washers.....4				

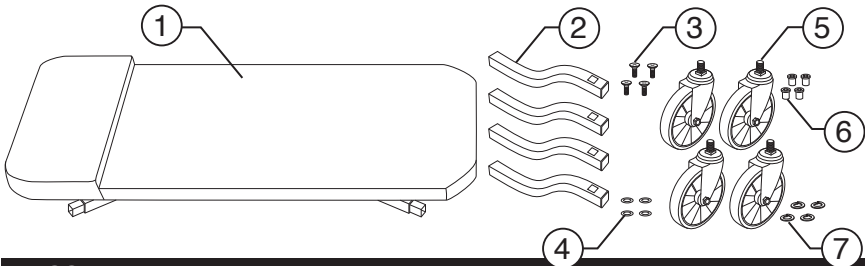

ASSEMBLY

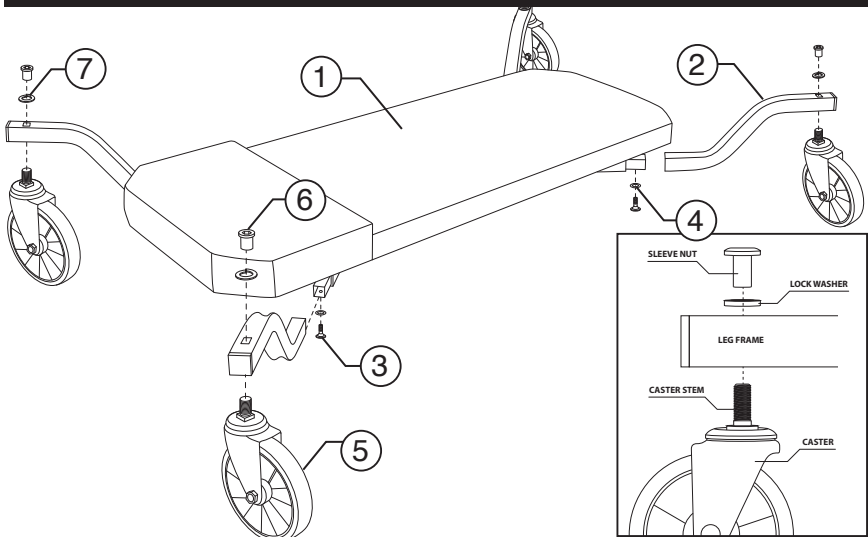

TOOLS REQUIRED

1. #2 Phillips screwdriver
2. T40 star bit, key or driver

ASSEMBLY INSTRUCTIONS

1. Set the creeper pad assembly and base (1) on a flat work surface, preferably a table or work bench.
2. Attach one drop frame leg (2) onto the exposed square tubing of one of the open corners of the frame. Be sure the bend is positioned so the leg rises above the top surface of the pad.
3. Place one washer (4) onto one screw (3), then insert the screw into the threaded hole where the leg and corner of the frame connect and tighten thoroughly.
4. Repeat steps 2 & 3 for all four legs, making sure the bend in each leg is positioned so the leg rises above the top surface of the pad.
5. Insert the threaded stem of one caster (5) into the square opening at the end of one of the drop frame legs.
6. Align the square portion of the caster stem with the square opening in the leg. Place a lock washer (7) onto the stem and thread a sleeve nut (6) onto the stem and hand tighten.
7. Repeat steps 5 & 6 for the remaining casters. Once all four casters are attached, use a T-40 star bit driver or star key to fully tighten the sleeve nuts to secure the casters.
8. Double check that all hardware is tight and secure, and the casters roll properly before adding any weight to the creeper.

1 YEAR WARRANTY

PERFORMANCE TOOL® extends only the following warranties, and only to original retail purchasers. These warranties give specific legal rights. Except where prohibited by local law, the law of the State of Washington governs all warranties and all exclusions and limitations of warranties and remedies. There may be other rights which vary from state to state.

PERFORMANCE TOOL® warrants the product to be free from defects in materials and workmanship under normal use and service. A defective product may be returned for a free replacement within 90 days from the date of purchase, provided that product is returned to place of purchase immediately after discovery of defect. After 90 days and up to one year from date of purchase, PERFORMANCE TOOL® will replace at no charge any parts which our examination shall disclose to be defective and under warranty. These warranties shall be valid only when a sales receipt showing the date of purchase accompanies the defective product or defective part (s) being returned. For part(s) after 90 days, please remit your request, postage prepaid to:

PERFORMANCE TOOL, P.O. Box 88259 Tukwila, WA 98138

These warranties exclude blades, bits, punches, dies, bulbs, fuses, hoses, and other consumables which must be replaced under normal use and service. These warranties shall not apply to any product or part which is used for a purpose for which it is not designed, or which has been repaired or altered in any way so as to affect adversely its performance or reliability, nor shall these warranties apply to any product or part which has been subject to misuse, neglect, accident or wear and tear incident to normal use and service.

PERFORMANCE TOOL® does not authorize any other person to make any warranty or to assume any liability in connection with its products.

Except for warranties of title and the limited express warranties set forth above, PERFORMANCE TOOL® makes no express or implied warranties of any kind with respect to its products. In particular, PERFORMANCE TOOL® makes no implied warranty of merchantability and no implied warranty of fitness for any particular purpose, except that for goods purchased primarily for personal, family or household use and not for commercial or business use, PERFORMANCE TOOL® makes an implied warranty of merchantability (and, if otherwise applicable, an implied warranty of fitness for a particular purpose), but only for the particular qualities or characteristics, and for the duration, expressly warranted above.

The laws on limitation of implied warranties may differ from state to state, so the above limitations may not apply in all cases.

PERFORMANCE TOOL® shall not be liable for consequential, incidental or special damages resulting from or in any manner related to any product, or to the design, use, or any inability to use the product. The sole and exclusive remedy for a defective product or part shall be the repair, or replacement thereof as provided above. The laws on limitation of remedies or on consequential, incidental or special damages may vary from state to state, so the above limitations may not apply in all cases.