
ASSEMBLY AND INSTALLATION INSTRUCTIONS

H0302

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.

2. Read and save this instruction.

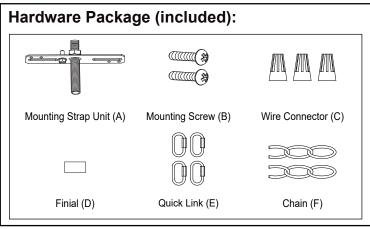

Installation Steps

Turn off the power at fuse or circuit box.

 Attach the mounting strap unit (A) to the outlet box by using two mounting screws (B). Adjust the length of the preinstalled threaded pipe if necessary.


- 2. Take a rod and hook one end onto the loop-2 of the tube and hook another end onto one loop of the fixture. Repeat with the other rod.
- 3. Choose two certain same length of the chains (F) you need.
 - Weave the fixture wire and fixture ground wire through the chain(F) and the canopy kit.
 - Connect the two chains (F) to the top loops and loops-1 with four quick links (E).

Note: Length adjustable from 29-3/4" to 78-3/4". Use fewer chains if shorter length is desired.

- 4. Make wire connections using wire connectors (C):
 - ---The smooth wire (marked) from fixture to the black wire from power source.
 - ---The ridged wire (unmarked) from fixture to the white wire from power source.
 - ---Attach the fixture ground wire to the mounting strap unit (A) with the green ground screw, then connect it to the house ground wire with the wire connector (C).

Carefully tuck wires back into the outlet box.

- 5. Attach the canopy kit to the mounting strap unit (A) by inserting the threaded pipe, then secure it with the finial (D).
- 6. Install 3 x 60W max. medium base bulbs (not included) . See relamping label at socket area or packaging for maximum wattage allowed.

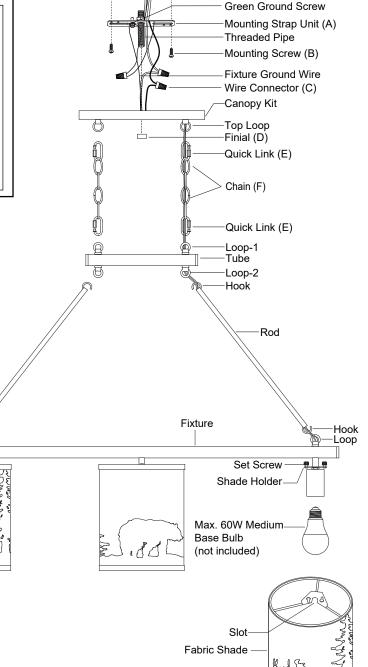

House Ground Wire





7. Unscrew the two set screws. Carefully place the fabric shade onto the shade holder by aligning the slot, then secure it with the two set screws, and rotate the fabric shade until it is locked in place. Repeat for the other two fabric shades.

Noted: Please select the shade pattern you prefer before assembling the fabric shades.

Turn on the power at fuse or circuit box.

The following parts are available for reorder if damaged or missing.

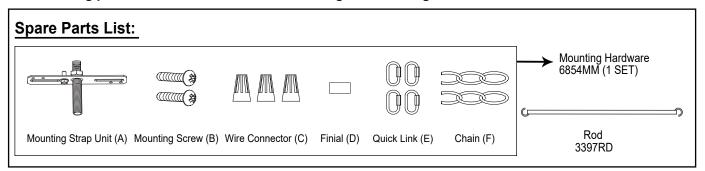

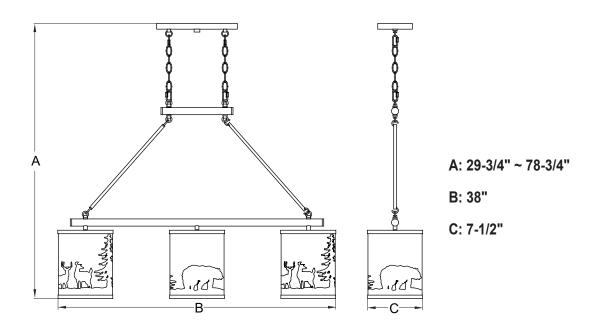

1 Year Warranty

Vaxcel warrants all of our products against defects in workmanship and finishes for one year following the date of shipment.

Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.

Vaxcel reserves the right to repair, replace or issue a credit for any properly installed product, provided it is returned per RMA instruction. This warranty is limited to the cost of the product only and does not extend to transportation, installation or replacement costs.

How can warranty service be obtained? info@vaxcel.com 1-800-482-9235

