 
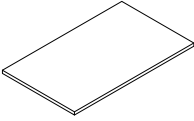 
 
 
 
 




 

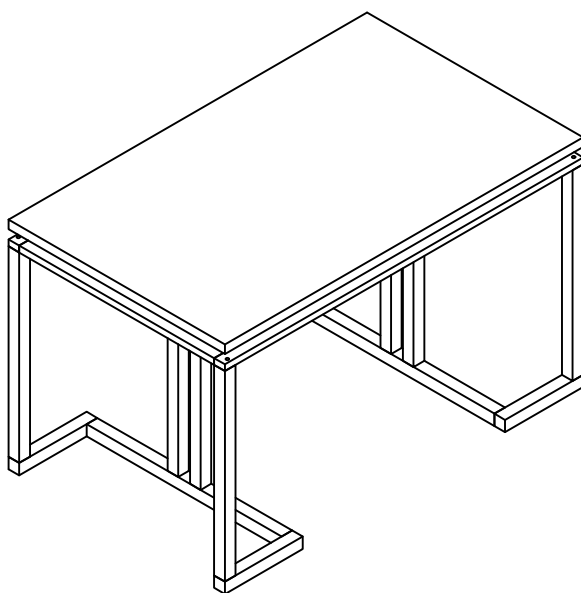 


ASSEMBLY INSTRUCTION

COUNTER HEIGHT TABLE

 
A Table Top 1 pc 	B Apron Frame 1 pc 	C Joint Panel 2 pcs 	D Side Post 4 pcs 
E Middle Post 1 pc 	F Foot Frame 2 pcs 	G Bolt 1/4" x 2" 12 pcs 	H Bolt 1/4" x 1-1/2" 16 pcs 
I Lock Washer 1/4" x 1/2" 24 pcs 	J Flat Washer 1/4" x 3/4" 24 pcs 	K Allen Wrench 1/6" 1 pc 	L Plastic Button 3/5" x 1/5" 4 pcs 



 
This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1

Attach the Side Post (D) and Middle Post (E) to Foot Frame (F) by Bolt (G), Lock Washer (I) and Flat Washer (J) with Allen Wrench (K) as shown.

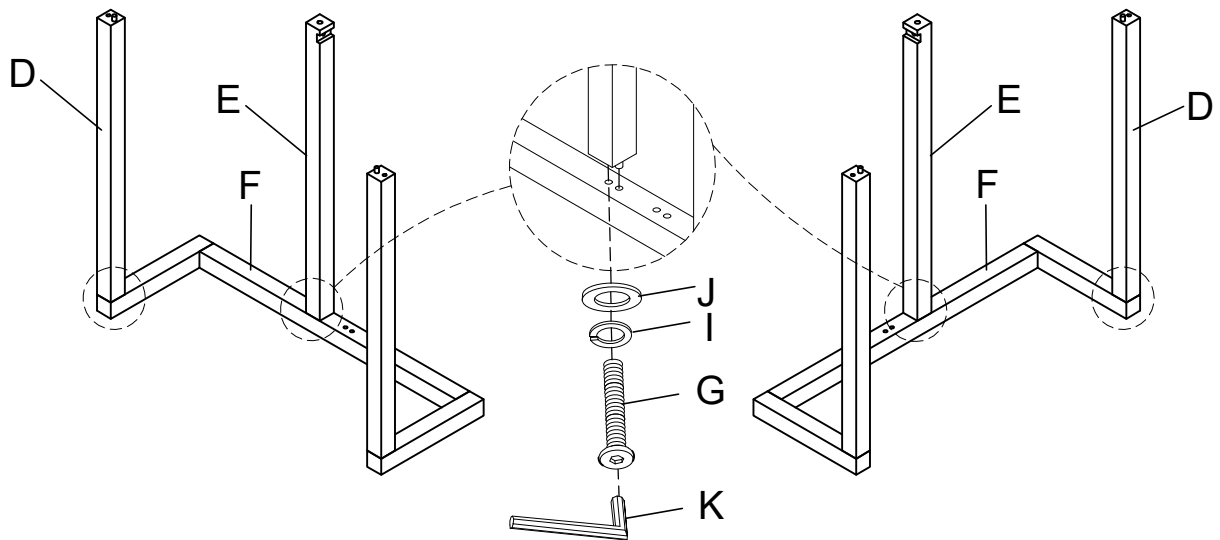 
**2**

Attach Apron Frame (B) to Side Post (D) by Bolt (H) with Allen Wrench (K) and cover the Bolt (H) by Plastic Button (L). Attach the other 2 Middle Post (E) to Foot Frame (F). Then attach the Middle Post (E) to Apron Frame (B) by Bolt (G), Lock Washer (I) and Flat Washer (J) with Allen Wrench (K) as shown.

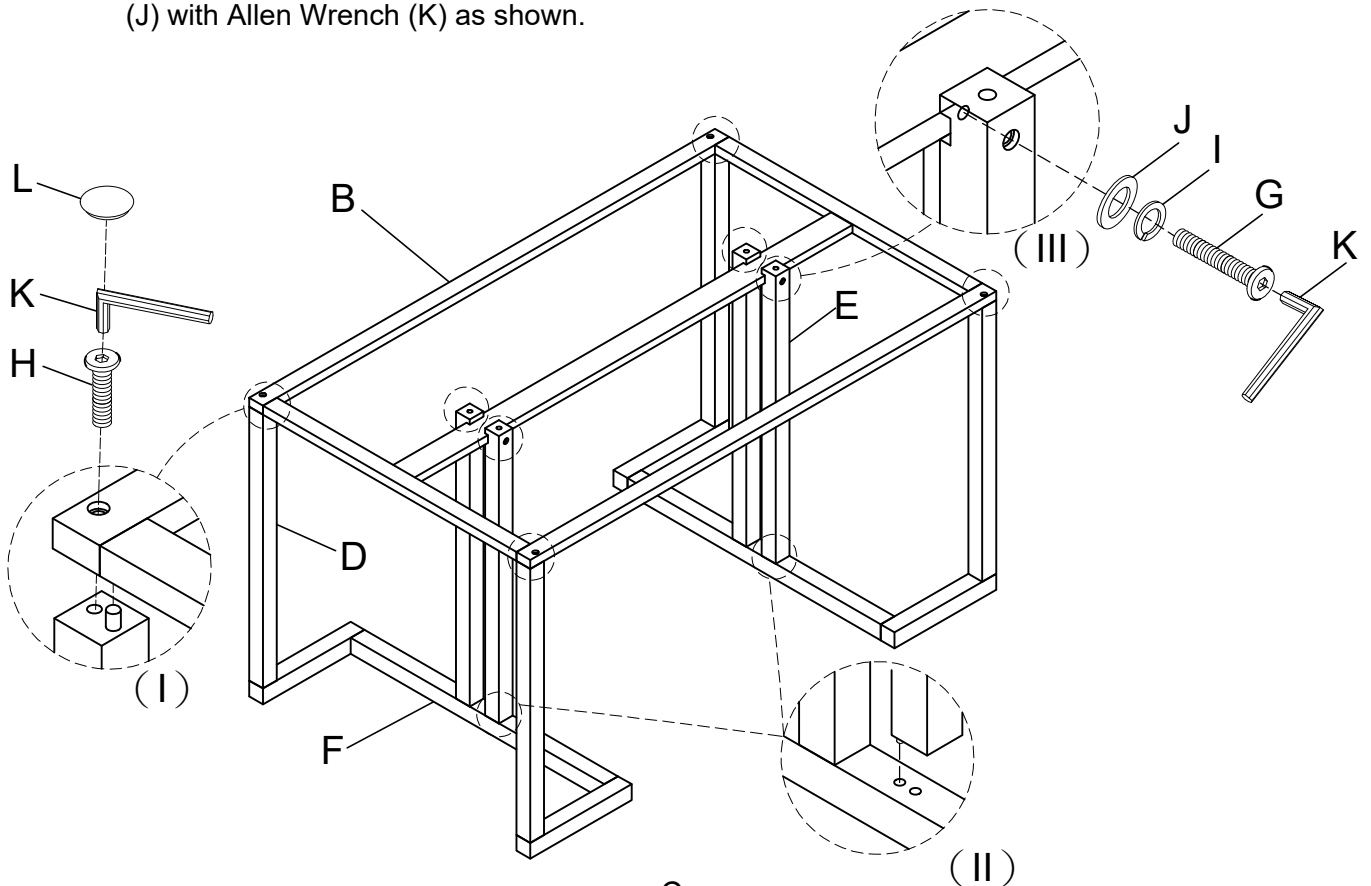 


3

Attach the Joint Panel (C) to Middle Post (E) by Bolt (H), Lock Washer (I) and Flat Washer (J) with Allen Wrench (K) as shown.

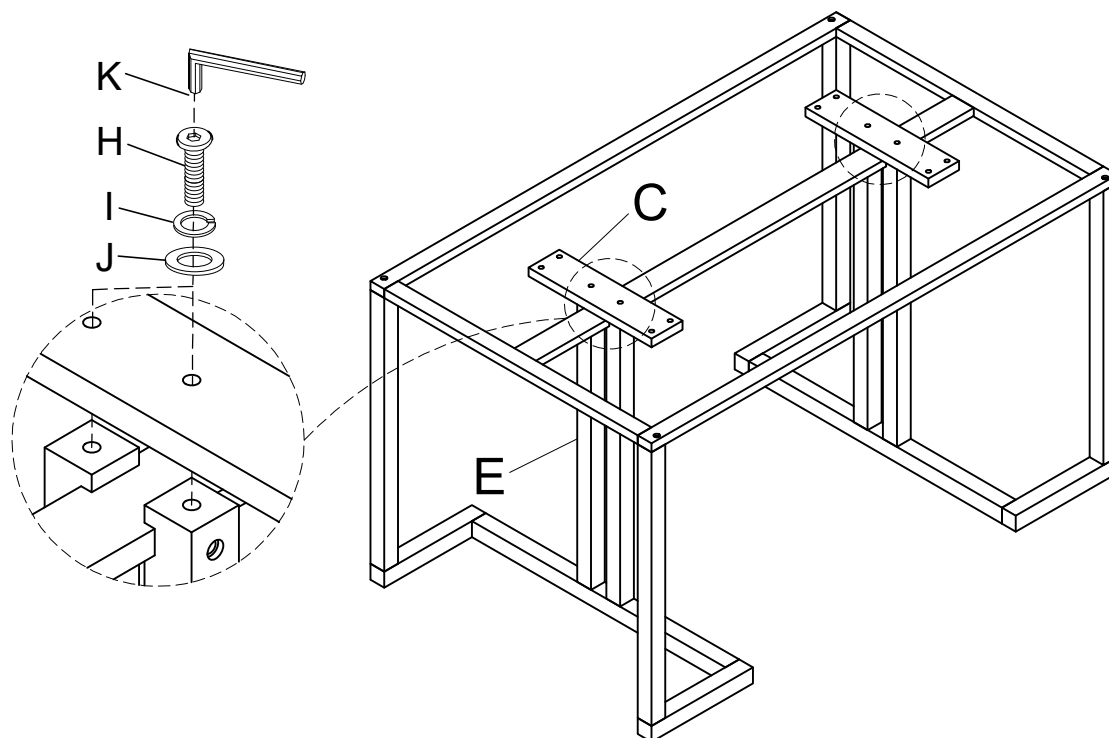 
**4**

Turn the assembly over. Attach the Middle Post (E) to Foot Frame (F) by Bolt (G), Lock Washer (I) and Flat Washer (J) with Allen Wrench (K) as shown.

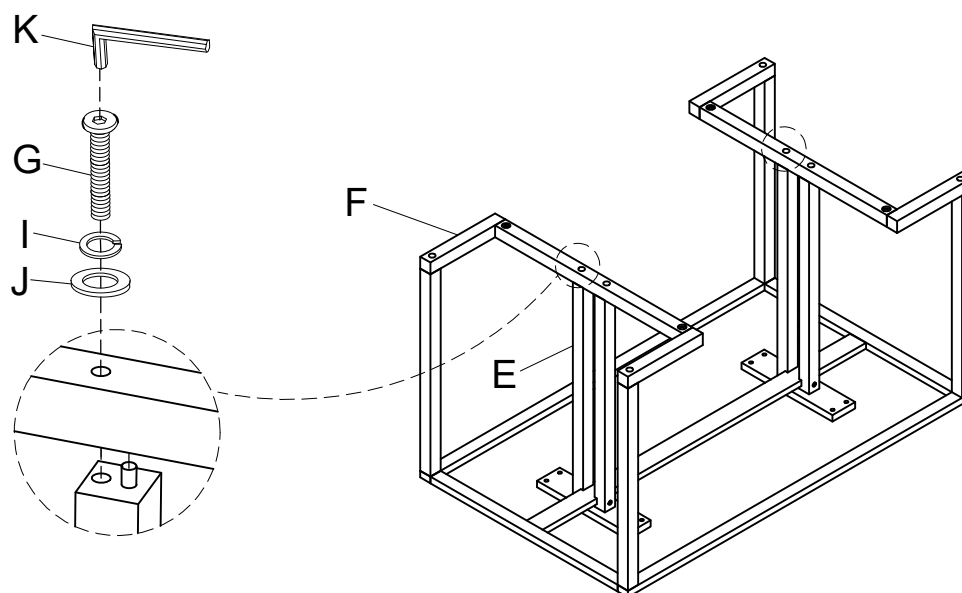

5

Place the Table Top (A) on a smooth carpeted surface. Tighten the Joint Panel (C) on the Table Top (A) by Bolt (H), Lock Washer (I) and Flat Washer (J) with Allen Wrench (K) as shown.

 
 
 
 
 
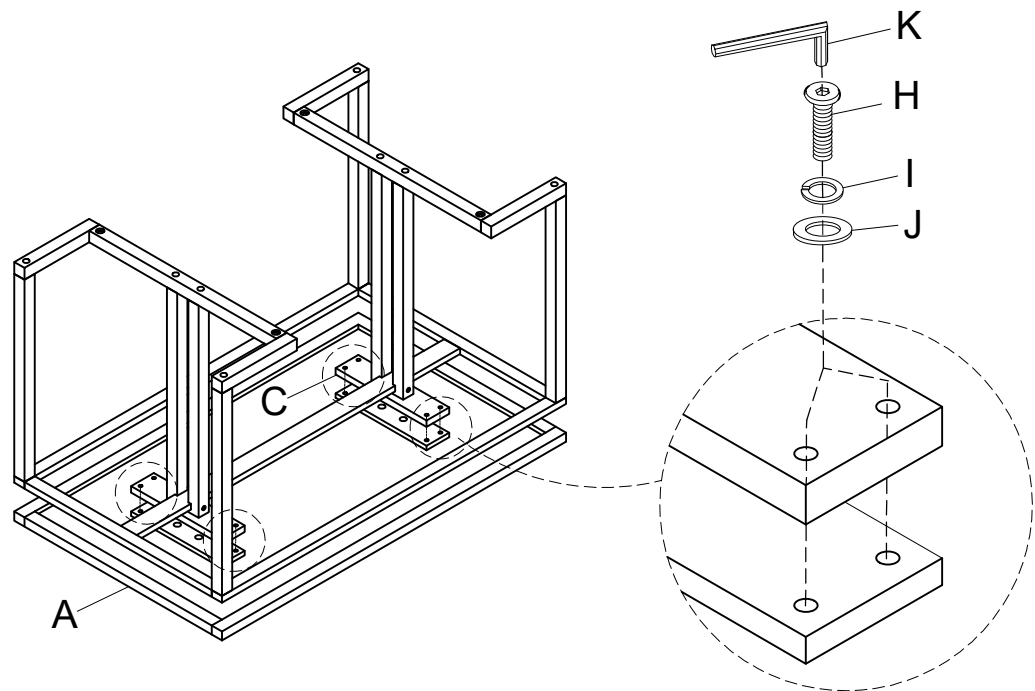 

 








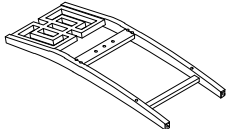

 
Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

ASSEMBLY INSTRUCTION

COUNTER HEIGHT CHAIR

 
A Chair Back	B Seat	C Left Front Leg	D Right Front Leg
			
1 pc	1 pc	1 pc	1 pc
E Front Stretcher	F Left Stretcher	G Right Stretcher	H Bolt 1/4" x 1-1/2"
			
1 pc	1 pc	1 pc	1 pc
I Lock Washer 1/4"	J Flat Washer 1/4"	K Bolt 5/16" x 2"	L Bolt 5/16" x 3"
			
1 pc	1 pc	4 pcs	4 pcs
M Lock Washer 5/16"	N Flat Washer 5/16"	O Screw 1-1/2"	P Allen Wrench 1/6"
			
8 pcs	8 pcs	6 pcs	1 pc

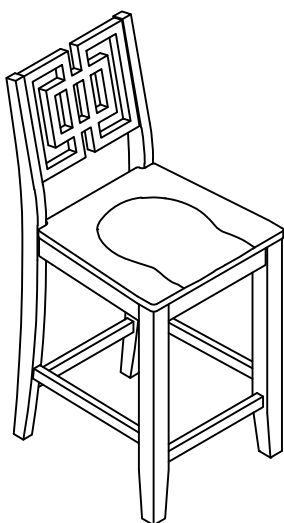

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1

 
Place the Seat (B) upside down on a smooth carpeted surface. Put the Front Stretcher (E) between the Left & Right Front Leg (C & D). Attach the Left & Right Front Leg (C & D) to the Seat (B) using Bolt (K), Lock Washer (M) and Flat Washer (N) with Allen Wrench (P).

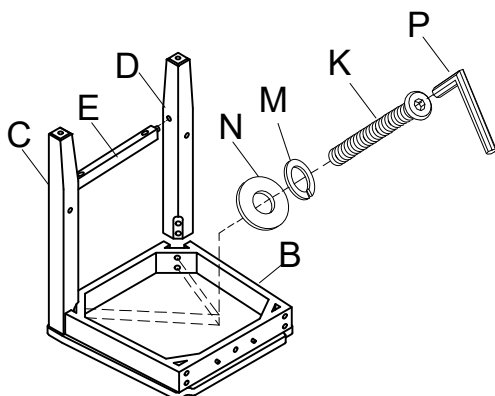

 
Take the Allen Wrench, and turn the bolts until the legs are secured. **DO NOT TIGHTEN COMPLETELY.** Stop when you feel you are adding force to tighten the bolt.

2

Place the Chair Back (A) on a smooth carpeted surface. Attach the Seat (B) to Chair Back (A) using Bolt (L), Lock Washer (M) and Flat Washer (N) with Allen Wrench (P) at the corners. Then tighten Bolt (H), Lock Washer (I) and Flat Washer (J) with Allen Wrench (P). At the same time, attach Left & Right Stretcher (F & G) to the Left & Right Front Leg (C & D) and Chair Back (A).

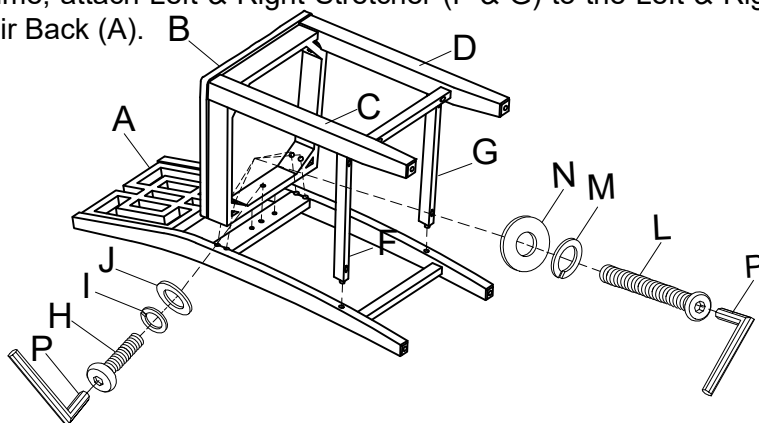**3**

Tighten the Stretcher (E, F, G) to the Left & Right Front Leg (C & D) and Chair Back (A) using Screw (O) with a Phillips Head Screwdriver (not provided).

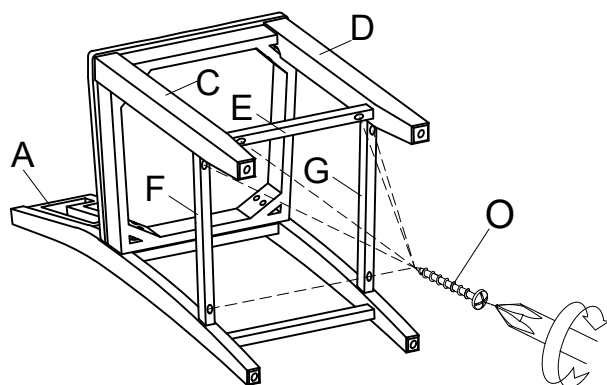

Stand chair up on an even surface and check that it is balanced. If there is a slight wobble, apply downward pressure in the corner where a leg is uneven. Keeping pressure in that corner, tighten all bolts. If balanced, apply downward pressure evenly in the center and tighten all bolts. Do not over-tighten beyond hole depth.

Helpful Tip:

 




 
 
Instead of applying downward pressure while reaching under to tighten bolts, have someone sit on the chair while you tighten the bolts.

 
Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

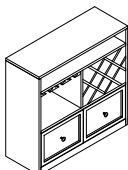ASSEMBLY INSTRUCTION

CABINET WITH WINE RACK

 
A Cabinet  1 pc	B Caster  4 pcs	C Screw 1/2"  16 pcs	D Strap 5 × 300mm (Anti-Tipping Kit)  1 pc
E Bracket 1.5 × 16 × 26.7mm (Anti-Tipping Kit)  2 pcs	F Screw 5/8" (Anti-Tipping Kit)  1 pc	G Screw 2" (Anti-Tipping Kit)  1 pc	

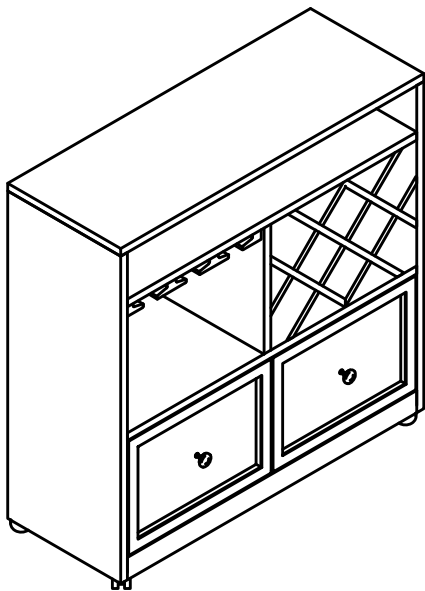

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1

Attach the Caster (B) to the Cabinet (A) using Screw (C) with a Phillihps Head Screwdriver (not provided) as shown.

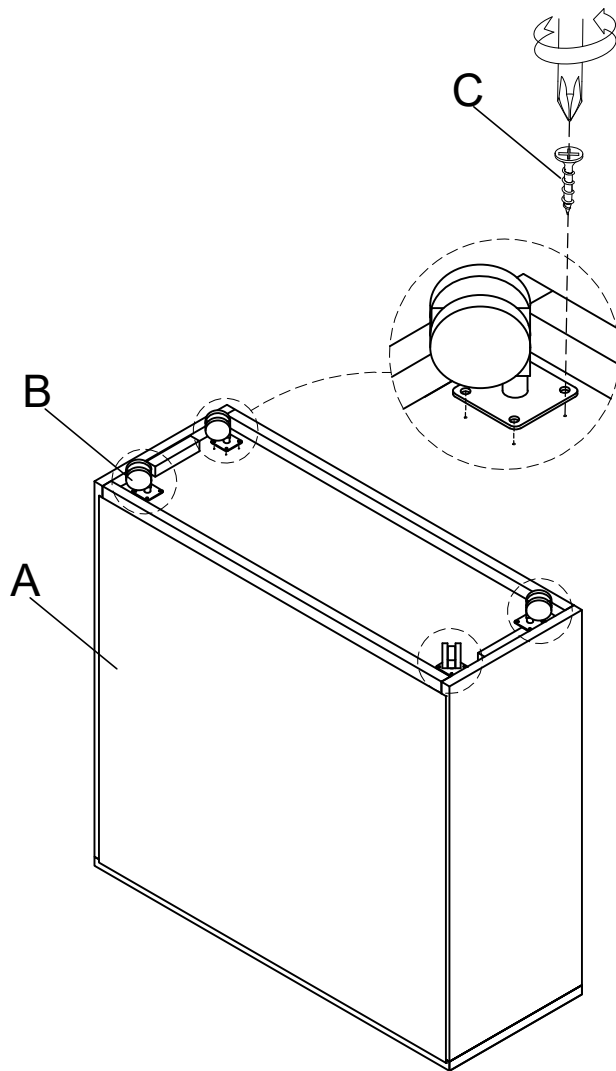 


2

(OPTIONAL)

This Anti-Tipping Kit restraint must be attached to a wall.

- i. Attach one Bracket (E) to the cabinet back using Screw (F) through the small hole.
- ii. Install the other Bracket (E) on the wall using the Screw (G) through the small hole 2" below the Bracket on the cabinet.
- iii. Move the cabinet to the position and both Bracket (E) are vertically in line.
- iv. Thread the Strap (D) through the large hole of Bracket (E) and pull it tight.

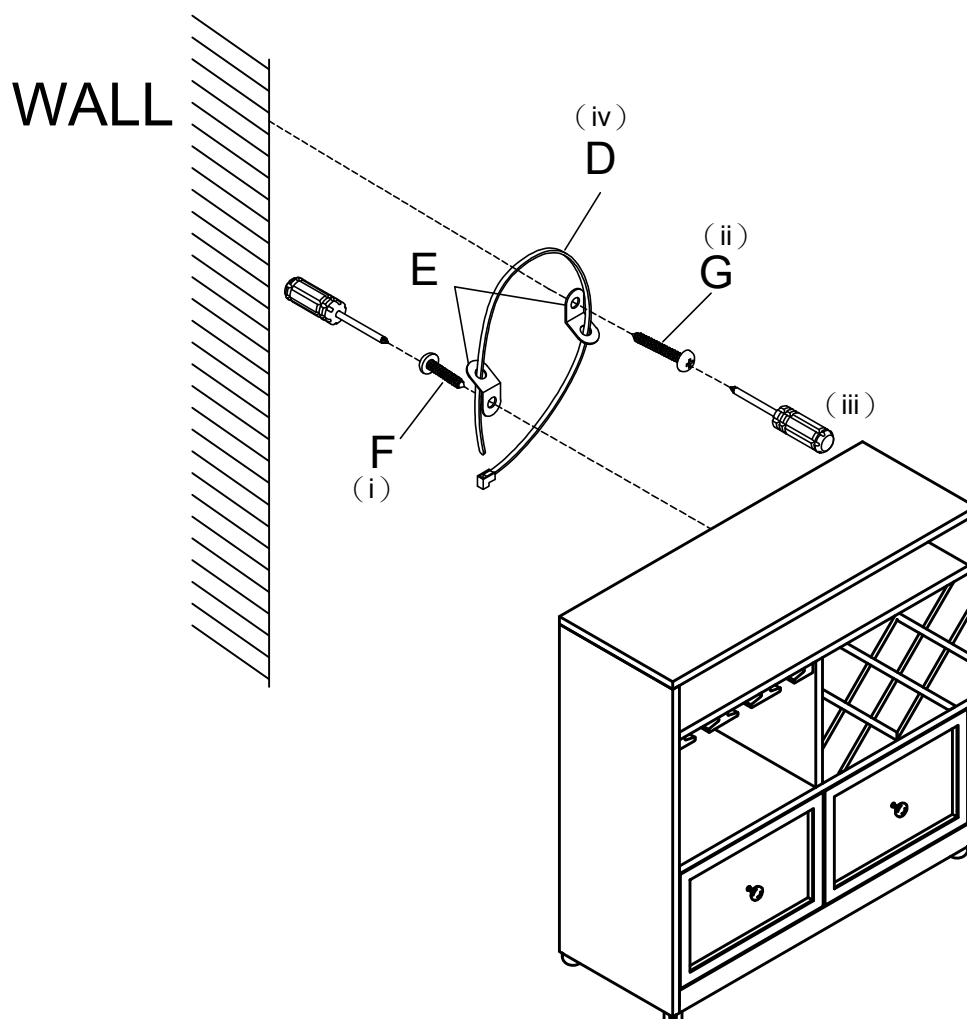 




 
 


 
Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

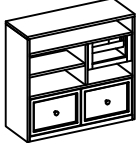ASSEMBLY INSTRUCTION

CABINET WITH TIP-OUT BINS

 
A Cabinet	B Caster	C Screw 1/2"	D Strap 5 × 300mm (Anti-Tipping Kit)
			
1 pc	4 pcs	16 pcs	1 pc
E Bracket 1.5 × 16 × 26.7mm (Anti-Tipping Kit)	F Screw 5/8" (Anti-Tipping Kit)	G Screw 2" (Anti-Tipping Kit)	
			
2 pcs	1 pc	1 pc	

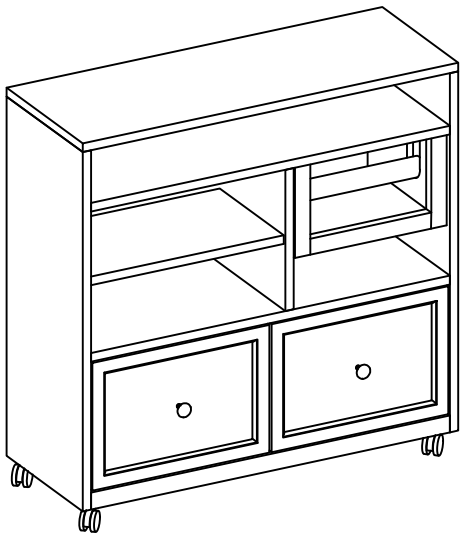

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1

Attach the Caster (B) to the Cabinet (A) using Screw (C) with a Phillihps Head Screwdriver (not provided) as shown.

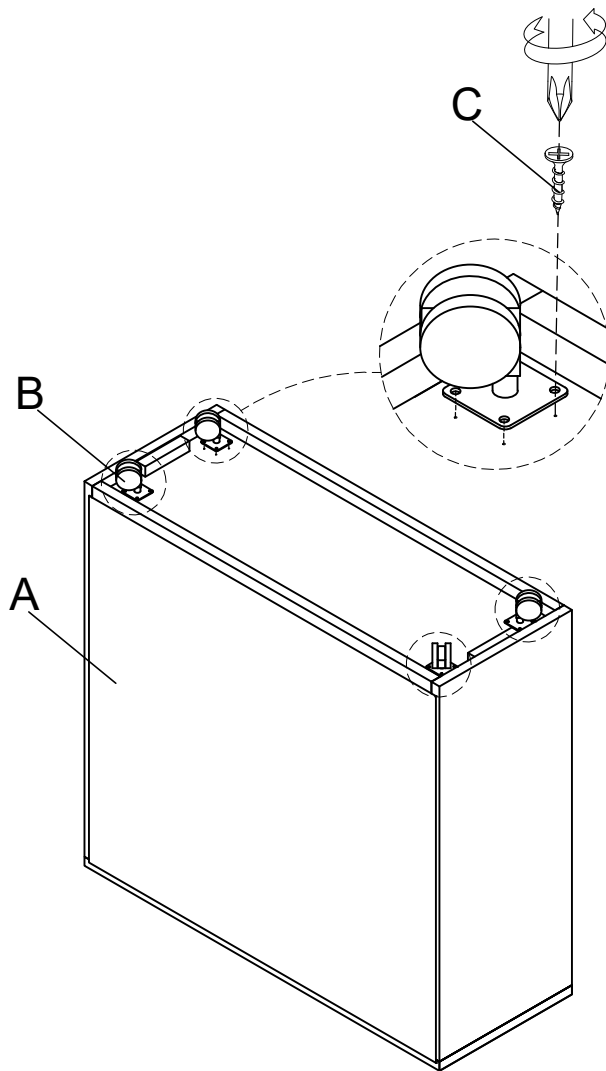 


2

(OPTIONAL)

This Anti-Tipping Kit restraint must be attached to a wall.

- i. Attach one Bracket (E) to the cabinet back using Screw (F) through the small hole.
- ii. Install the other Bracket (E) on the wall using the Screw (G) through the small hole 2" below the Bracket on the cabinet.
- iii. Move the cabinet to the position and both Bracket (E) are vertically in line.
- iv. Thread the Strap (D) through the large hole of Bracket (E) and pull it tight.

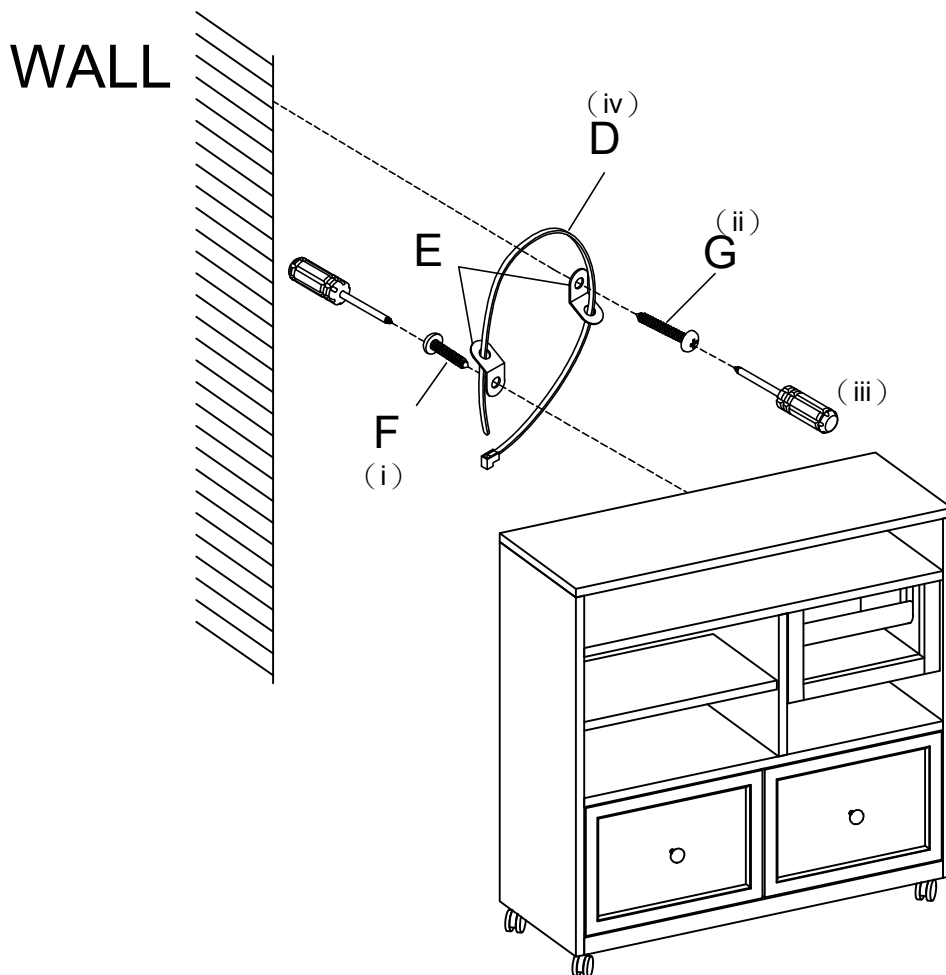

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.