 
 
 

 
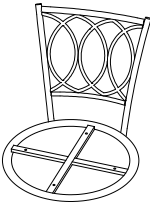 
 


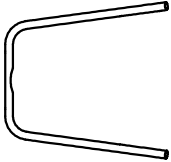

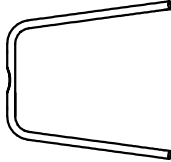

 



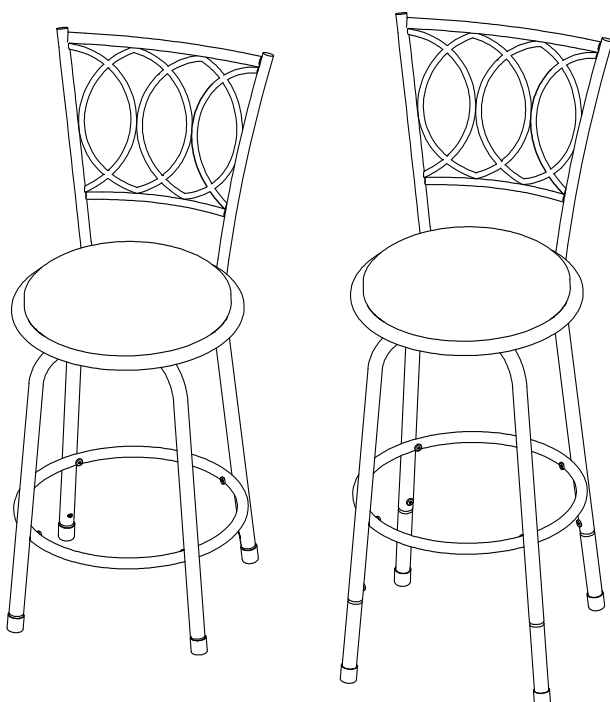 
ASSEMBLY INSTRUCTION

SCROLL BACK 24"-29"H ADJUSTABLE STOOL

A Upper 'U' Tube	B Lower 'U' Tube	C Leg Extension	D Swivel	E Ring
				
1pc	1pc	4pcs	1pc	1pc
F Upper Frame	G Seat Cushion	H Bolt Ø1/4" x 13mm	I Bolt Ø1/4" x 19mm	J Bolt Ø1/4" x 32mm
				
1pc	1pc	8pcs	4pcs	4pcs
K Screw M5 x 28mm	L Lock Washer Ø11.5mm	M Flat Washer Ø16mm	N Allen Key M4	O Foot Pad (For 24"H Stool)
				
4pcs	8pcs	8pcs	1pc	4pcs

Option 1


Option 2




This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

-
- 1** (For 24"H Stool) Attach Foot Pad (O) to Upper & Lower 'U' Tube (A & B).
(For 29"H Stool) Attach Leg Extension (C) to Upper & Lower 'U' Tube (A & B) using Bolt (H) with Allen Key (N).

 
Take the Allen Key and turn the bolts until the legs are secured. **DO NOT TIGHTEN THE BOLTS COMPLETELY.** Stop when you feel you are adding force to tighten the bolt.

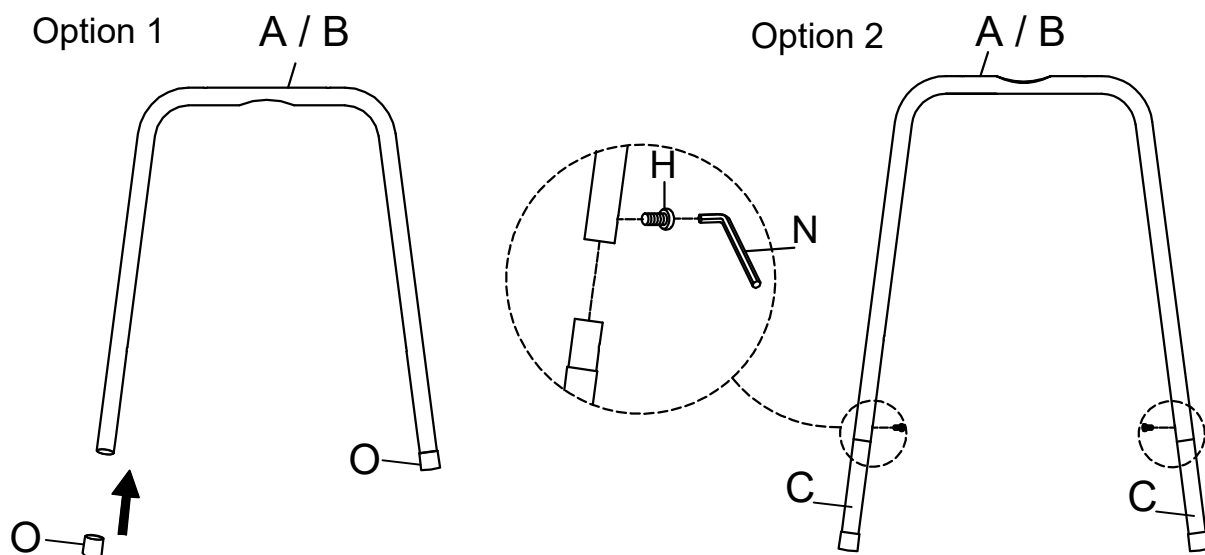

 
-
- 2** Put Upper 'U' Tube (A) into the groove of Lower 'U' Tube (B).

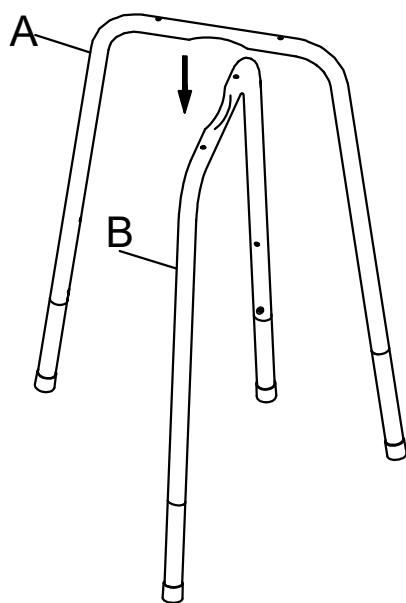

 
- 3** Turn Swivel (D) 45 degrees as shown for easy assembly. Then attach it to Upper & Lower 'U' Tube (A & B) using Bolt (I), Lock Washer (L) and Flat Washer (M) with Allen Key (N).

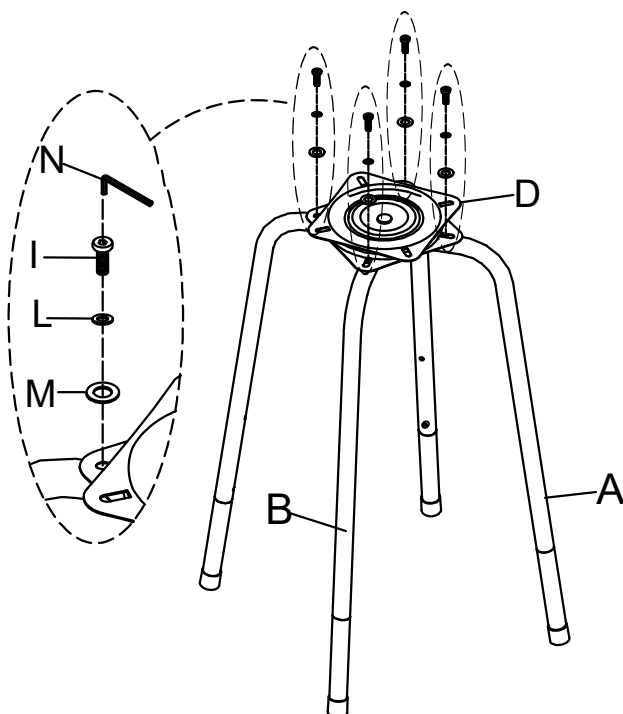

 
- 4** Attach Ring (E) to Upper & Lower 'U' Tube (A & B) using Bolt (J) with Allen Key (N).

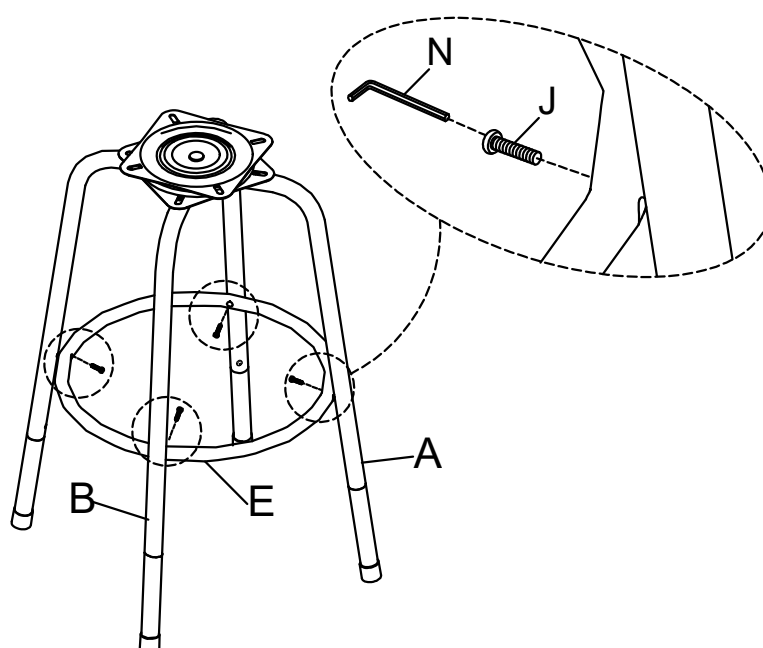

 - 5** Put the assembled stool upside down and attach Swivel (D) to Upper Frame (F) using Bolt (H), Lock Washer (L) and Flat Washer (M) with Allen Key (N).

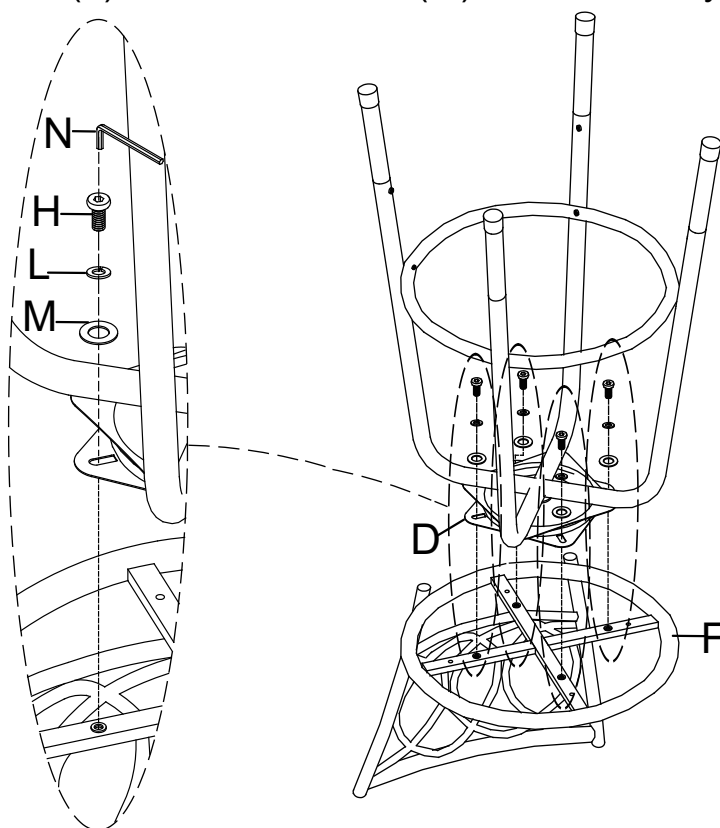

 - 6** Attach Seat Cushion (G) to Upper Frame (F) using Screw (K) with Screwdriver (Not Provided).

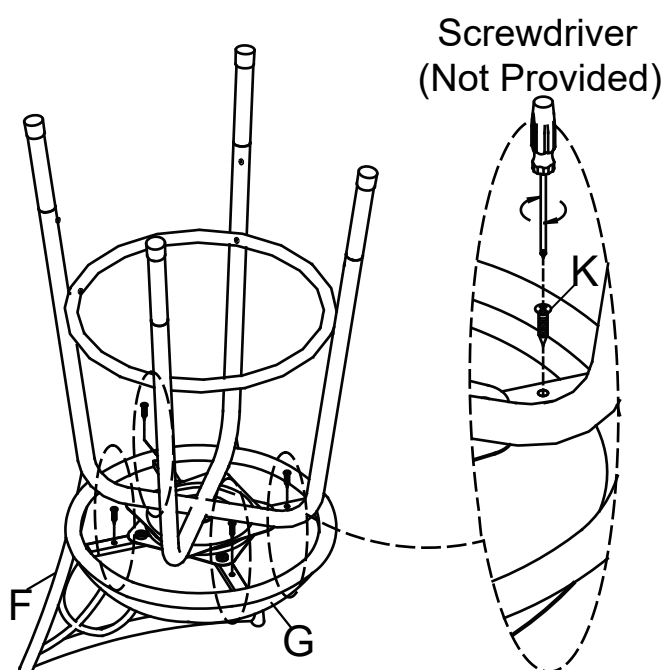

Stand up the stool on an even surface and check that it is balanced. If the stool has a slight wobble, apply downward pressure on the uneven leg and tighten all bolts to fix the imbalance. If the stool is now balanced, apply downward pressure evenly in the center of the stool and tighten all bolts. Do not over-tighten beyond hole depth.

Helpful Tip: Have someone sit in the stool while tightening the bolts from underneath.

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.