 
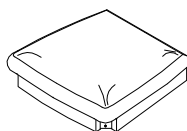


ASSEMBLY INSTRUCTION

FABRIC SIDE CHAIR

A Chair Back

1pc

B Seat Cushion

1pc

C Chair Leg

2pcs

D Flat Washer
Ø5/16"xØ19mm

 
9pcs

E Spring washer
Ø5/16"

9pcs

F Bolt
Ø5/16"x3"


4pcs

G Bolt
Ø5/16"x2"


4pcs

H Bolt
Ø5/16"x1-3/4"

 1pc

I Allen Wrench


1pc

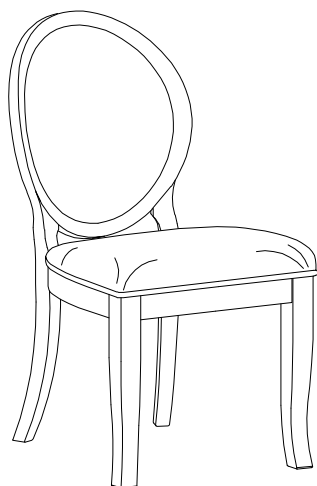

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

-
- 1** Attach Seat Cushion(B) to Chair Back(A), insert Bolt(F&H), Spring Washer(E), Flat Washer(D) and tighten with Allen Wrench(I).

Take the Allen Wrench wrench, and turn the bolts until the legs are secure.
DO NOT TIGHTEN COMPLETELY.
Stop when you feel you are adding force to tighten the bolt.

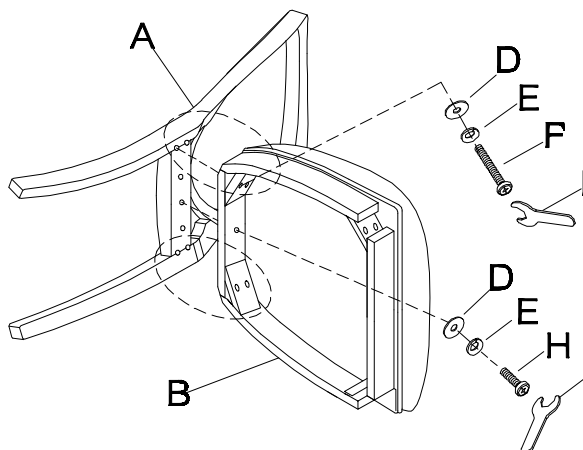

- 2** Attach Chair Leg(C) to Seat Cushion(B), insert Bolt(G), Spring Washer(E), Flat Washer(D) and tighten with Allen Wrench(I).

Helpful Tip:


–Instead of applying downward pressure while reaching under to tighten bolts, have someone sit in the chair while you tighten the bolts.

Stand chair up on an even surface and check that it is balanced.

If there is a slight wobble, apply downward pressure in the corner where a leg is uneven. Keeping pressure in that corner, tighten all bolts.

If balanced, apply downward pressure evenly in the center and tighten all bolts.

Do not over-tighten beyond hole depth.

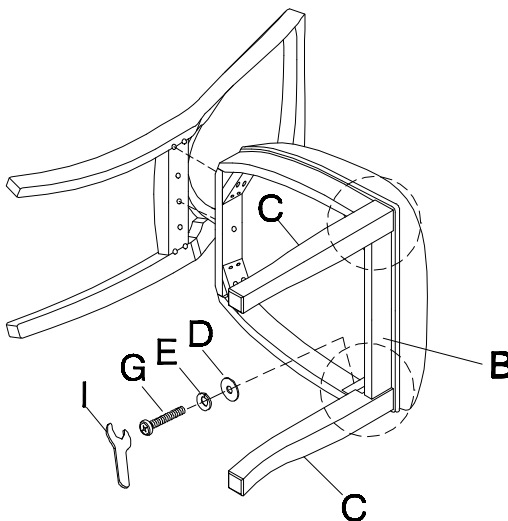

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.