

Once the iron has heated up, allow the temperature indicator light to cycle off and on again before using the iron.

## Storage

Check that the iron is cool and dry and that the water tank is empty before storing in a cool, dry place.

Wrap the cord loosely around the iron; never wrap it tightly, as this could cause damage.

## Specifications

Product code: BEL02098

Input: 220–240 V ~ 50–60 Hz

Output: 2200 W


Water tank capacity: 330 ml

Cord length: 1.9 m

Go to [beldray.com/instruction-manuals.html](http://beldray.com/instruction-manuals.html) and search **BEL02098** to access the instruction manual for your product.

# Quick start guide

Iron

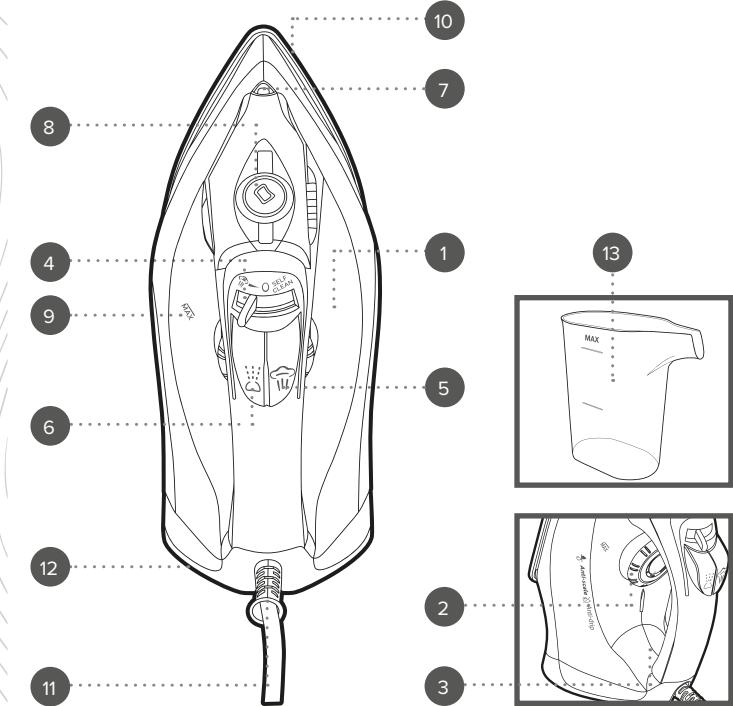

UK  
CA  
CE

### Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.



To register for your extended guarantee, scan the QR code or visit [guarantee.upic.com/beldray](http://guarantee.upic.com/beldray) and register your product within 30 days of purchase. For any further queries, visit [www.beldray.com](http://www.beldray.com).

Manufactured by:  
Ultimate Products UK Ltd.,  
Victoria Street, Manchester OL9 0DD. UK.  
Ultimate Products Europe Ltd.,  
19 Baggott Street Lower, Dublin D02 X658. ROI.

MADE IN CHINA.  
©Beldray trademark. All rights reserved.  
CD301024/MD000000/V1

**beldray**  
Est.1872

Please retain instructions for future reference.

## Description of parts

1. Iron main unit	8. Water tank cap
2. Temperature control dial	9. Max. fill mark
3. Temperature indicator light	10. Ceramic soleplate
4. Steam control/self-clean lever	11. Cord guard
5. Steam burst button	12. Heel rest
6. Water spray button	13. Measuring jug
7. Spray nozzle	

## Dos and don'ts

### DO:

Only use this iron rested on a stable surface.

Always hold the iron by its handle.

### DON'T:

Overfill the water tank past the max. fill mark.

## Care and maintenance

**STEP 1:** Drain the remaining water from the water tank to prevent it from leaking during cleaning.

**STEP 2:** Wipe the ceramic soleplate with a soft, damp cloth and dry thoroughly.

**STEP 3:** If polyester has burnt onto the ceramic soleplate, wipe it with a soft cloth dipped in methylated spirits. Clean off the methylated spirits with a soft, damp cloth and dry thoroughly.

**STEP 4:** To remove any build-up around the steam holes, use a cotton wool tip dampened with methylated spirits. Wipe off the methylated spirits with a soft, damp cloth and dry thoroughly.

## Instructions for use

### Before first use

**STEP 1:** Switch off and unplug the iron from the mains power supply.

**STEP 2:** Wipe the exterior surface of the iron with a soft, damp cloth and dry thoroughly.

**STEP 3:** To remove any impurities that may have occurred during the manufacturing process, it is best to use the iron on an old piece of cloth, making sure that it is on the highest temperature setting suitable for the material.



**NOTE:** When using the iron for the first time, a slight odour and a small amount of smoke may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the iron when it is in use.

## Filling the water tank



**CAUTION:** Do not fill the water tank past the max. fill mark; it is best to check the water level when the iron is on the heel rest.



**WARNING:** Never add descaling, aromatic, alcoholic or detergent products to the water tank, as this could cause damage to the iron or injury to the user.

## Using the iron

### Ironing with steam

The steam settings are ideal for removing creases from fabrics, such as cotton and linen, with ease.

**STEP 1:** Fill the water tank.

**STEP 2:** Plug in and switch on the iron.

**STEP 3:** Rotate the temperature control dial until the desired heat setting is reached.

**STEP 4:** Select the desired steam setting by sliding the steam control lever to the right. The steam setting can be switched off at any time by sliding the steam control switch to the off position.

**STEP 5:** After use, rotate the temperature control dial to the '0' position. Switch off and unplug the iron from the mains power supply and allow to cool thoroughly.



**NOTE:** Allow the iron to reach the desired heat setting before use; not doing so may cause water to drip from the ceramic soleplate. The temperature indicator light will illuminate whilst the iron is heating up but not when it is cooling down; it should not be misinterpreted as a ready-to-use indicator light. The temperature indicator light will cycle on and off during use to regulate the temperature.



**WARNING:** Never leave the ceramic soleplate resting on fabric for any longer than 15 seconds.

## Ironing without steam

For removing creases from more sensitive fabrics, iron without steam.

**STEP 1:** Move the steam control lever to the '0' position.

**STEP 2:** Plug in and switch on the iron at the mains power supply.

**STEP 3:** Rotate the temperature control dial until the desired heat setting is selected.

**STEP 4:** Test the iron on a small area of the fabric to check that the selected temperature is suitable; adjust if necessary.

## Steam burst function

For creases that are stubborn and difficult to remove, use the steam control dial to select the desired steam setting; if necessary, press the steam burst button for extra steam. Wait approx. 5 seconds in-between each burst to prevent any water leaking out from the steam holes.

## Water spray function

The water spray function can be used to help to remove stubborn creases on heavier fabrics. It can also be used when dry ironing delicate fabrics that cannot be steam ironed. To use the water spray function, hold the iron over the area to be ironed and then press the water spray button.



**NOTE:** The water spray function will not work if the water tank is empty. When using the water spray function for the first time, it may be necessary to press the water spray button several times.

## Self-clean function

The self-clean function removes limescale and impurities from within the ceramic soleplate.

It is recommended to use this function on a fortnightly basis or more often if the iron is used in a hard water area.

## Hints and tips

Always start ironing on a low heat setting and work up to a higher one, if necessary; it takes less time for the iron to heat up than it does to cool down.

The temperature of the iron is the hottest when it has initially heated up and will therefore need time to stabilise.