

CINEMA™ 24 ELECTRIC FIREPLACE


Specifications

| Model | BTU | Width | | Height | | Depth | | Viewing Area |
|---------|-------|--------|---------|--------|---------|--------|---------|--------------|
| | | Actual | Framing | Actual | Framing | Actual | Framing | |
| NEFB24H | 5,100 | 24 | 23 | 17 5/8 | 17 1/4 | 8 5/8 | 9 | 11 5/8 X 21 |

Overview



Dimensions

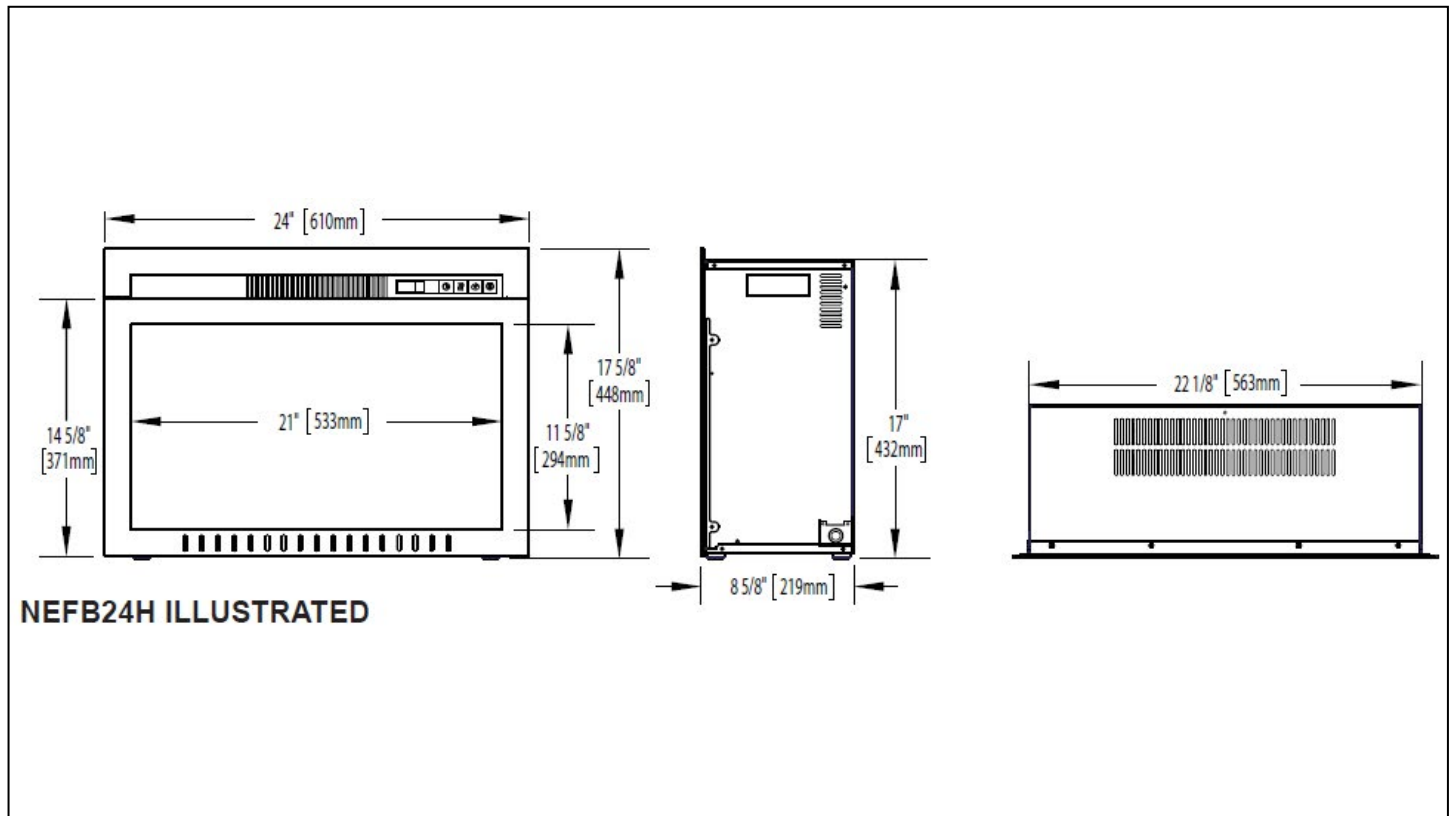

CINEMA™ 24 ELECTRIC FIREPLACE

Clearances

Minimum Fireplace Clearances

MINIMUM CLEARANCE TO COMBUSTIBLES
Measurements are taken from the glass front.

| | | | |
|--------|--------------|-----|---------------------------|
| Bottom | 0" | Top | 0" to 2" (51mm) mantel |
| Sides | 1/4" (6.3mm) | Top | 3" (76mm) to ceiling |
| Back | 1/4" (6.3mm) | Top | 1/4" (6.4mm) to enclosure |

NOTE: The control panel switch is located on the upper right hand side of the appliance. Always ensure this switch remains accessible.

MINIMUM MANTEL CLEARANCES

⚠ WARNING
WHEN USING PAINT OR LACQUER TO FINISH THE MANTEL, THE PAINT OR LACQUER MUST BE HEAT RESISTANT TO PREVENT DISCOLOURATION.

Appliance Installation

NOTE: This appliance is equipped with nylon pads located on the bottom four corners. To prevent damaging the base of the mantel, carefully lift the appliance into the mantel while avoiding contact with the front edge of the mantel base.

- With two people, lift the appliance up and insert into the opening, keeping a 3/8" (9.5mm) space between the appliance and floor base in order to not scratch the floor surface. Do not push or slide the bottom of the appliance on the floor base, see Figure 1.
- Set the appliance down and into place, see Figure 2.
- If the appliance does not sit flat on the floor or mantel base, apply a shim (not supplied) under the nylon pads and adjust until level.

Framing

Prepare rough in framing following the recommended dimensions in Figure 1. For the corner rough in framing, follow the recommended dimension in Figure 2.

Select a location that is not prone to moisture and is located at least 36" (914mm) away from combustible materials such as curtain drapes, furniture, bedding, paper etc.

| | NEFB24H | NEFB27H | NEFB29H |
|---|---------------------|---------------------|---------------------|
| A | 9" (229mm) | 10" (254mm) | 10" (254mm) |
| B | 23" (584mm) | 26" (660mm) | 28" (711mm) |
| C | 17 1/4" (438mm) + F | 18 1/4" (463mm) + F | 19 3/4" (502mm) + F |
| J | 41" (1041mm) | 44" (1118mm) | 46" (1168mm) |
| K | 29" (736mm) | 31 1/2" (800mm) | 32 1/2" (826mm) |
| L | 29" (736mm) | 31 1/2" (800mm) | 32 1/2" (826mm) |

- Once the rough opening has been prepared, and the power has been routed to the right side of the recess, the appliance may be installed.
- The electrical connection must be made prior to placing the appliance into position. (See "HARD WIRING INSTALLATION" section).

Product information provided is not complete and is subject to change without notice. Please consult the installation manual for the most up to date installation information.