

LED Strip Light


INSTRUCTION MANUAL

Read this instruction carefully before installation. Keep it for further reference. Make electrical and grounded connections in accordance with the national electrical code and any applicable code. Always turn off the power supply before installation. This product must be installed in accordance with the applicable installation code by a qualified electrician who is familiar with the construction and operation of the product and the hazards involved.

Part No.	Power	Input Voltage	Luminous Flux	Luminous Efficacy	CCT	Viewing Angle	Ra	PF	Warranty
4125WH-3TW-3CCT	15/20/25W	AC120-277V	3250lm	130lm/W	3500K/ 4000K/ 5000K	120°	>80	>0.9	5 Years
4125WH-3TW-3CCT-MS-EM	15/20/25W		3250lm						
4126WH-3TW-3CCT	30/40/50W		6500lm						
4126WH-3TW-3CCT-EM	30/40/50W		6500lm						
4126WH-3TW-3CCT-MS	30/40/50W		6500lm						
4126WH-3TW-3CCT-MS-EM	30/40/50W		6500lm						

Features HN035-01VR


Operating voltage	10.5-15V DC (supply current > 50mA)
Operating current	<30mA
Output	ON/OFF 1-10V
Stand-by power	≤0.5W
Detection area	50% / 100%
Hold time	30s / 1min / 2min / 5min
Daylight threshold	Disable / 50Lux
Stand-by period	0s / 1min / 5min / +∞
Stand-by dimming level	10% / 30%
Microwave frequency	5.8GHz±75MHz
Microwave power	<0.3mW
Mounting height	Max.4.5m (ceiling mounted)
Detection range	ø4-8m (ceiling mounted)
Detection angle	360° (ceiling mounted) , 150° (Wall Mounted)
Operating temperature	-40°C~+80°C
Size	84*18*11 mm
Warranty	5 years

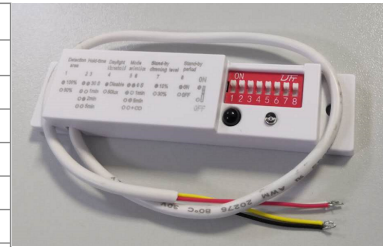


WARNING:

- ⚠ Risk of fire or electric shock. Fixture installation requires knowledge of luminaire electrical systems. If not qualified, DO NOT attempt installation. Contact a qualified electrician.
- ⚠ Risk of fire or electric shock. Suitable for wet locations. Always turn off the power supply before installation. Risk of fire or electric shock. Suitable for non-insulated surface and frame. DO NOT cover fixture with insulation liner or similar material.
- ⚠ DO NOT install fixture on unstable, loose or easily breakable surface. DO NOT exert force on the surface of the fixture.


CCT&Wattage selectable

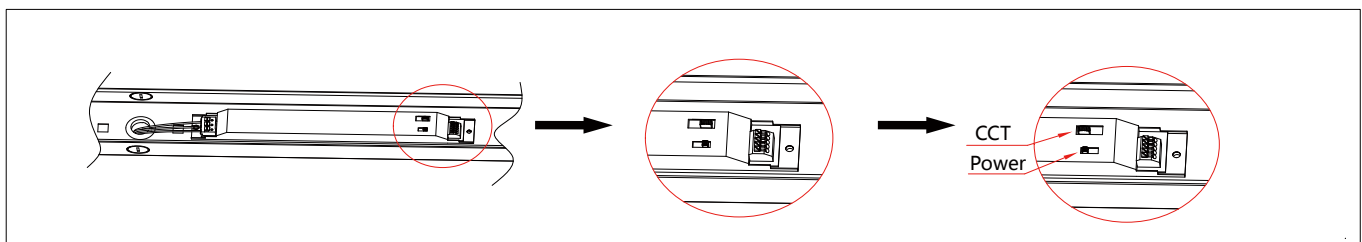


Installation instructions

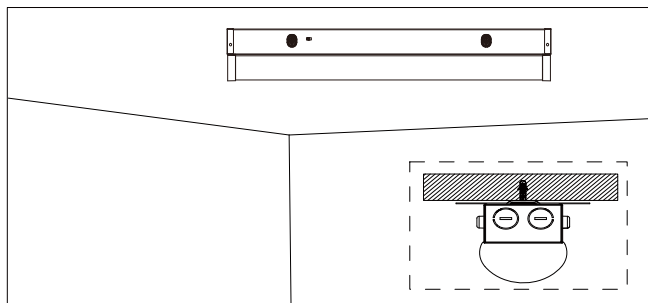


1. Punch a hole on the wall and put the expansion tube inside.

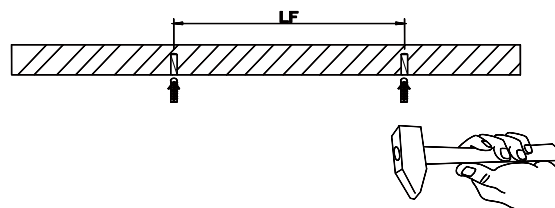



2. Swing open fixture by pushing in/squeezing both buttons located on opposite ends.

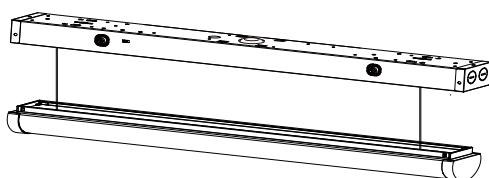

3. Run the fixture's power wires through the center hole of the round J-box adapter. Slide and secure the round J-Box adapter on the center slots located on the back of the fixture. Note: J-Box adapter is used to cover the Junction Box

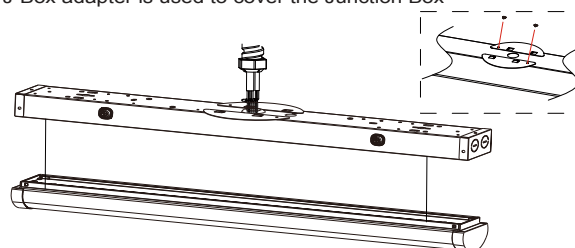

4. Turn off the power and make wiring by using wire nuts according to wiring diagram

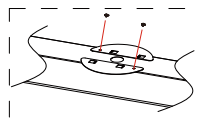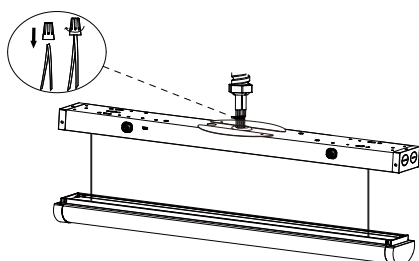


To Source
120-277V

BLACK (LINE)
WHITE (NEUTRAL)
GREEN (GRD)


FIXTURE

PURPLE (DIM +)
PINK (DIM -)


5. Secure the fixture to the wall with the correct mounting hardware

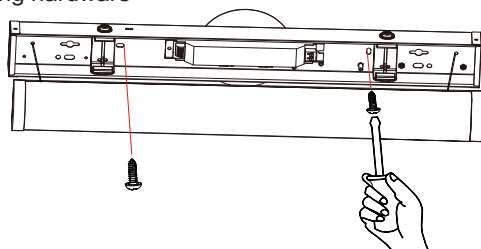


6. Press upward the cover and lock it with springs tightly which located into the fixture.

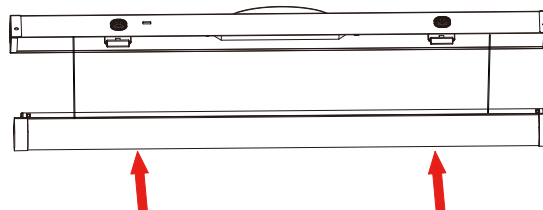

7. The installation is completed and energize the luminaire to verify operation.

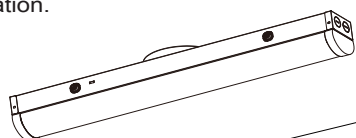


8. Swing open fixture by pushing in/squeezing both buttons located on opposite ends, if need to disassemble the fixture

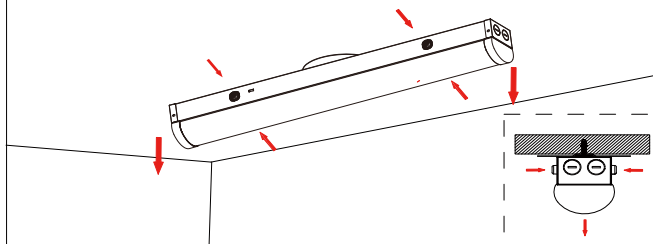


4125WH-3TW-3CCT
 4125WH-3TW-3CCT-MS-EM
 4126WH-3TW-3CCT
 4126WH-3TW-3CCT-EM
 4126WH-3TW-3CCT-MS
 4126WH-3TW-3CCT-MS-EM




9. Turn on the power.

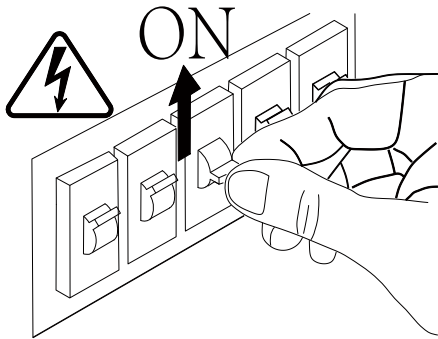


10. First time powering, start emergency test 0.5s.
 In emergency mode, Press the test switch for 3 seconds
 to turn off the current emergency state.

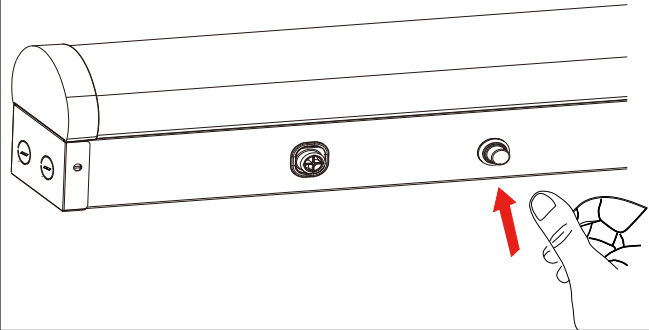

Wiring Diagram: 4125WH

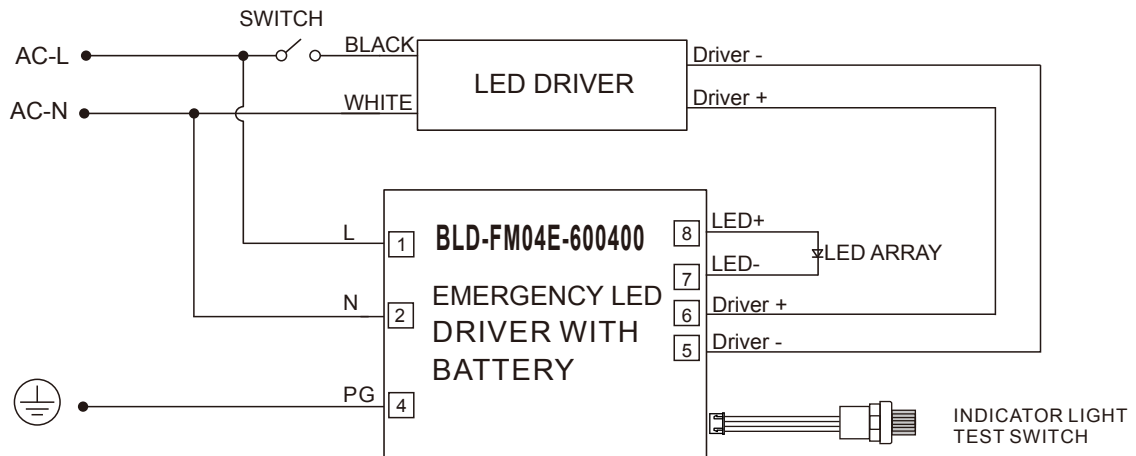

Wiring Diagram: 4126WH

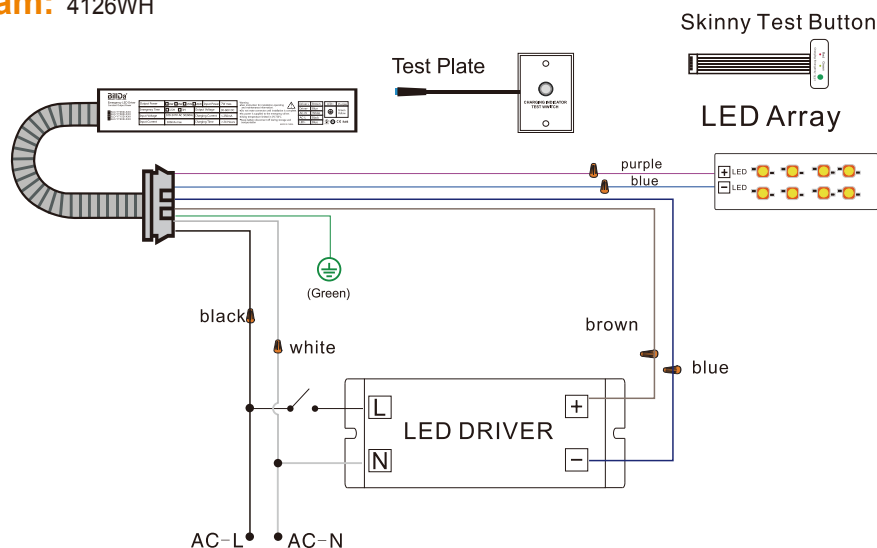

The Installation must be carried out by a qualified electrician.