



PCM-8

23" Popcorn Machine INSTRUCTION MANUAL

This manual contains important information regarding your unit. Please read this manual thoroughly prior to equipment set-up, operation and maintenance. Failure to comply with regular maintenance guidelines outlined in this manual may void the warranty.



WARNINGS

- Do not touch any hot surfaces
- Plug only into a 3-hole grounded electrical outlet of the appropriate voltage
- Do not immerse unit, cord or plug in liquid at any time
- Unplug cord from outlet when not in use and before cleaning
- Do not operate unattended
- Do not use this unit for anything other than intended use
- Do not use outdoors
- Always use on a firm, dry and level surface
- Do not use if unit has a damaged cord or plug, in the event the appliance malfunctions, or has been damaged in any manner
- Keep children and animals away from unit
- Any incorrect installation, alterations, adjustments and/or improper maintenance can lead to property loss and injury. All repairs should be done by authorized professionals only.

TO INSTALL:

1. Take unit out of the box and remove all packing material.
2. Place unit on a solid and level table that is the appropriate height for use.
3. Before first use, please wash all of the glass surfaces and wipe down the interior with a clean, damp sponge.

TO USE

1. Hang the kettle pot on the popper so that its roller bar is on the door side of the unit.
2. Plug the power cord into the electrical outlet of the appropriate voltage.
3. Turn the Power button to ON
4. Turn the light and heater to the ON setting before adding butter or oil to the kettle. Please don't use more than .5 oz of oil or butter in the kettle. NOTE: Only use butter or oil with this unit. Liquid sugar or any other sweetener can cause damage to the pot and potential injury to the user
5. Allow the kettle to pre-heat for 3-4 minutes or until steam is visible.
6. Open the lid to the kettle and add the kernels into the pre-heated pot. Once popcorn is in the kettle, close the lid. Please use caution as the lid to the kettle will be very hot.
7. Turn ON the stirrer button and close the main units door. The popcorn inside the kettle will begin popping after 2-3 minutes.
8. When the popping has finished, turn the stirrer and heat to OFF.
9. To empty the contents of the kettle completely, gently turn the roll bar.
10. Leave on warming light to keep the popcorn inside the unit warm and ready to serve. Turn off the heat and stir buttons to prevent motor burnout.

CLEANING & MAINTENANCE

NOTE: To maintain cleanliness and increase service life, this item should be cleaned daily. Do not immerse the unit in water or any other liquid. If liquid enters the electrical compartment it may cause a short circuit or electrical shock.

1. Turn off all switches on the unit and unplug the unit to let cool down.
2. Add a kettle cleaner directly into the kettle and follow cleaning directions on the bottle
3. Turn on the heater and stirrer and allow for the water to boil for 2 minutes.
4. Turn off the heater and stirrer after 2 minutes of boiling and then dump out water into a pan and discard.
5. Wipe the kettle with a damp cloth.
6. For the cabinet, use a degreaser and damp cloth to wipe the interior and exterior.


NOTE: Once you finish popping, unplug the unit from the power supply and allow for the unit to cool down completely. When removing the pot, please use caution near the heat lamp bulb.

NOTE: It is recommended to clean the kettle pot after every 3 to 4 uses or before it goes into storage for an extended period of time.

TROUBLESHOOTING:

Problem	Cause	Solution
Light is not going on	Unit is not plugged into outlet	Check the power cord and plug in
Unit does not heat	Wire for heating tube is loose	Tighten wire
	Heating tube is burnt	Replace the heating tube
	Thermostat	Replace the thermostat

Wiring Diagram for the Popcorn Machine

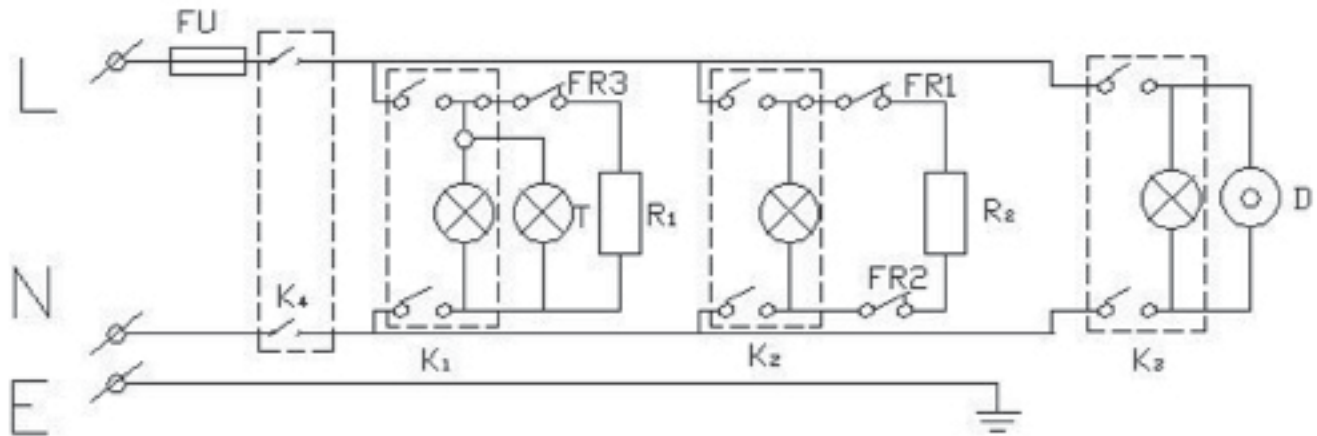

- R2 - Heat tube 115V/850W
- FR1 - Temperature Limiter
- R1 - Insulating Tube 115V/250W
- FR2 - Temperature Limiter
- T - Light
- D - Stir Motor 115V/14W
- K1 - Warm & Light Switch
- K2 - Heating Switch
- K3 -Stiring Motor Switch
- FR3 - Thermostat
- FU - Protective Tube 20A
- K4 - Power Switch