


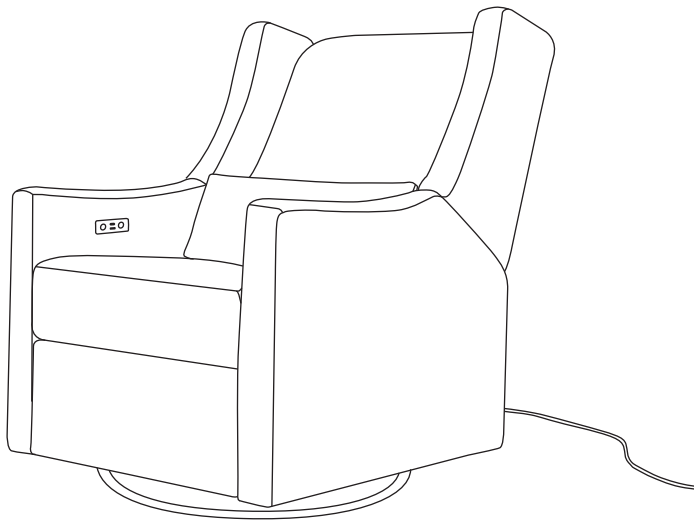

## KIWI GLIDER RECLINER WITH ELECTRONIC CONTROL AND USB

Care and Maintenance



Congratulations! This product will provide many years of service if you adhere to the following guidelines for care, maintenance, and operation. This product is for residential use only. Any institutional use is strictly prohibited.

DO NOT SUBSTITUTE PARTS. ALL MODELS HAVE THEIR OWN SPECIFIC QUANTITY OF PARTS AND HARDWARE. YOUR MODEL MAY LOOK DIFFERENT FROM THE ONE ILLUSTRATED DUE TO STYLISTIC VARIATIONS.

## Maintenance and Cleaning:

To preserve the hand-crafted quality of your furniture, we recommend using a cotton cloth and a non-toxic cleaner. Periodic polishing or oiling on wood stains will help to maintain the rich wood tones. For our upholstered products, we recommend using water to clean suede products and light foam cleaners for all other fabrics.

If your child is teething, some furniture's finish may be affected. Be assured that our low-VOC lacquers, finishes and glues comply with applicable regulations and standards. Touch up kits and replacement parts are available for purchase upon request by contacting us at 03 8838 8006 or [info@designkids.com.au](mailto:info@designkids.com.au)

## Important Note:

Improper assembly can result in damage to your furniture or cause harm to your child. Proper assembly is critical to ensure a safe and comfortable end result. Please read all instructions before assembly and keep instructions for future use.

# WARNING

- Failure to follow these warnings and the assembly instructions could result in serious injury or death.
- Read all instructions before assembling this product.
- Keep instructions for future use.
- Do not throw away packaging material until assembly is complete.
- Properly discard all packaging materials after assembly is complete.
- This product has many moving parts, serious injury can occur if not used properly. Keep hands, fingers and body parts away from the mechanism. To reduce the risk of head entrapment and other injuries, keep children and pets away from openings and moving parts in and around furniture.
- Proper assembly of this item requires 2 people.
- Check this product for damaged hardware, loose joints, missing parts or sharp edges before and after assembly and frequently during use. DO NOT use this product if any parts are missing, damaged or broken. Contact Babyletto for replacement parts and instructional literature if needed. DO NOT substitute parts.
- Maximum weight capacity: 130kgs.

## ONE YEAR LIMITED WARRANTY:

We will replace any missing parts at the time of purchase or any defective item within a one year period from the date of original purchase. An extended warranty period of three years is valid only on the electronic controls and electronic mechanisms of this product. Please keep your receipt so that we may process your warranty request. This warranty only covers new units with original packaging and ownership, and is not transferable. It does not cover any used, secondhand or demo models.

This warranty does not cover any damaged or defective parts that result from installation and assembly, normal wear and tear, abuse, negligence, improper use or alteration to the finish, design, and hardware of the product. The specific legal rights of this warranty may vary from state to state. Some states do not allow any exclusion or limitation of incidental damages. Some states do not allow limitation on how long an implied warranty lasts.

---

Registering your product is even easier than before. You can register your product on our website at :

[www.babyletto.com/registrations](http://www.babyletto.com/registrations)

IF YOU WOULD LIKE TO ORDER REPLACEMENT OR MISSING PARTS. PLEASE VISIT US AT:

**[WWW.BABYLETTO.COM/SUPPORT](http://WWW.BABYLETTO.COM/SUPPORT)**

OR YOU CAN CONTACT US BY MAIL:

PO Box 4129






Ringwood VIC 3134

Australia

Tel: 03 8838 8006

# KIWI GLIDER RECLINER WITH ELECTRONIC CONTROL AND USB
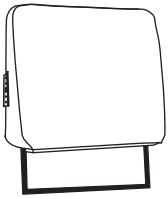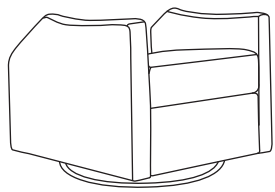
## Parts List


Parts	Ref. No	Description
	<b>A x 1</b>	Seat Back
	<b>B x 1</b>	Base
	<b>C x 1</b>	Cushion
	<b>D-1 x 1</b>	Left Side Panel
	<b>D-2 x 1</b>	Right Side Panel

★ Be sure you follow the instructions in the order that they appear.


# KIWI GLIDER RECLINER WITH ELECTRONIC CONTROL AND USB

## Assembly Instructions


### Step 1

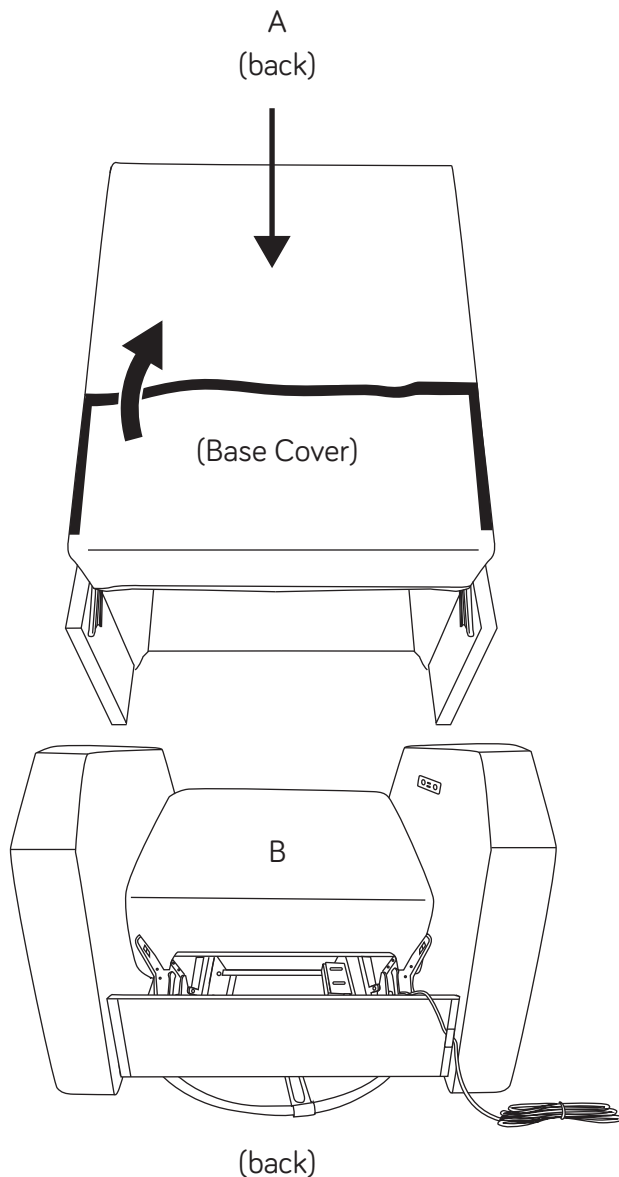

Step 1 (in details)

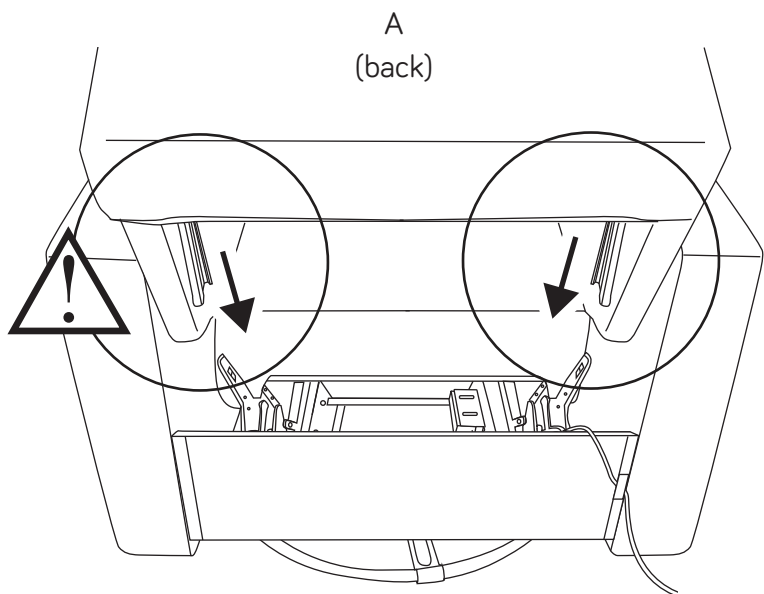



B  
(back)

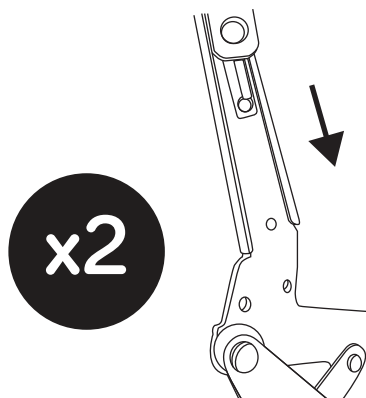

# KIWI GLIDER RECLINER WITH ELECTRONIC CONTROL AND USB



## Tips on the Locking Mechanism

1.

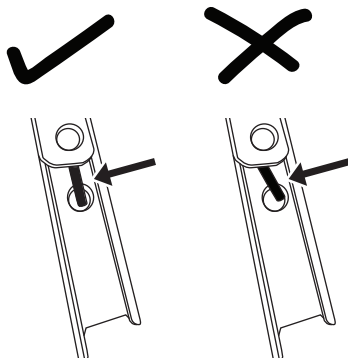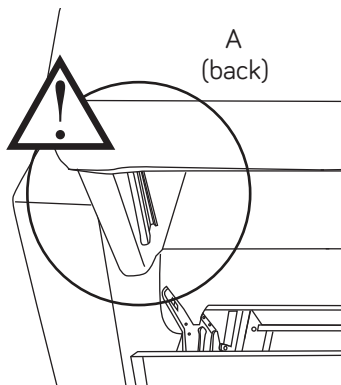

Make sure the locking mechanism on each metal glide is aligned in the **center**.


2.

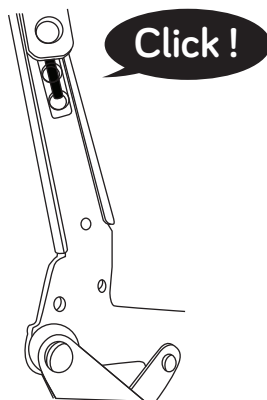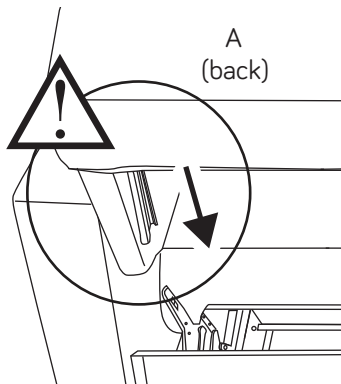



Firmly push each side into place one at a time. **You should hear a click** when the chair back locks into place on each side.



Step 2

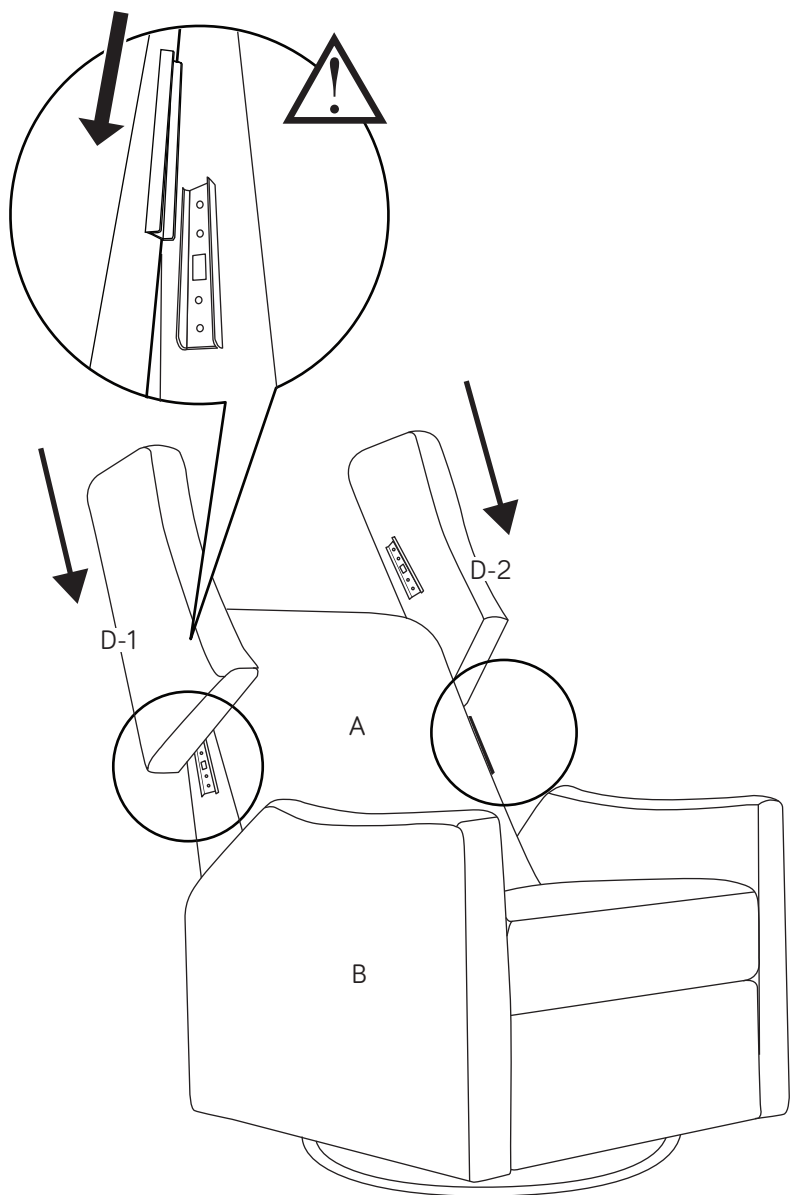


Step 3

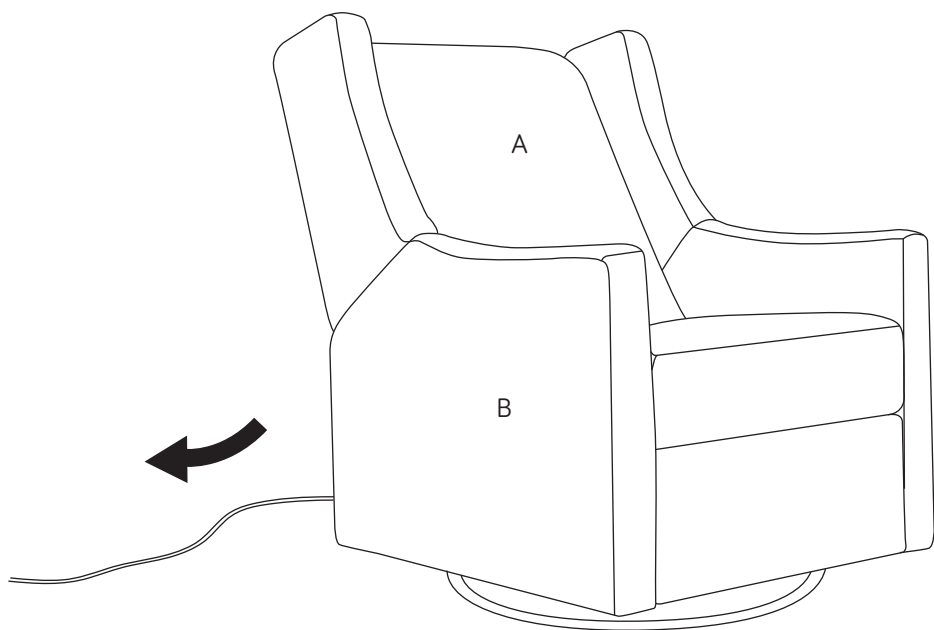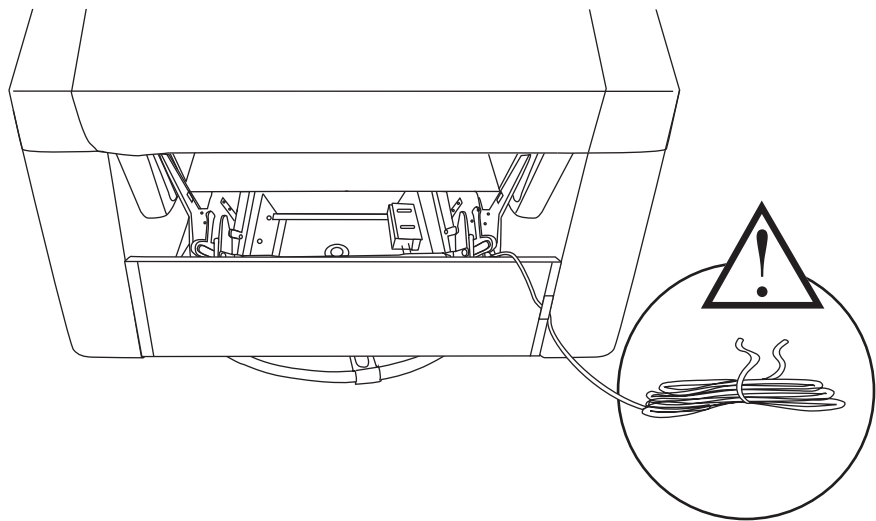




# WARNING


**MAKE SURE POWER CABLE IS  
NOT UNDER THE METAL BASE.  
THIS IS A FIRE HAZARD.**

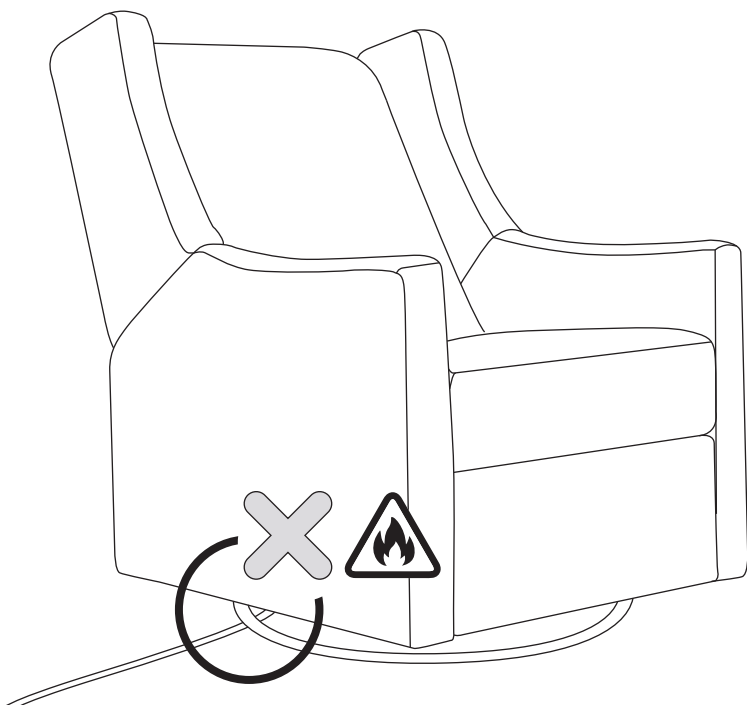

Step 4

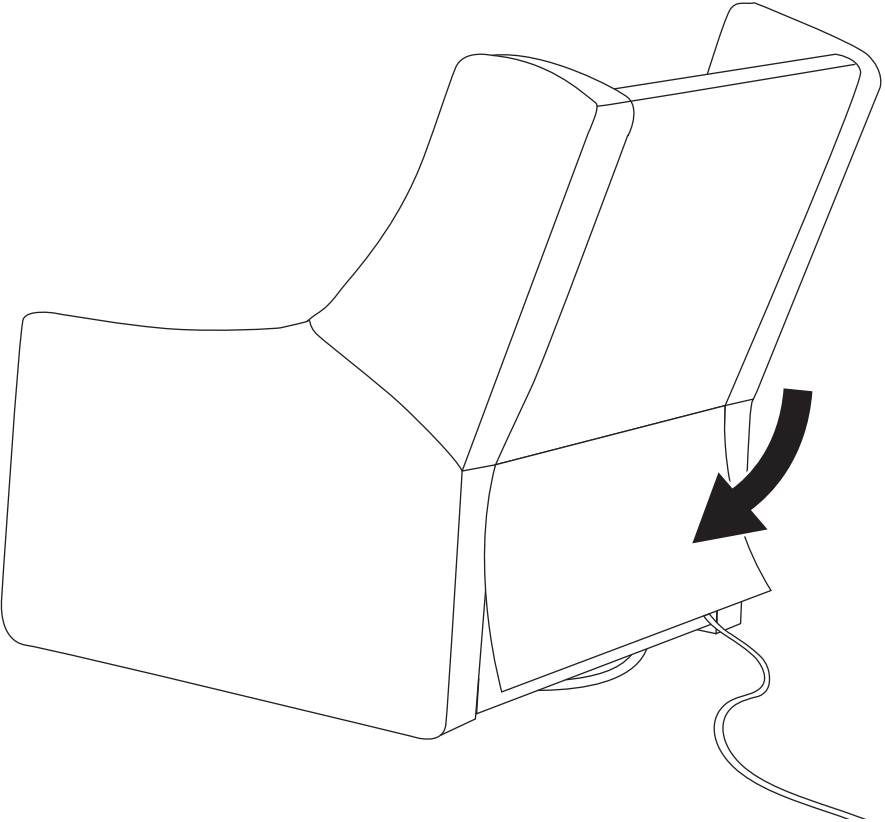

## Step 5

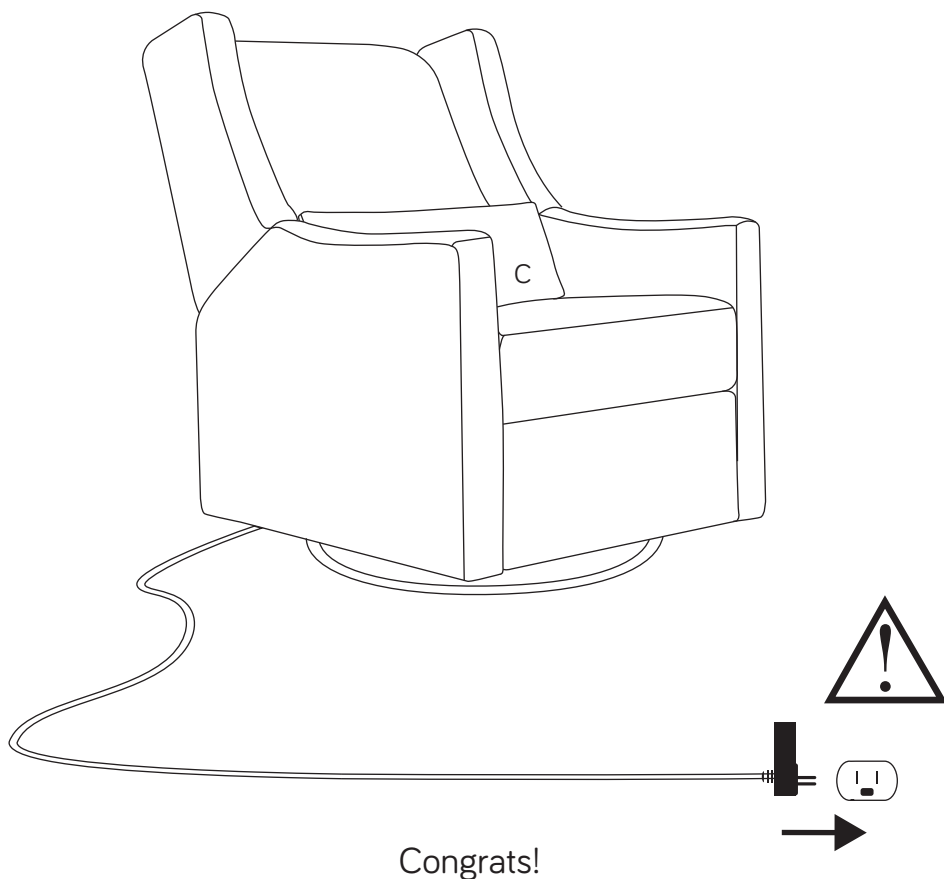

\* If chair is not functioning after following these steps, please check the cord underneath the chair is fully plugged in to the chair motor.

## **CAUTION :**

Risk of electric shock.

Dry location use only.

This Class B digital apparatus complies with Canadian ICES-003.

This Device Complies with part 15 of the FCC rules.

## **WARNING :**

Operation is subject to the following conditions:

- 1) This device may not cause harmful interference, and
  - 2) This device must accept any interference received, including interference that may cause undesired operation.
- 

## **POWER CORD SAFETY**

### **WARNING:**

UNPLUG AND REMOVE POWER CORD FROM THE WALL AND THE POWER SOCKET AT THE REAR OF THE POWERED RECLINER WHEN NOT IN USE AND STORE THE CORD OUT OF REACH OF CHILDREN.

### **DANGER:**

**To reduce the risk of electric shock:**

Always unplug the powered recliner from the electrical outlet before cleaning.

---

## **KIWI GLIDER RECLINER WITH ELECTRONIC CONTROL AND USB**

Control Panel



- Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: --Reorient or relocate the receiving antenna. --Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. --Consult the dealer or an experienced radio/TV technician for help.

# KIWI GLIDER RECLINER WITH ELECTRONIC CONTROL AND USB

Tension Adjustment

From Chair to Recliner

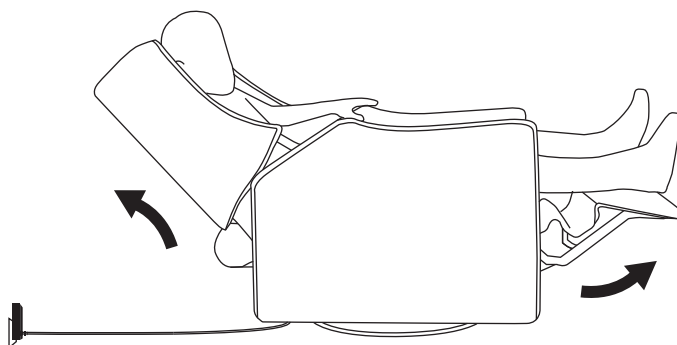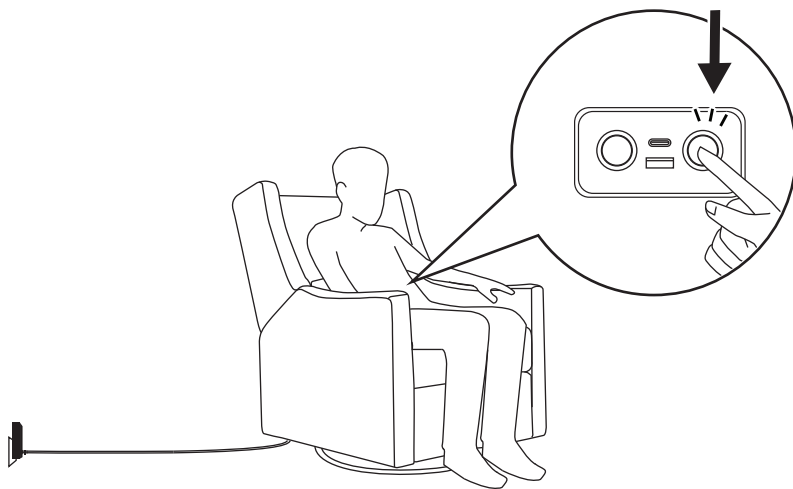


The chair can be made to recline by simply pressing the button located at the inside right of the armrest.



# KIWI GLIDER RECLINER WITH ELECTRONIC CONTROL AND USB

Tension Adjustment

From Recliner to Chair

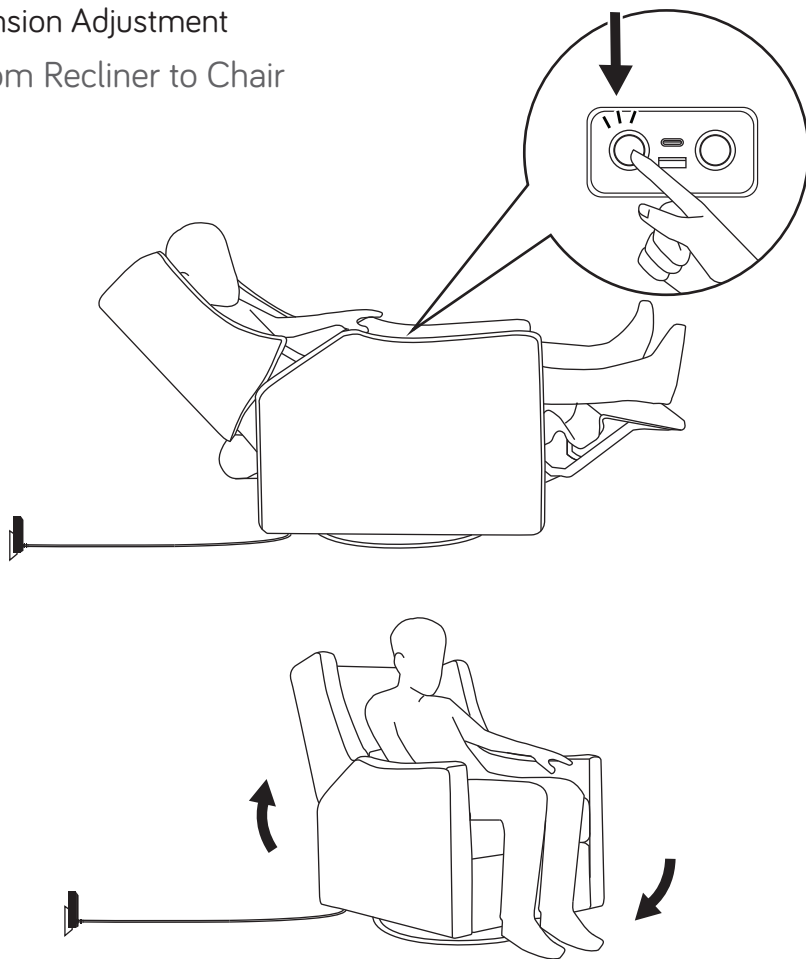


The chair is returned to the upright position by pressing the button located at the inside right of the armrest.

## CAUTION :

Do not allow children to play on this mechanized furniture or operate the mechanism. Leg rest folds down on closing so that a child could possibly be injured. Always leave in an upright and closed position. Keep hands and feet clear of mechanism. Only the occupant should operate it.

# KIWI GLIDER RECLINER WITH ELECTRONIC CONTROL AND USB

To Disassemble :

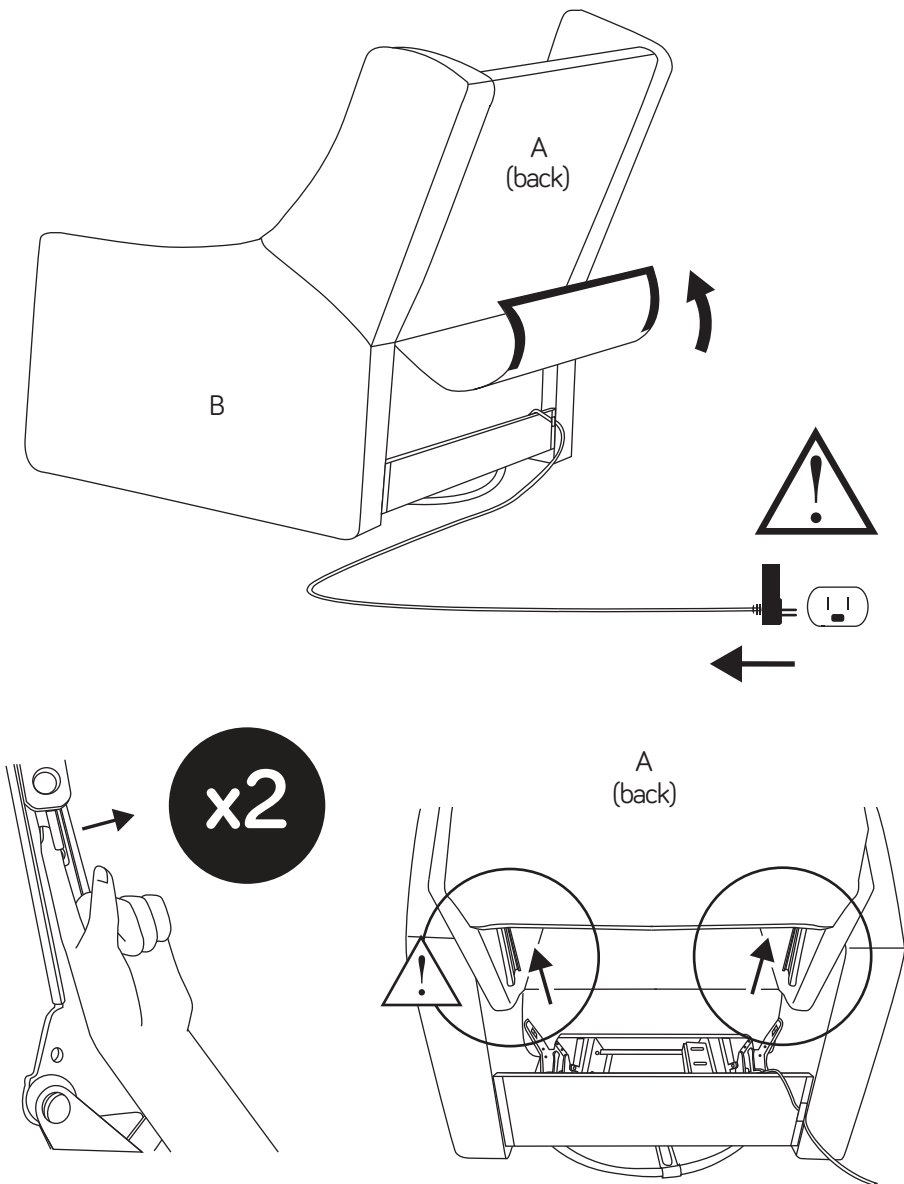



 **babyletto**