



BEST CHOICE
PRODUCTS



INSTRUCTION MANUAL

Kids Sticky Ball &
Axe Throwing Game



WARNING

Choking Hazard - Small parts
Not for children under 3 years old.

Choking Hazard - Small balls
Not for children under 3 years old.

bestchoiceproducts.com

! NOTICE

Please retain these instructions for future reference.






- This product requires adult assembly and supervision when in use.
- This product contains small parts. May result in choking hazard for children under 3 years.
- This product should be used only in an open area, clear of obstructions or breakable items.

⚠ WARNING

- This product contains small balls. May result in choking hazard for children under 3 years.
- Do not throw projectile toys at players eyes or face, and do not throw at animals.
- This product contains a metal lining which, if exposed may cause injury or death.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- If any parts are missing, broken, damaged, or worn, stop using this item until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

Age Range: 3+ Years

PARTS

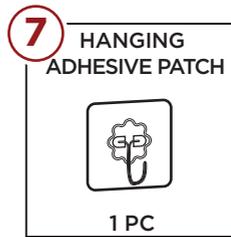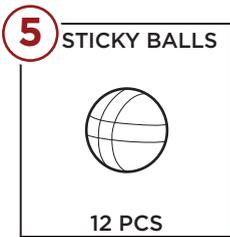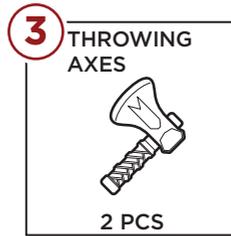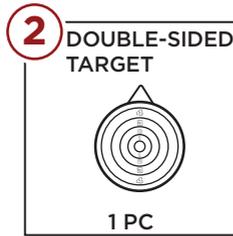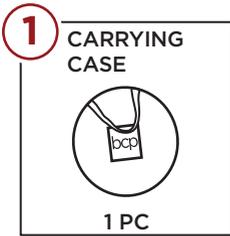


THROWING METHODS (AXE)

The ideal axe throw will allow the axe to flip end over end, allowing the weight of the head to move through the air and fly straight at the target. Experiment with these methods to find your throwing style.


One Handed: With one hand, grip the **part 3 axe handle** near the bottom.

Raise the axe over your shoulder, then extend your elbow and release the axe in front of your chest.

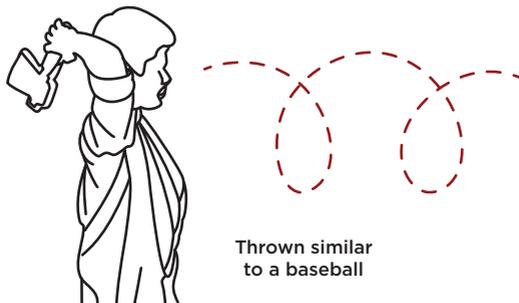


Two Handed: Grip the **part 3 axe handle** with both hands.

Raise the axe over your head, then extend your elbows and release the axe in front of your chest.

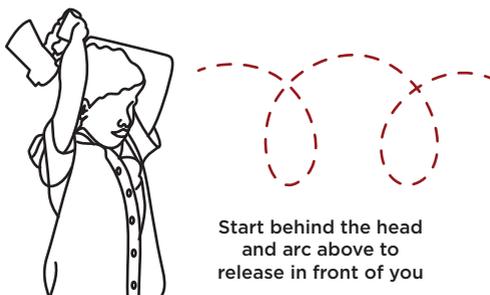

Underhand: With one hand, grip the **part 3 axe handle** near the bottom.

Lower the axe near your hip, then swing your arm upward and release the axe in front of your chest.

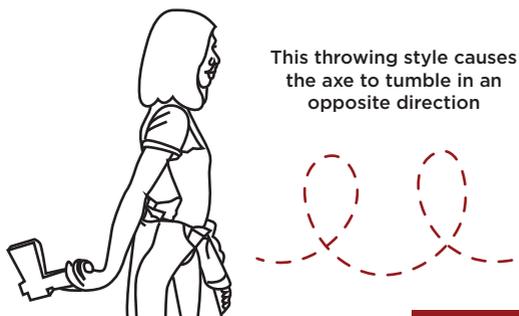


Recommended: Step into the throwing motion to build momentum, increase speed, and help the axe fly straighter.

THROWING METHODS (Throwing Star)

The ideal shuriken (throwing star) rotates 360-degrees multiple times before contact with the target. Because the points of contact (the points) are so small, it is recommended that you throw gently to achieve contact with the target.

Overhand: In one hand, grip the **part 4 throwing star** between your thumb and forefinger.


Raise the star over your shoulder, then extend your elbow and release the star in front of your chest.

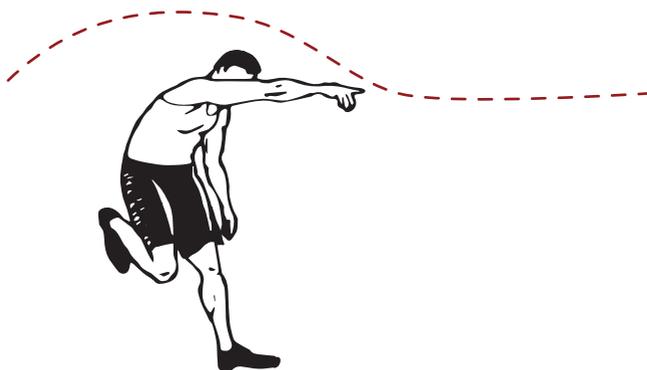

Side Face: In one hand, grip the **part 4 throwing star** between your thumb and fore finger.

Turn so the shoulder of your dominant/throwing arm is in line with the target and turn your wrist so the flat of the star faces upward.


Keeping your wrist straight, extend your arm toward the target and release the star when it is in line with the target.

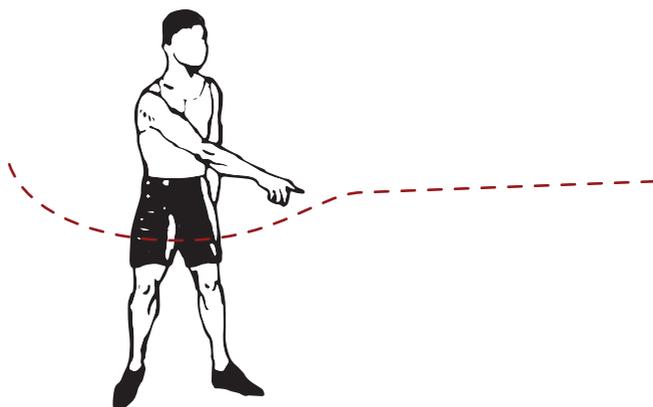


TARGET STORAGE

Properly fold your target to make it last longer.


- 1 Hold the **part 2 target** flat in front of you.

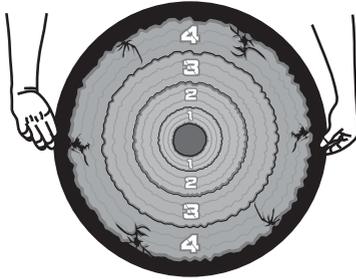

- 2 Twist each side of the target in opposite directions, creating a figure 8.

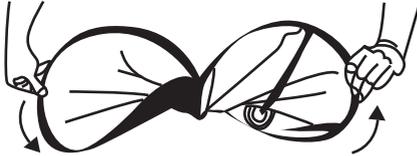

- 3 Fold the two halves of the figure eight together, then tuck the smaller of the two side into the large.

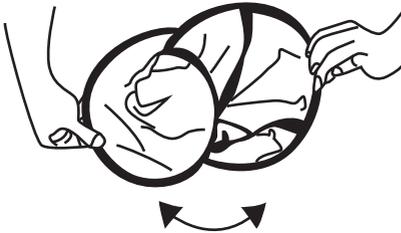

- 3 Store the folded target in the part 1 carrying case.



Earn points while you shop. Join today!

bestchoiceproducts
rewards

Join | Earn | Redeem

Give your friends 15% off their first order! For each successful referral you'll receive 100 points.

bestchoiceproducts.com



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledged by Best Choice Products as undamaged.

© 2023 Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Tustin, CA 92780

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.