

CLOCK ASSEMBLY PARTS



Head Assembly



Mid-Collar Assembly







Lower Wood Post







Base



CLOCK SET UP INSTRUCTIONS

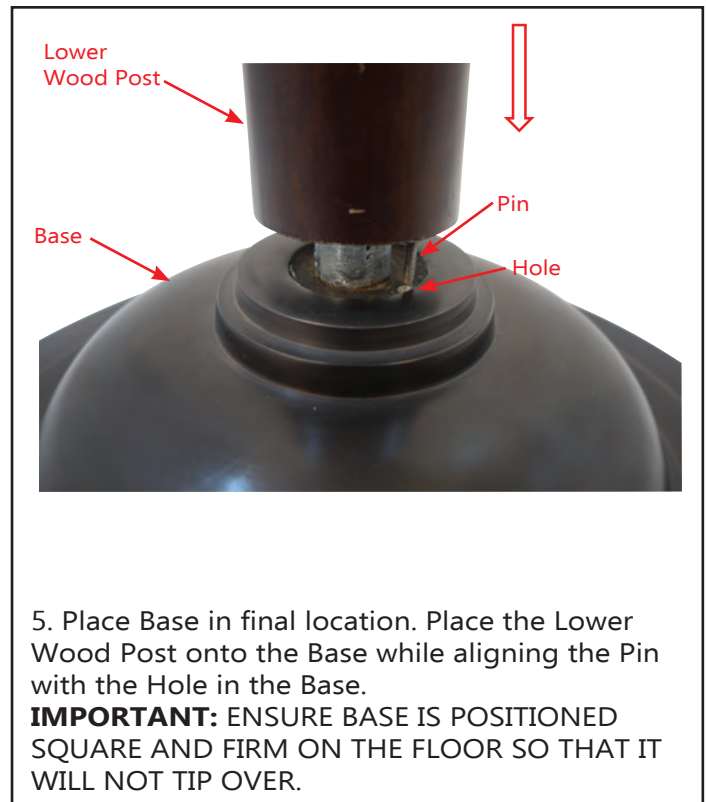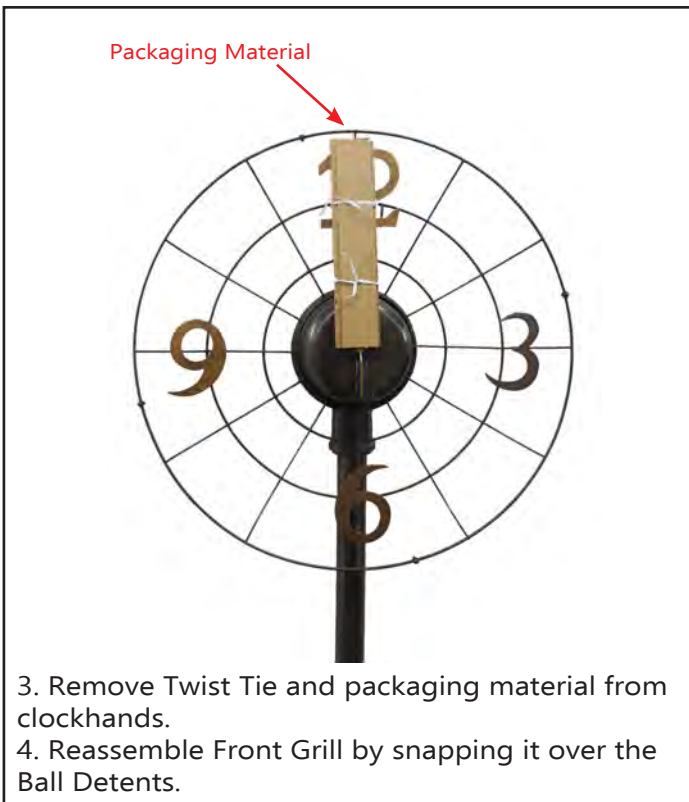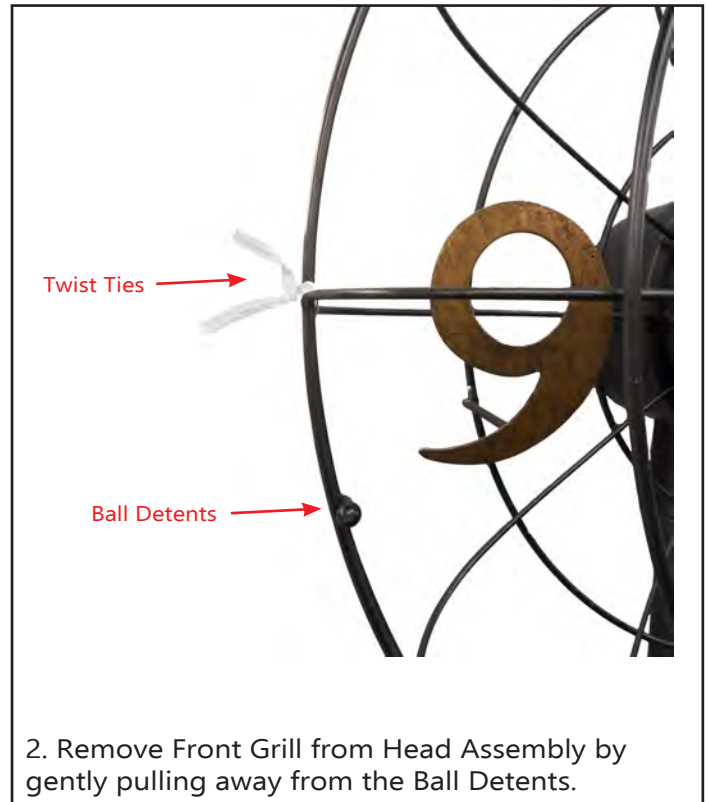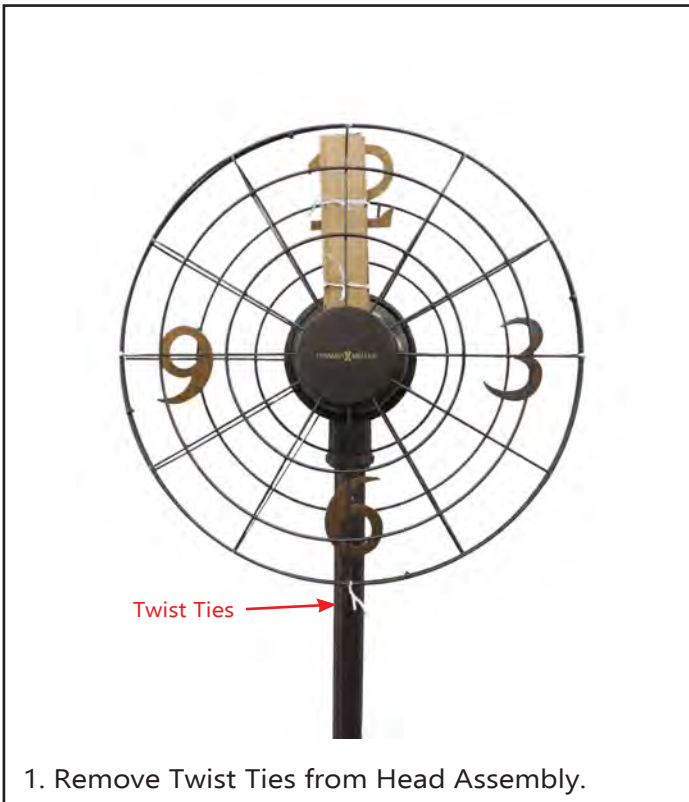

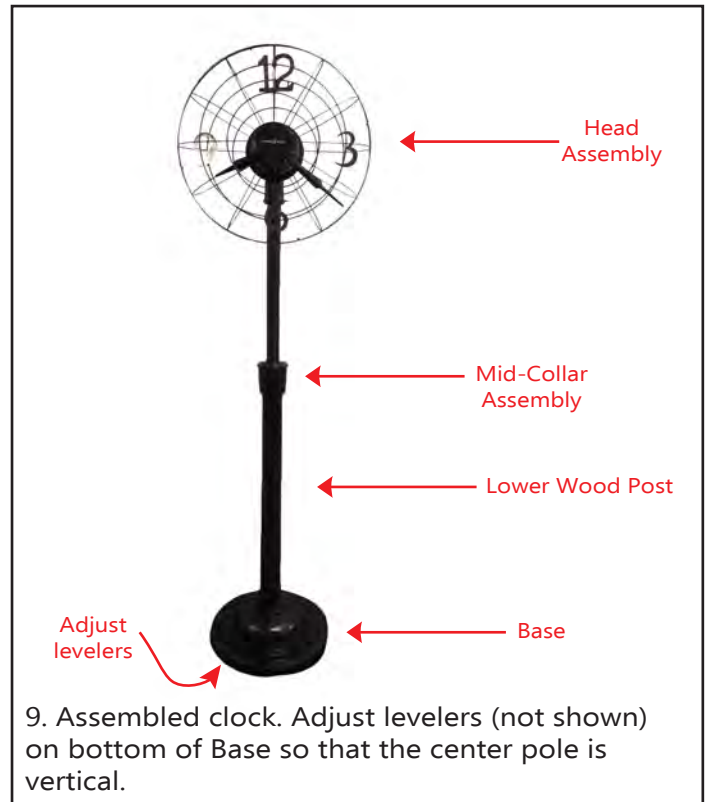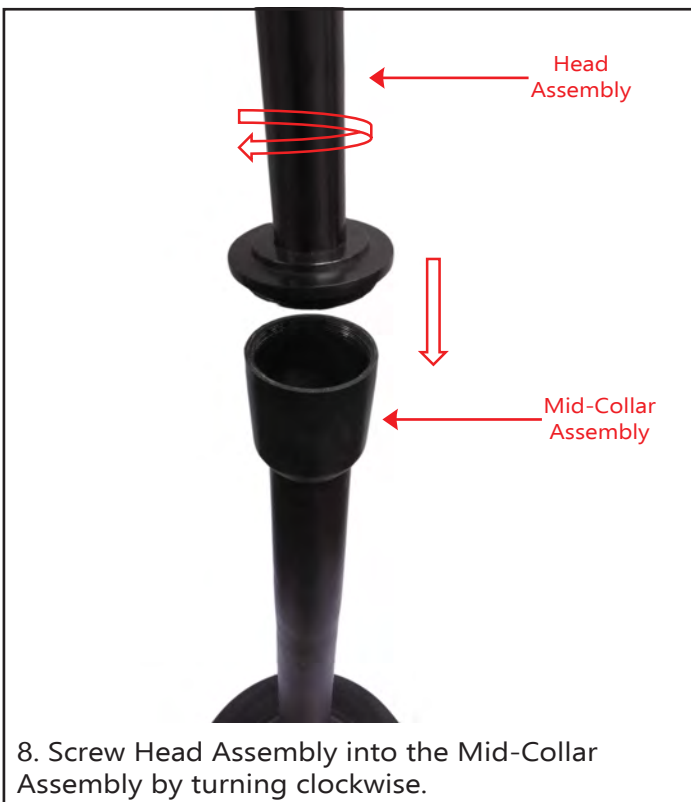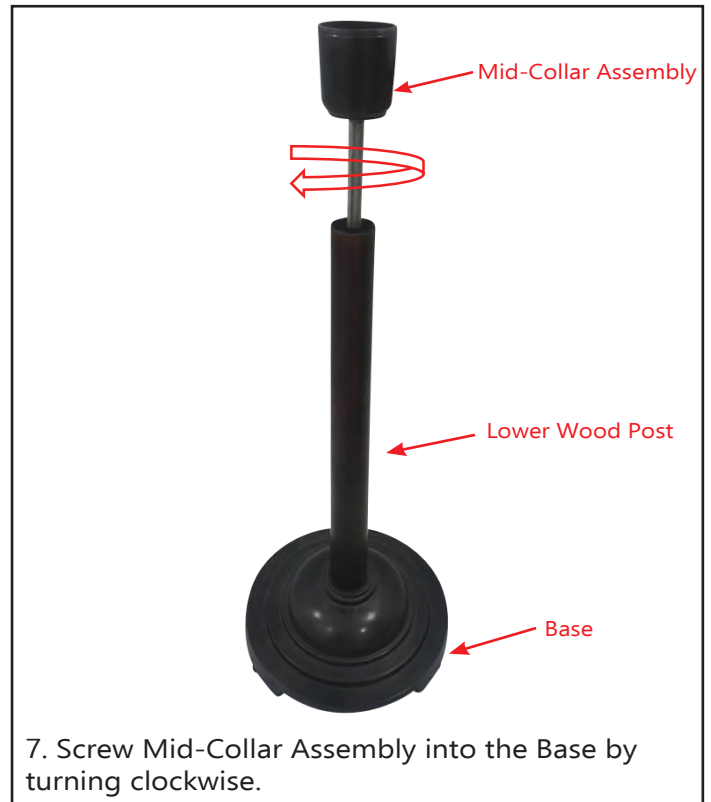

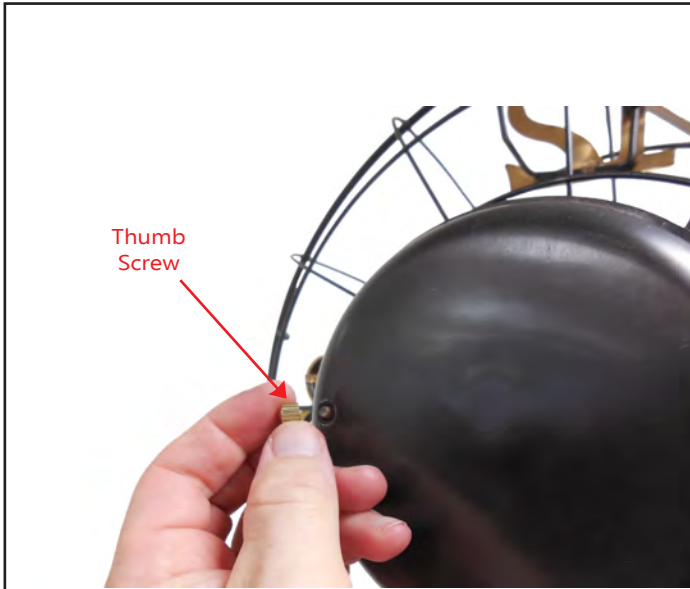

10. To access Clock Movement, remove (2) Thumb Screws at the 3 o'clock and 9 o'clock position on the back of the Head Assembly.



11. Install one "AA" size alkaline battery according to the +/- symbols in the battery holders. Turn the Time Setting Dial to rotate the hands to the correct time.

IMPORTANT: KEEP PLASTIC BAGS AND SMALL PARTS AWAY FROM CHILDREN.