88 5182 26 Upholstered Bench


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occuring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.



PART LIST

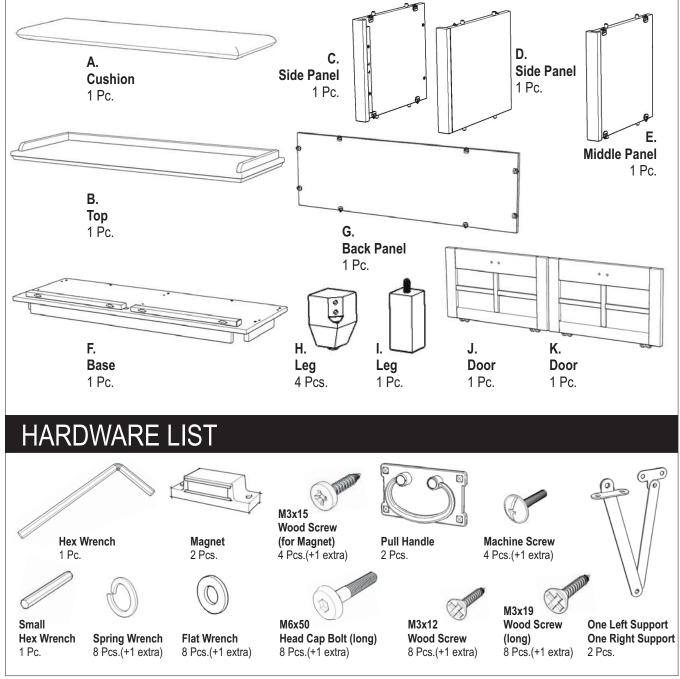

Tools required for assembly : <u>Phillips</u> screwdriver Home Styles Consumer Assiste Tools recommended for assembly : Level

Home Styles Consumer Assistance: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319


Assembly Instructions 2/4


IMPORTANT

- * Do not tighten up all the screws until each part is properly assembled.
- * You should keep Hex Wrench in a safe place as you may need to tighten up the Head Cap Bolts in the future.

Lock

- * Use a soft cloth between these parts and the floor.
- * After assembly, item must be level to work properly. Use the included adjustable levelers to level.

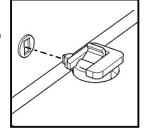

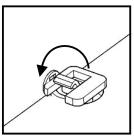


D

Figure 1

Figure 2



Attach Side Panels (C) and (D) to Back Panel (G), then flip the Locks. (See Figures 1 and 2)

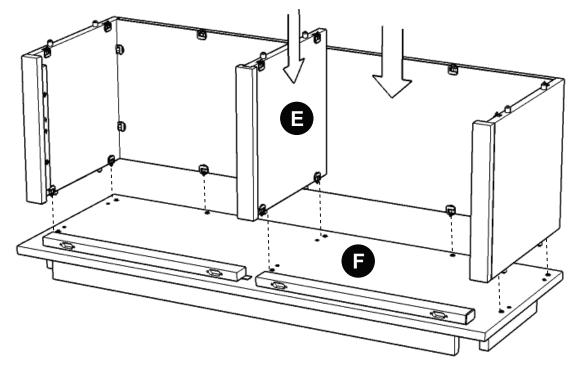


G

STEP 2

Attach unit and Middle Panel (E) to Base (F) and flip the Locks.

Assembly Instructions 3/4

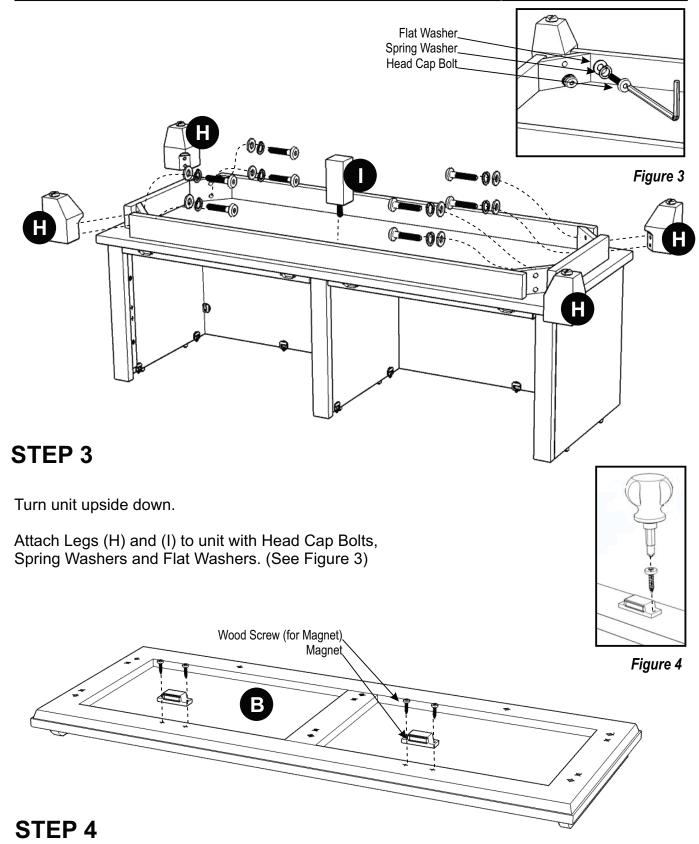

Place Top (B) upside down on a soft cloth.

Attach Magnets to Top (B) at the pre-drilled holes of Top (B) with Wood Screws (for Magnet). (See Figure 4)

Assembly Instructions 4/4

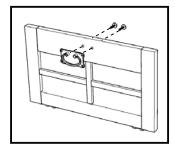
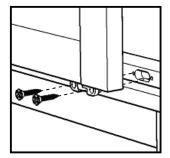


Figure 5




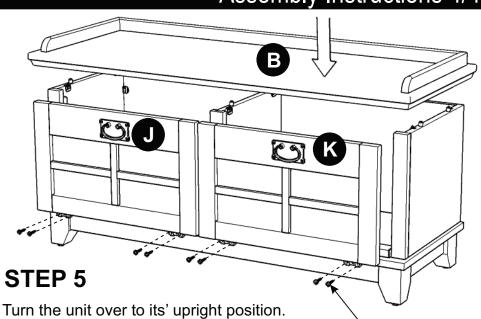


Figure 6

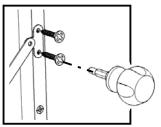

Attach Top (B) to unit and flip the Locks.

Wood Screw (long)

Attach Pull Handles to Doors (J) and (K) with Machine Screws. (See Figure 5)

Attach Doors (J) and (K) to unit by inserting the door hinges into the slots in unit and attach with Wood Screws (long). (See Figure 6)

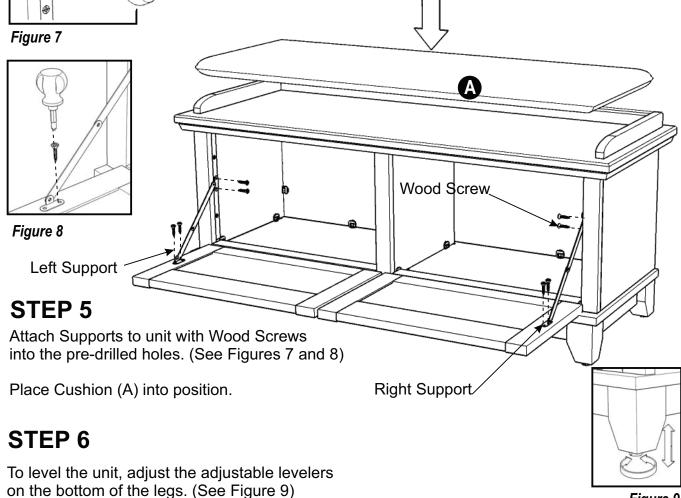


Figure 9