

4.0V LITHIUM-ION CORDLESS SCREWDRIVER

Item Number W7730

OWNER'S MANUAL




Performance Tool®

▲WARNING: READ, UNDERSTAND AND FOLLOW ALL INSTRUCTIONS AND WARNINGS BEFORE OPERATING THIS TOOL. FAILURE TO DO SO MAY RESULT IN PERSONAL INJURY AND/OR PROPERTY DAMAGE AND WILL VOID WARRANTY.

PT[®]
Performance Tool

TOOL FEATURES

- | | |
|---------------------------|------------------------------------|
| 1. 1/4 in. Hex Bit Chuck | 8. Directional Switch/Trigger Lock |
| 2. Quick Change Collar | 9. Trigger |
| 3. Adjustable Clutch | 10. Handle |
| 4. Work Area LED | 11. USB-C Charging Port |
| 5. Handle Locking Button | 12. Flashlight Switch |
| 6. Handle Swivel Joint | 13. Flashlight LED |
| 7. Battery Status Display | 14. USB/USB-C Charging Cable |

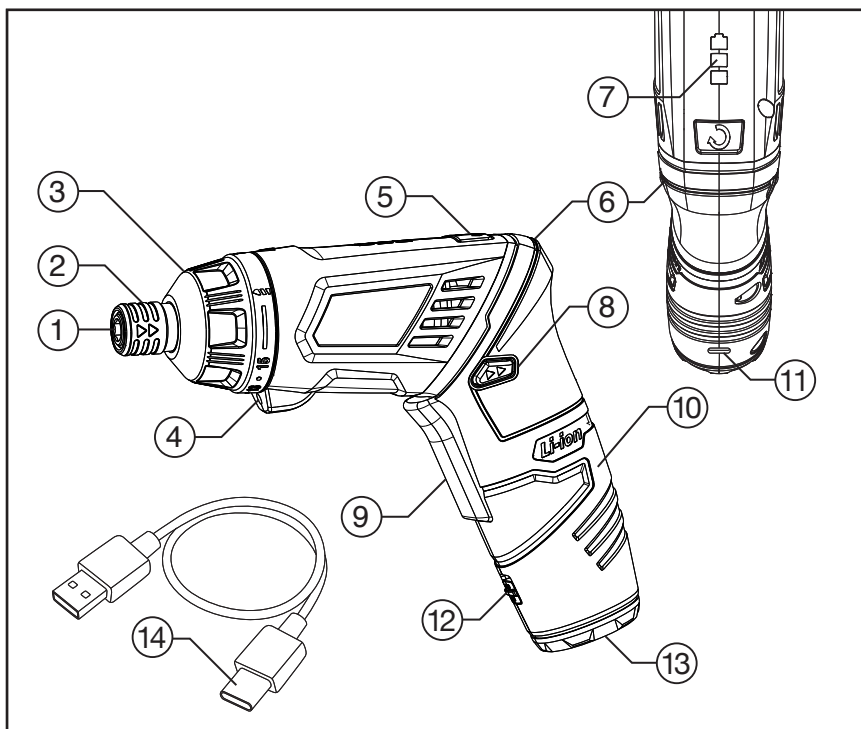

SPECIFICATIONS:

Drive Style: 1/4 in. Hex w/Quick Connect Chuck
 Battery Type: Lithium-Ion/1300mAh
 No-Load Speed: 210 RPM
 Maximum Torque: 40 in./lb. (4.5Nm)
 Charger Input: USB-C
 Charging Time: 1.5 hours
 LED Flashlight Output: 130 Lm
 Weight: 0.95 pounds

Specifications are subject to change without notice.

SAFETY GUIDELINES / DEFINITIONS

This instruction manual is intended for your benefit. Please read and follow the safety, installation, maintenance and troubleshooting steps described within to ensure your safety and satisfaction. The contents of this instruction manual are based upon the latest product information available at the time of publication. The manufacturer reserves the right to make product changes at any time without notice.

▲WARNING: Read and understand this entire instruction manual before attempting to assemble, install, operate or maintain this product. Failure to comply with the instructions may result in serious personal injury and/or property damage!

The following signal words are used to emphasize safety warnings that must be followed when using this product:

▲DANGER: Indicates an imminently hazardous situation that, if not avoided, WILL result in death or serious injury.

▲CAUTION: Indicates a potentially hazardous situation that, if not avoided, MAY result in minor or moderate injury.

▲WARNING: Indicates a potentially hazardous situation that, if not avoided, COULD result in death or serious injury.

▲NOTE: Indicates important information, which if not followed, MAY cause damage to equipment.

▲WARNING. READ, UNDERSTAND AND FOLLOW ALL INSTRUCTIONS AND WARNINGS BEFORE OPERATING THIS PRODUCT. FAILURE TO DO SO MAY RESULT IN FIRE, ELECTRICAL SHOCK, PERSONAL INJURY AND/OR PROPERTY DAMAGE AND WILL VOID WARRANTY.

UNPACKING AND INSPECTION

After opening the carton, unpack your new product and related parts and accessories. Please inspect it carefully for any damage that may have occurred during transit. Please check it against the photograph on carton. If any parts are missing, please call customer service at 1-800-497-0552 between 6 a.m. and 5 p.m. Pacific time.

▲WARNING: *DO NOT operate this product if damaged during shipment, handling or misuse. Do not operate the product until the parts have been replaced or the fault rectified. Failure to do so may result in serious personal injury or property damage. All damaged parts must be repaired or replaced as needed prior to operating this product. Check to see that all nuts, bolts and fittings are secure before putting this product into service.*

If you have any questions, or require assistance with damaged or missing parts, please contact our customer service department at 1-800-497-0552. Please have the serial number, model number, and date of purchase available for reference when calling.

WORKPLACE SAFETY

- Keep the area clean and well lit. Cluttered or dark areas can cause accidents.
- Do not use power tools in explosive environments, e.g. in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- Do not expose the tool to moisture, rain or wet conditions. The penetration of water into a tool increases the risk of electric shock.
- Keep bystanders, especially children, away while operating the tool. Distractions can cause you to lose control of the tool.
- Avoid contact with grounded objects such as pipes, radiators, stoves and refrigerators. There is an increased risk of electric shock if your body is in contact with grounded surfaces.
- Do not expose power tools to rain or wet conditions. Water entering a tool increases the risk of electric shock and/or damage to the tool.
- Be aware of what you are doing and use common sense while using the tool. Do not use a tool when you are tired or under the influence of drugs, alcohol or medication. A moment of distraction while using a tool can cause serious personal injury.
- Use safety equipment. Always wear eye protection. Safety equipment such as dust masks, non-slip safety shoes, helmets or ear protection used in appropriate conditions will reduce the risk of injury.
- Avoid accidental starting. Carrying tools with your finger on the trigger can cause accidents and injury.
- Do not rush. Maintain proper footing and balance at all times. This allows better control of the tool in unexpected situations.
- Dress appropriately. Do not wear loose clothing or jewelry. Keep hair, clothing and gloves away from moving parts. Loose clothing, jewelry or long hair can get caught in moving parts.

USE AND MAINTENANCE

- Do not force the tool. Use the right tool for the application being performed. A suitable tool will do the job better and more safely if used for the purpose for which it has been built.
- Do not use the tool if the switch does not allow you to turn it on or off. Any tool that cannot be controlled by the switch is dangerous and must be repaired.
- Place the directional switch in the center lock position and/or disconnect the charging cable before changing accessories or storing the tool. These preventive safety measures reduce the risk of accidental starting of the tool.
- Keep the tool away from children and do not allow the tool to be used by people who are not familiar with the operation of the tool. Tools are dangerous in the hands of inexperienced operators.
- Make sure the tool's moving parts are not misaligned or blocked, that it has not broken any parts or any other condition that may affect the operation of the tool. In case of damage, take the tool to a repair service before using it again. Many accidents are caused by poorly maintained tools.
- Use the tool, accessories and bits, etc. according to these instructions, taking into account the working conditions and the work to be done. The use of the tool for operations other than those provided can lead to dangerous situations.

PRECAUTIONS FOR USE

- Do not use any other charger than the one specified by the manufacturer. A charger that fits one type of battery can cause a risk of fire when used with other types of batteries.
- Do not charge battery unattended.
- Do not expose battery to fire/high temperatures.
- Do not use a damaged charging cable.
- Do not use tools with batteries other than those specified. The use of any other type of battery may create a risk of injury and fire.
- Stop using the tool if the battery swells, leaks, or overheats.
- In bad conditions, liquid may be ejected from the battery; avoid any contact. In case of accidental contact, flush with water. If the fluid comes into contact with eyes, seek medical assistance. The ejected battery fluid may cause irritation or burns.

OPERATION

INTENDED USE

This tool is designed for driving and removing screws and other fasteners. This tool should not be used for any other purpose. Any other use is deemed to be a case of misuse. The user/operator, and not the manufacturer, will be liable for any damage or injuries of any kind caused as a result of misuse.

Please note that our equipment has not been designed for use in commercial, trade or industrial applications. Our warranty will be voided if the machine is used in commercial, trade or industrial businesses or for equivalent purposes.

BEFORE USE

Before turning on the tool, read the following notes:

- Use only appropriate bits and screwdriver tips.
- When screwing into walls, check for hidden power, gas or water lines.
- Fully charge the screwdriver's built-in lithium-ion battery before first use.

CHARGING

1. Insert the USB-C side of the included charging cable (14) into the USB-C port (11), located at the bottom of the handle of the tool.
2. Plug the USB end of the charging cable into any standard USB outlet with a 1A output or higher. A USB power adapter may be required (not included).
3. As the battery is charged, the battery status display will illuminate. First the red, then the yellow and lastly the green LED, indicating the battery is fully charged.

NOTE: A fully discharged battery recharges in about 1.5 hours.

LED DISPLAY

Three color LEDs (7) indicate the battery status whenever the trigger (9) is pressed.

- **All LEDs illuminated:** The battery is fully charged.
- **Yellow and red LEDs illuminated:** The battery has charge.
- **Red LED illuminated:** The battery is almost empty and needs to be recharged.

TORQUE SETTINGS

This tool has a mechanical clutch (3) with 15 + 1 different torque settings.

Setting 1 is the lowest torque setting and setting 15 is the highest. A clicking sound will be heard and felt when the selected torque setting is reached. Use the right setting for the application.

This will help prevent overtightening and stripping of fasteners.

The last torque setting () bypasses the mechanical clutch and applies maximum torque. Use this setting when maximum torque is required.

ATTENTION! Do not adjust the mechanical clutch until the tool comes to a complete stop.

PROPER SETTING FOR DRIVING SCREWS:

1. Set the torque adjustment ring on the lowest setting to begin.
2. Try tightening the first screw. If the tool drives smoothly, proceed with the next screw.
3. If the tool's clutch slips, increase the torque setting and try again until the tool drives the screw without incident.

SWITCHING THE DIRECTION OF ROTATION

The directional switch and trigger lock (8) allows you to choose the rotational direction of the tool or set the trigger lock. You can select clockwise (forward) rotation by pushing the switch all the way to the right OR counterclockwise (reverse) by pushing the switch all the way to the left. When the directional switch and trigger lock is in the center position (trigger lock), the trigger is locked and the tool is inoperable but you can still activate the battery status display (7) and the work area LED (4) by slightly depressing the trigger (9).

OPERATION

TRIGGER

When the trigger (9) is depressed, the motor operates at a single speed. To stop the motor, release the trigger.

TOOL CHANGE

The tool is equipped with a 1/4 in. hex quick connect chuck with locking collar to retain the bit.

1. Push down the quick change collar (2) towards the body of the tool and insert any 1/4 in. hex bit into the end of the 1/4 in. hex bit chuck (1).
2. After inserting the bit, release the collar and allow it to return to its original position. The chuck will hold the bit in place.
3. Verify that the installed bit is secure by attempting to pull it out of the chuck.

▲ CAUTION: Be aware that this tool is always in an operating condition because it does not have to be plugged into an electrical outlet. Always place the directional switch in the center lock position before changing accessories.

CONVERTING SCREWDRIVER HANDLE

The handle can be configured in a pistol grip position or an in-line/straight angle.

To do so, press the handle locking button (5) and twist the tool along the handle swivel joint (6) to move the screwdriver into the desired position. The handle locking button will click into place once the handle is fully locked into the desired configuration.

NOTE: Before use, verify that the handle is fully secured by twisting the upper and lower sections back and forth.

FLASHLIGHT FUNCTION

Mounted in the base of the handle is an LED flashlight (13). To turn flashlight on and off use the flashlight switch (12) located on the base of the handle.



CARE AND MAINTENANCE

1. Repairs must be performed by a qualified expert, using only identical replacement parts. This will ensure that the safety of the tool is maintained.
2. Disconnect the charging cable from the tool before cleaning.

CLEANING

1. Keep protection devices, air vents and the motor housing as clean (dust free) as possible. Clean the tool with a clean cloth or clean with compressed air at low pressure.
2. We recommend cleaning the tool directly after each use.
3. Clean the tool regularly with a damp cloth and a little soap. Do not use any cleaner or detergent, they can damage the plastic parts of the tool. Ensure that no water enters the tool.

MAINTENANCE

1. Recharge the battery at least once a year to maintain battery life.

STORAGE

1. Store indoors in a cool, dry location away from direct sunlight and moisture.

ENVIRONMENTAL PROTECTION

This device uses electronic components, so they should not be deposited with household garbage! Please help by collaborating to protect resources and the environment. Dispose of these products through relevant recycling services, if any. For questions on this matter, please contact your local waste management or a specialized site.

▲WARNING: *It is the owner and/or operators' responsibility to study all WARNINGS, operating, and maintenance instructions contained on the product label and instruction manual prior to operation of this product. The owner/operator shall retain product instructions for future reference.*

The owner and/or operator are responsible for maintenance, maintaining all decals or warning labels and while in use, maintaining the unit in good working order. If the owner and/or operator are not fluent in English, the product warnings and instructions shall be read and discussed with the operators' native language by the purchaser/owner or his designee. Make sure that the operator comprehends its contents. Safety information shall be emphasized and understood prior to usage. The product shall be inspected per the operating instructions.

Users of this product must fully understand these instructions. Each person operating this product must also be of sound mind and body and must not be under the influence of any substance that might impair their vision, dexterity or judgment.

Protect yourself and others by observing all safety information.

Failure to comply with instructions could result in personal injury and/or property damage!

If you encounter any problems or difficulties, please contact our customer service department at:

1-800-497-0552 between 6:30 a.m. and 4:30 p.m. Pacific time.

1 YEAR WARRANTY

PERFORMANCE TOOL® extends only the following warranties, and only to original retail purchasers. These warranties give specific legal rights. Except where prohibited by local law, the law of the State of Washington governs all warranties and all exclusions and limitations of warranties and remedies. There may be other rights which vary from state to state.

PERFORMANCE TOOL® warrants the product to be free from defects in materials and workmanship under normal use and service. A defective product may be returned for a free replacement within 90 days from the date of purchase, provided that product is returned to place of purchase immediately after discovery of defect. After 90 days and up to one year from date of purchase, PERFORMANCE TOOL® will replace at no charge any parts which our examination shall disclose to be defective and under warranty. These warranties shall be valid only when a sales receipt showing the date of purchase accompanies the defective product or defective part(s) being returned. For part (s) after 90 days, please remit your request, postage prepaid to:

PERFORMANCE TOOL, P.O. Box 88259 Tukwila, WA 98138

These warranties exclude blades, bits, punches, dies, bulbs, fuses, hoses, and other consumables which must be replaced under normal use and service. These warranties shall not apply to any product or part which is used for a purpose for which it is not designed, or which has been repaired or altered in any way so as to affect adversely its performance or reliability, nor shall these warranties apply to any product or part which has been subject to misuse, neglect, accident or wear and tear incident to normal use and service.

PERFORMANCE TOOL® does not authorize any other person to make any warranty or to assume any liability in connection with its products.

Except for warranties of title and the limited express warranties set forth above, PERFORMANCE TOOL® makes no express or implied warranties of any kind with respect to its products. In particular, PERFORMANCE TOOL® makes no implied warranty of merchantability and no implied warranty of fitness for any particular purpose, except that for goods purchased primarily for personal, family or household use and not for commercial or business use, PERFORMANCE TOOL® makes an implied warranty of merchantability (and, if otherwise applicable, an implied warranty of fitness for a particular purpose), but only for the particular qualities or characteristics, and for the duration, expressly warranted above.

The laws on limitation of implied warranties may differ from state to state, so the above limitations may not apply in all cases.

PERFORMANCE TOOL® shall not be liable for consequential, incidental or special damages resulting from or in any manner related to any product, or to the design, use, or any inability to use the product. The sole and exclusive remedy for a defective product or part shall be the repair, or replacement thereof as provided above. The laws on limitation of remedies or on consequential, incidental or special damages may vary from state to state, so the above limitations may not apply in all cases.