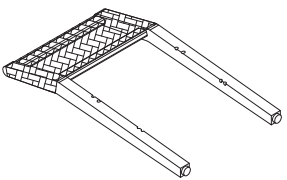 
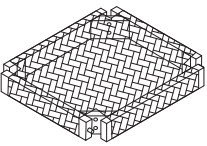 
 
 
 
 
 


ITEM NAME / NOM D'ITEM: MIZUYA DINING CHAIR

ITEM# / NO. ITEM: 704230/704231


PARTS LIST/LISTE DES PIÈCES

(1)	(2)	(3)	(4)
 x1	 x1	 x1	 x1
(5)	(6)	(7)	
 x1	 x1	A.M6 x 50MM  x8 B.Ø20MM  x8 C.M6 x 25MM  x1 D.M5 x 60MM  x4 E.Ø20MM  x8 F.4MM  x1	


ASSEMBLY INSTRUCTIONS / INSTRUCTIONS D'ASSEMBLAGE

Do not FULLY TIGHTEN the screws or nuts for any step until all are in place.

 
I

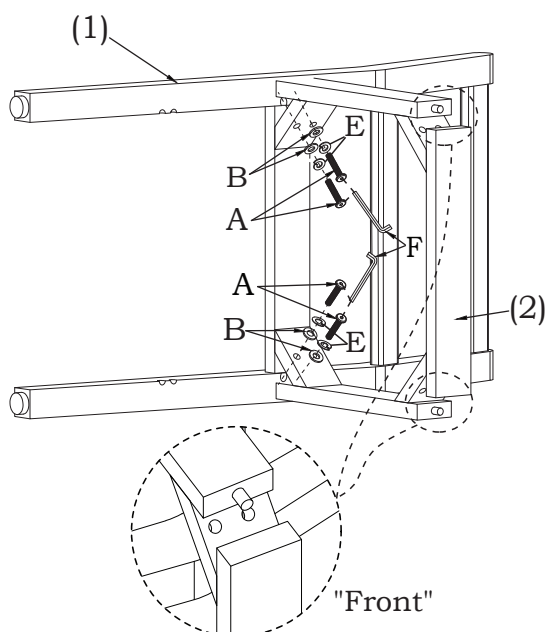

II

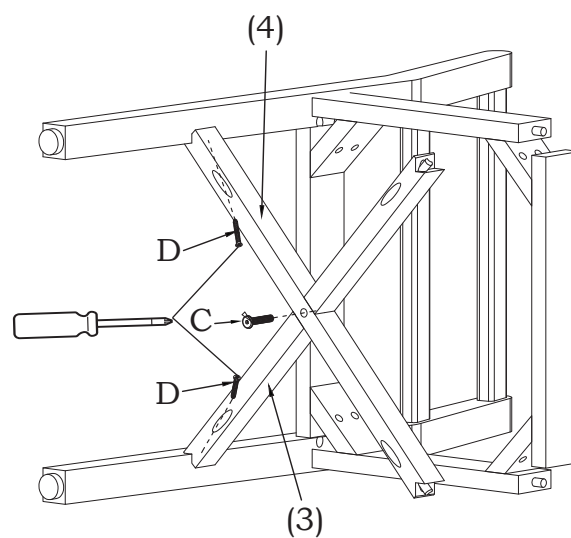 


III

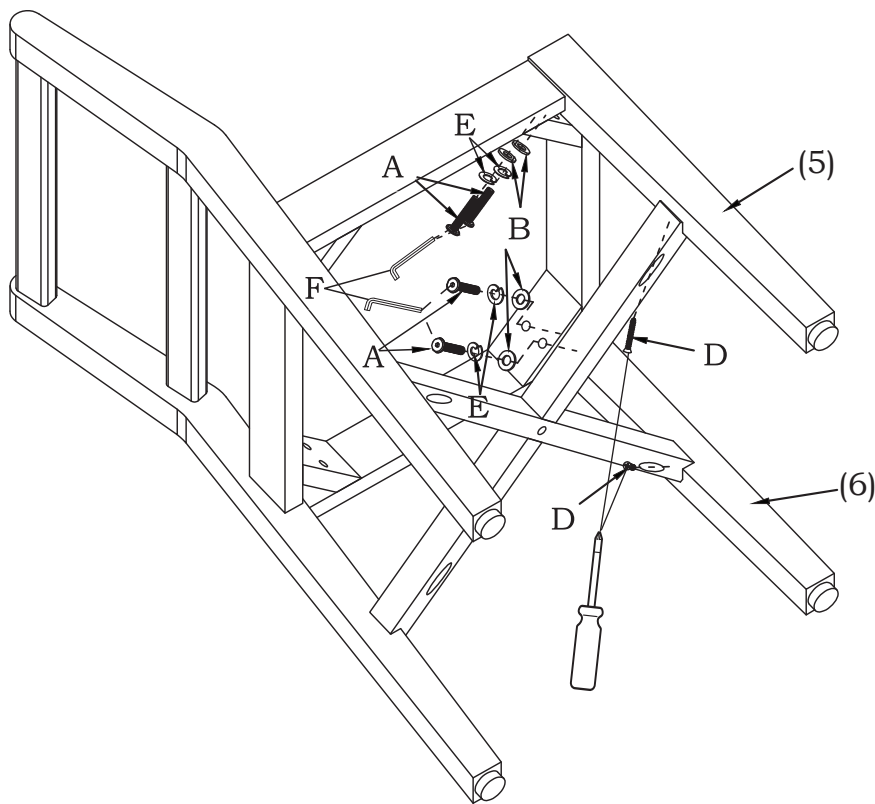 


"Tighten all hardware
before usage"

 VI

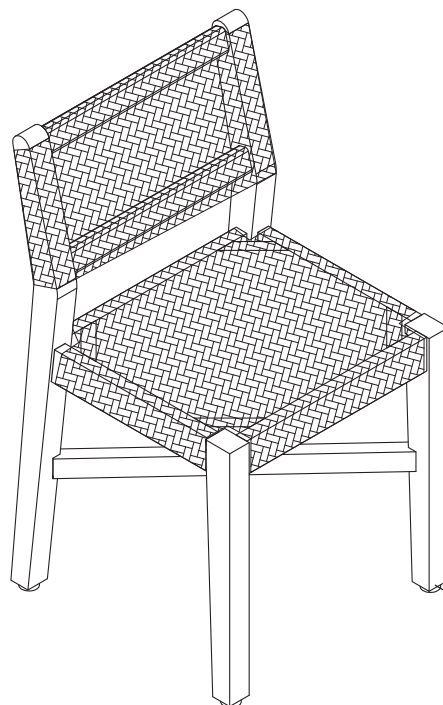

 Assembled
Please use the attached
adjustable footglides to
level the chairs on an
uneven surface.

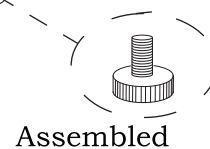

Assembled

For missing parts or damaged parts, please call /
Pour pièce manquante ou endommagée, veuillez appeler:

USA, Canada and Mexico: (866)-798-6663

AI-V1-F008-260526