
 
 
 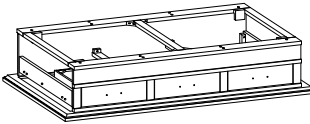




 
 


 
 

 






ASSEMBLY INSTRUCTION




KITCHEN ISLAND

A Table Top  1 PC	B Side Panel  1 PC	C Side Leg Frame  1 PC	D Vertical Center Panel  1 PC
E Upper Shelf  1 PC	F Lower Shelf  1 PC	G Sliding Top  1 PC	H Leg  2 PCS
I JCBC Bolt M6 x 35mm 	J JCBC Bolt M6 x 60mm 	K Lock Washer M6 	L Flat Washer M6 
M PVC Dowel M8 x 30mm 	N Minifix Cam Bolt 24mm 	O Minifix Cam Lock Ø15mm x 12mm 	P L-Bracket 
Q CSK Screw M4 x 16mm 	R Allen Wrench M4 x 100mm 	S Handle with 2pcs Screw 	
6 PCS	1 PC	3 SETS	

 



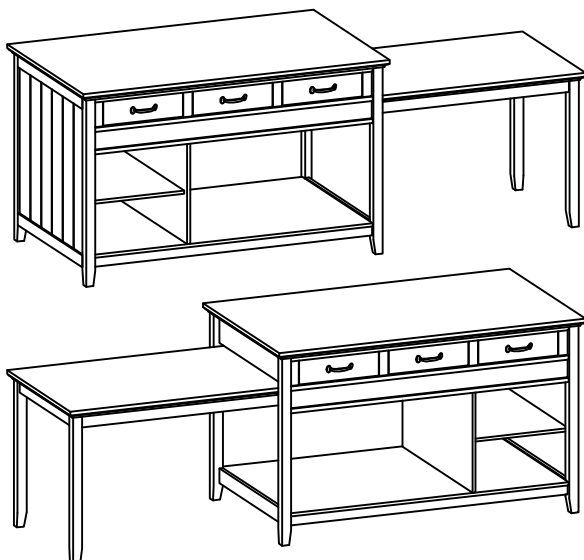This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


1 Insert PVC Dowel (M) into the pre-drilled holes of the Table Top (A), the Vertical Center Panel (D) and the Lower Shelf (F).

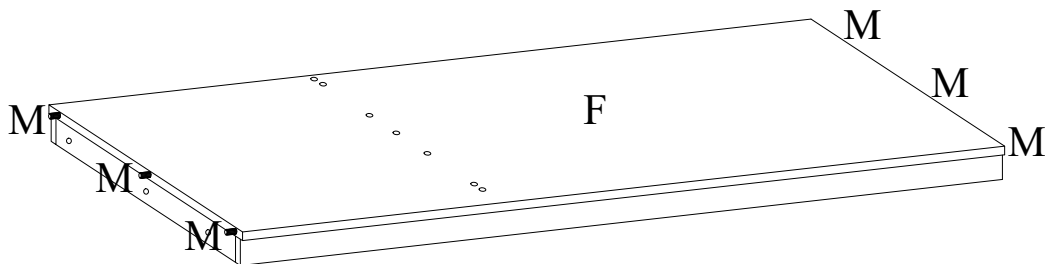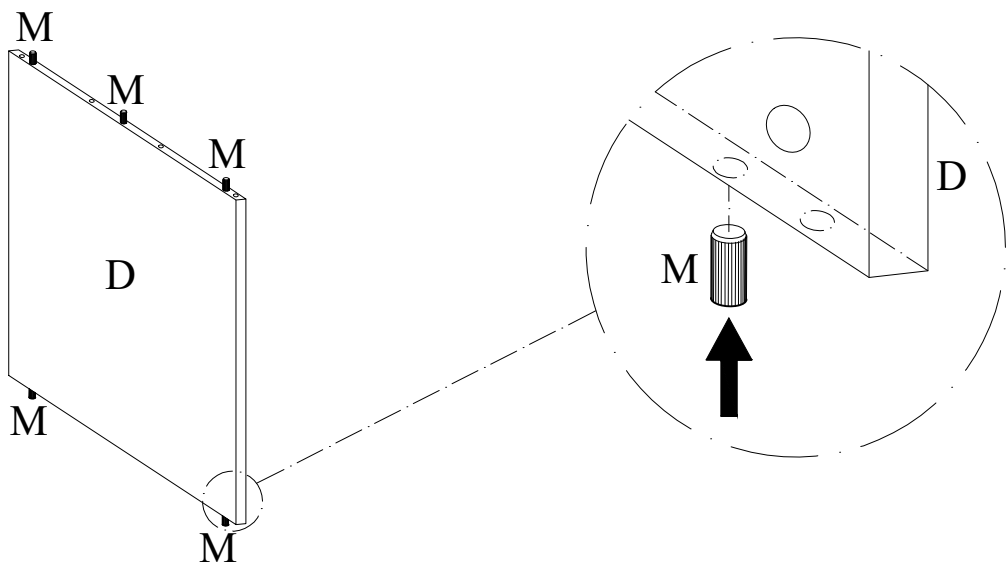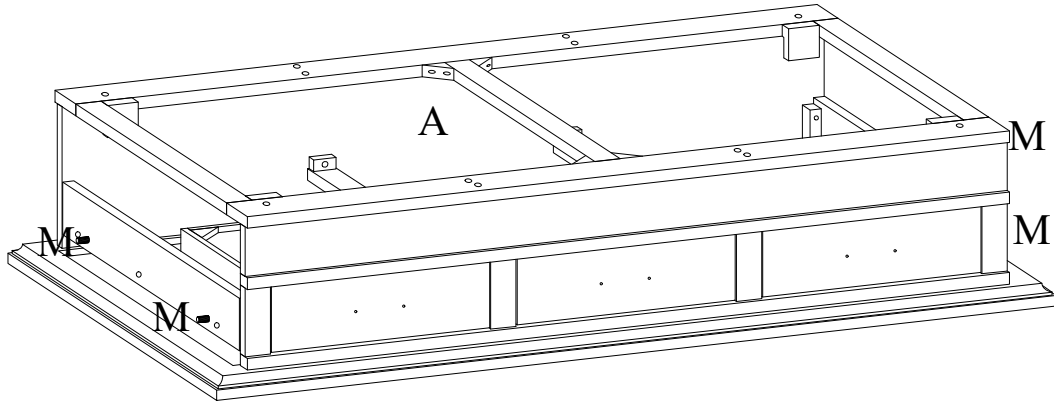


2 Attach Minifix Cam Bolt (N) into the pre-drilled holes of the Table Top (A) and the Lower Shelf (F) with a screwdriver (not provided).

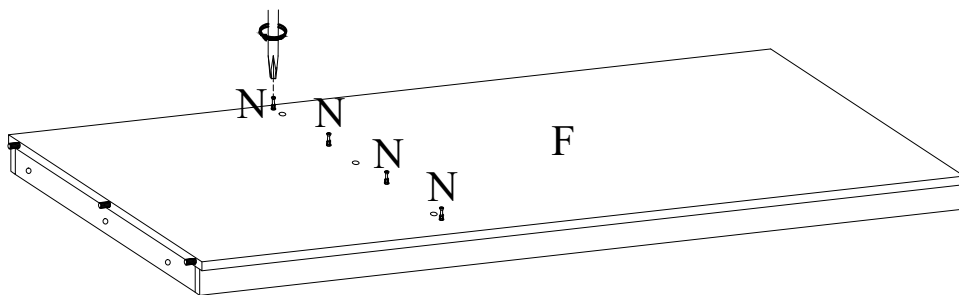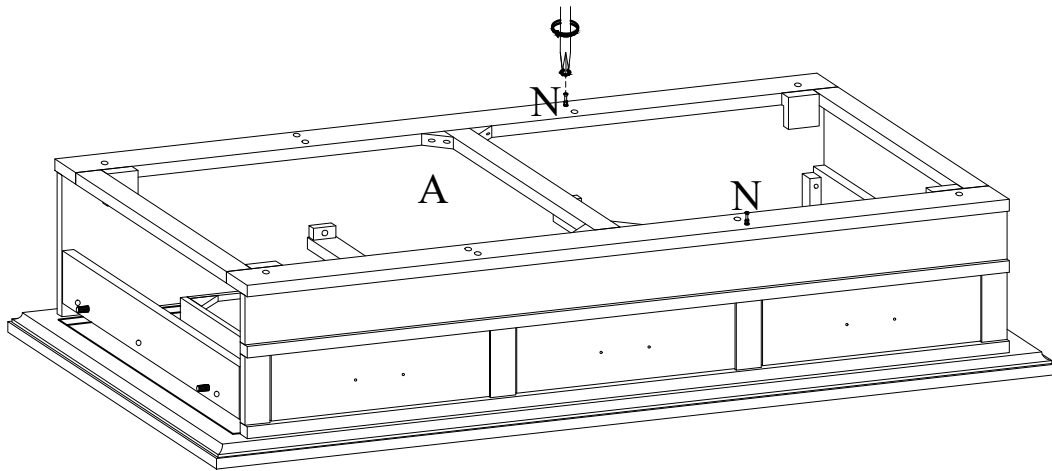

- 3** Place the Sliding Top (G) on an even surface. Attach the Leg (H) to the Sliding Top (G) using JCBC Bolt (J), Lock Washer (K) and Flat Washer (L) with Allen Wrench (R).

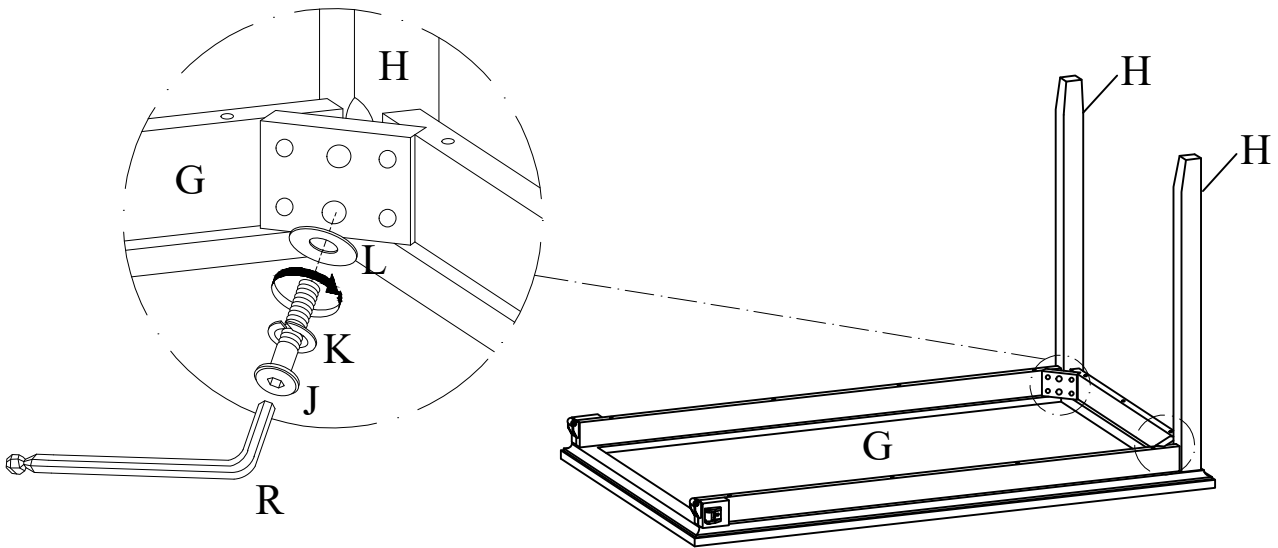


- 4** Pull out both side drawers from the Table Top (A) by pressing down the clip of the runner on one side and lifting up the clip on the other side.

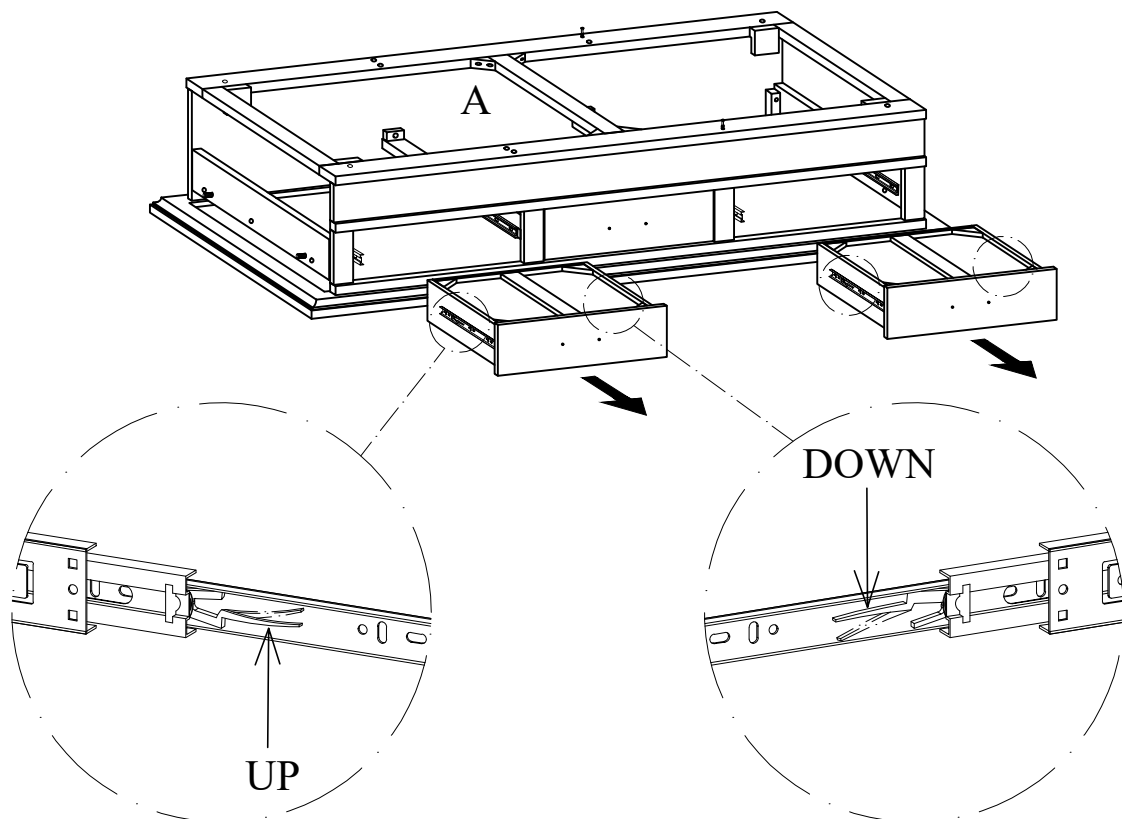


5 Select the desired Sliding Top position. Attach the Side Panel (B) to the opposite side. Use PVC Dowel (M) as a guide to align and attach the Side Panel (B) to the Table Top (A) using JCBC Bolt (I), Lock Washer (K) and Flat Washer (L) with Allen Wrench (R).

**** Attach the Side Panel (B) on the Left or Right side according to your preference.**

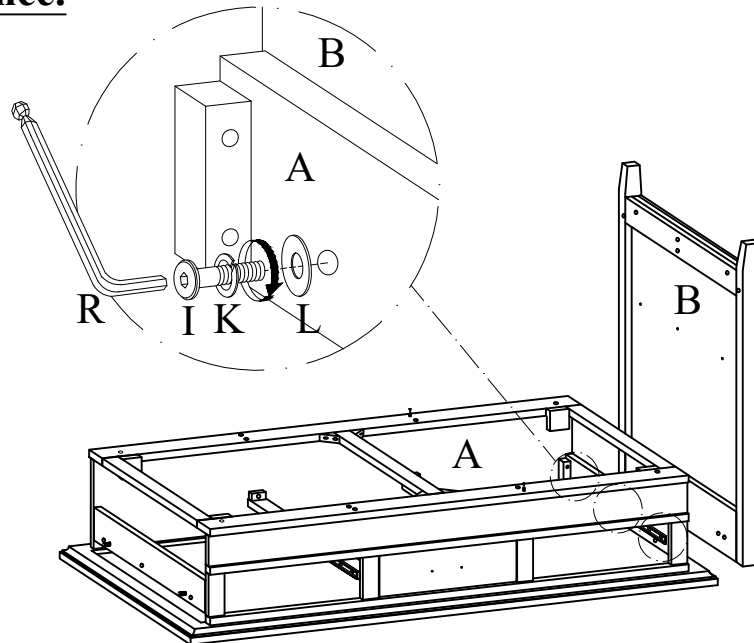


6 Use PVC Dowel (M) as a guide to align and attach the Vertical Center Panel (D) to the Table Top (A) and tighten Minifix Cam Lock (O) with a screwdriver (not provided).


**** Please make sure the pre-drilled holes on the Vertical Center Panel (D) are facing to the Side Panel (B).**

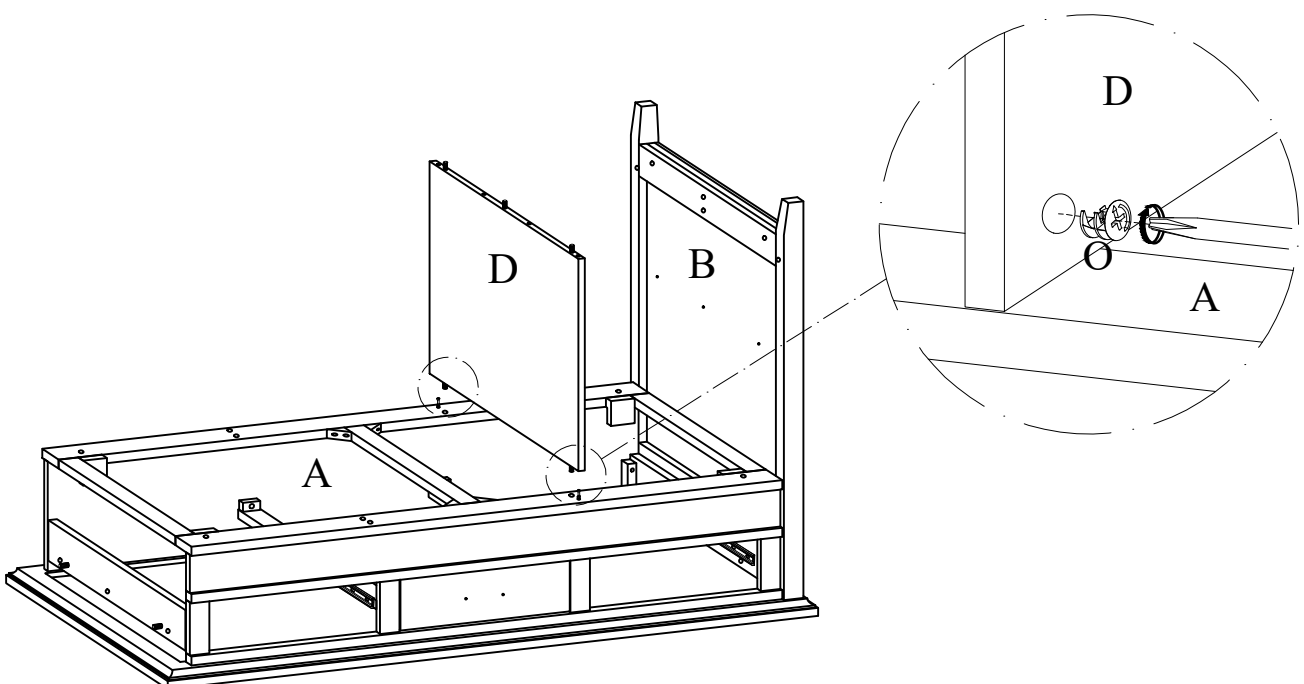


- 7** (i) Use PVC Dowel (M) as a guide to align and attach the Lower Shelf (F) to the Side Panel (B) and the Vertical Center Panel (D).
- (ii) Secure the Lower Shelf (F) to the Side Panel (B) using JCBC Bolt (I), Lock Washer (K) and Flat Washer (L) with Allen Wrench (R).
- (iii) Secure the Lower Shelf (F) to the Vertical Center Panel (D) by tightening Minifix Cam Lock (O) with a screwdriver (not provided).

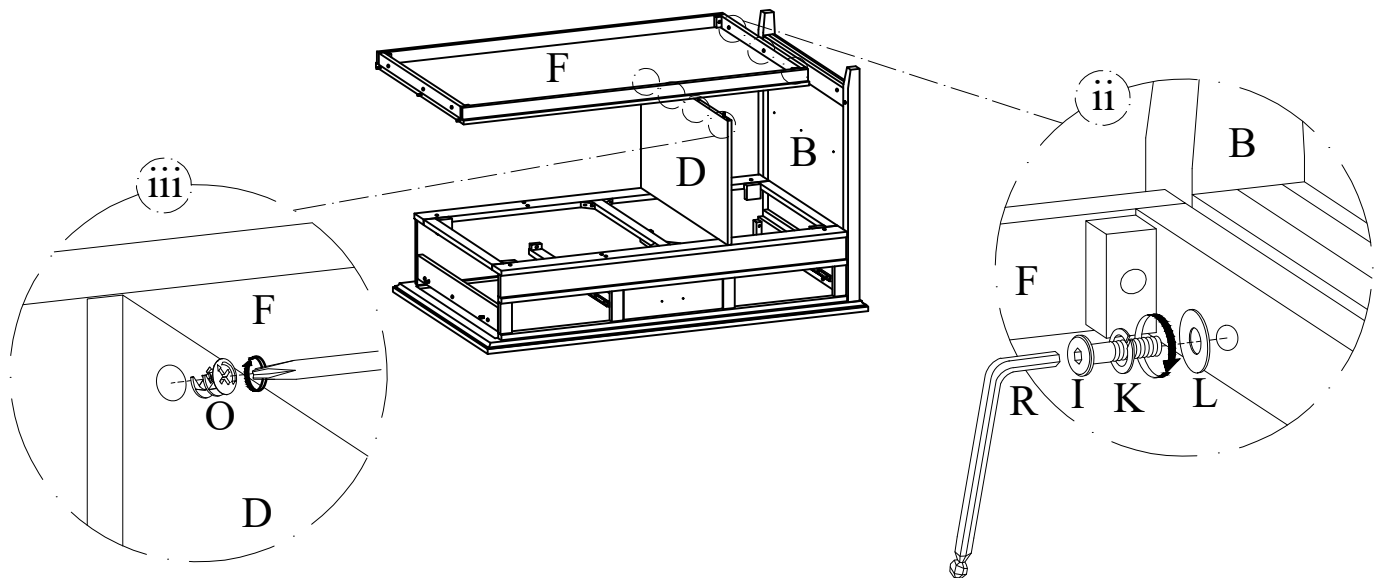


- 8** Use PVC Dowel (M) as a guide to align and attach the Side Leg Frame (C) to the Table Top (A) and the Lower Shelf (F) using JCBC Bolt (I), Lock Washer (K) and Flat Washer (L) with Allen Wrench (R).

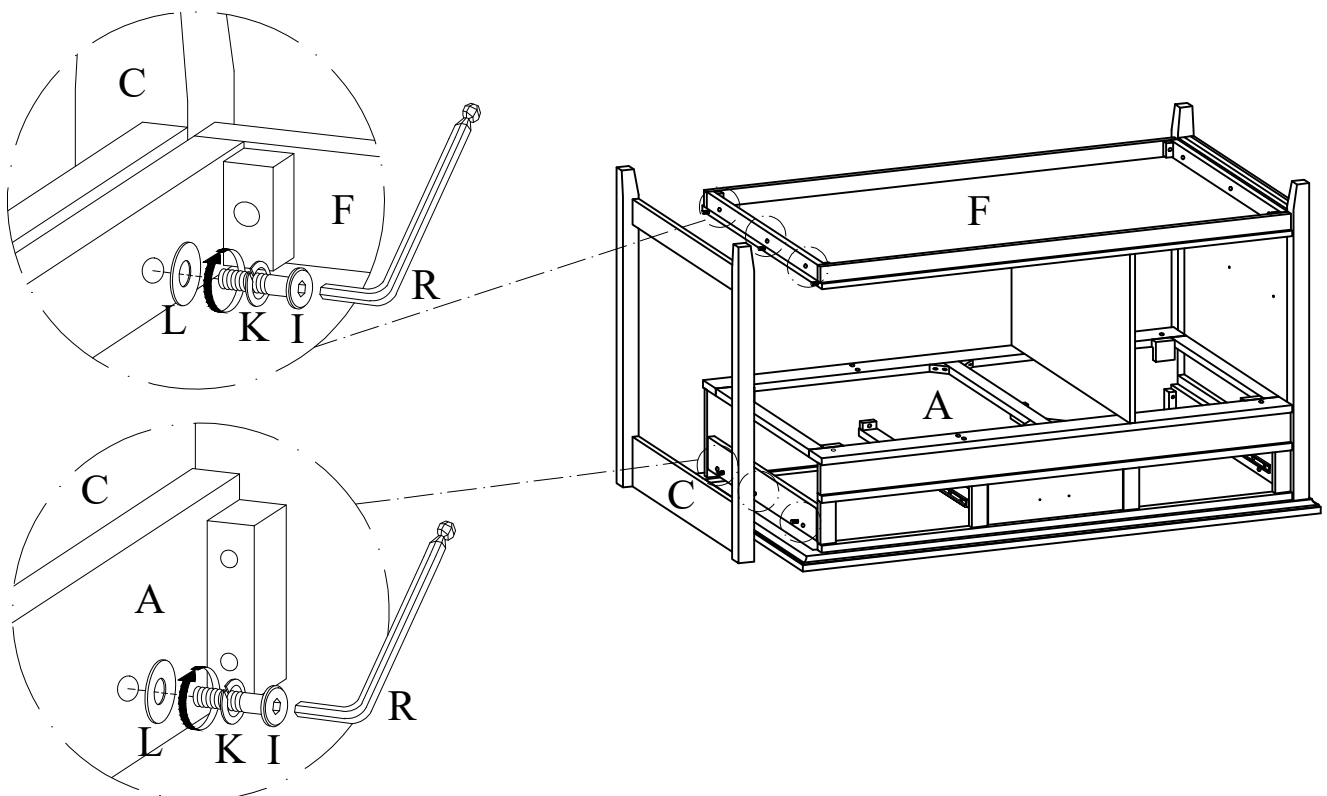


- 9** Stand the Kitchen Island upright on an even surface and ensure that it is balanced. Pull the metal chrome plate of the runner on Table Top (A) towards front, and insert the side drawers back into place.

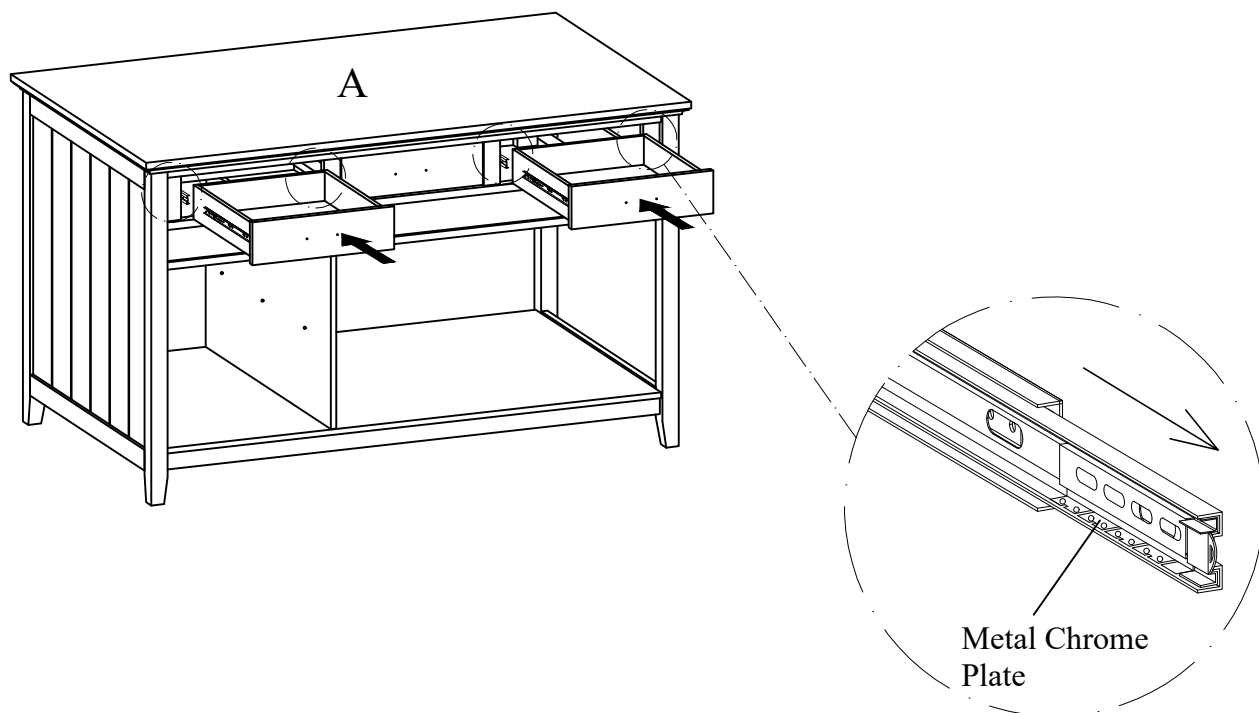


- 10** Attach L-Bracket (P) to the pre-drilled holes of the Side Panel (B) and the Vertical Center Panel (D), then place the Upper Shelf (E) onto the L-Bracket (P). Secure the Upper Shelf (E) to the L-Bracket (P) using CSK Screw (Q) with a screwdriver (not provided).

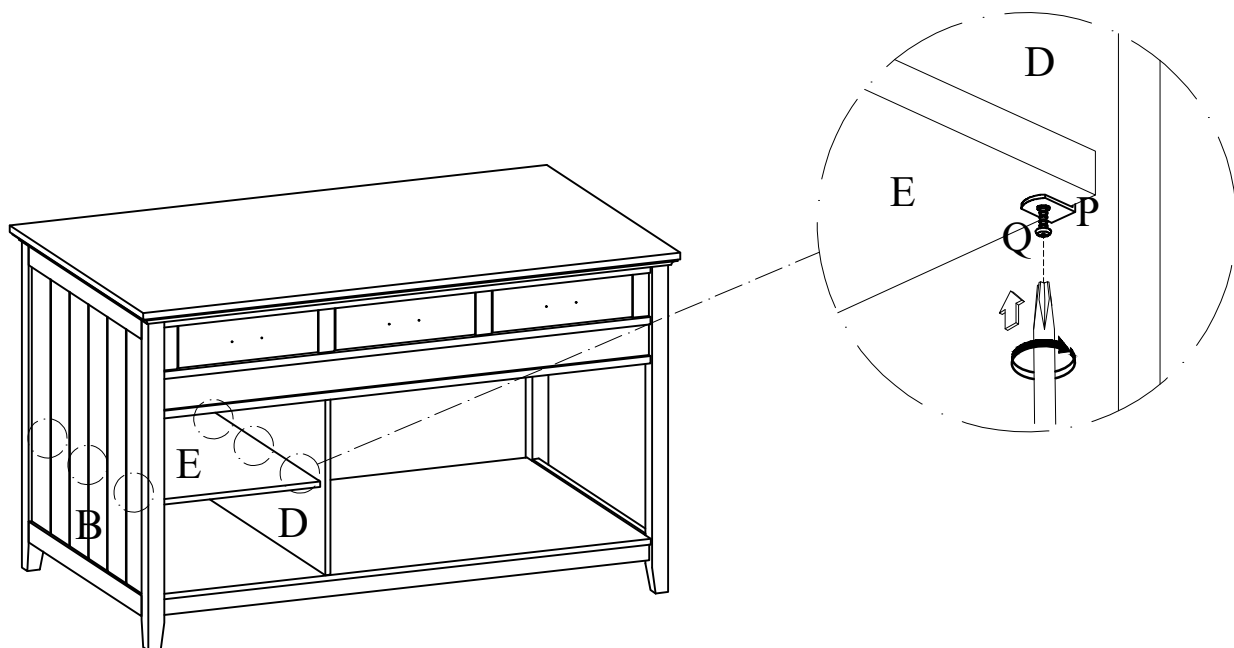


-
- 11** Attach the Handle (S) to the drawer front from inside using Screw (S) with a screwdriver (not provided).

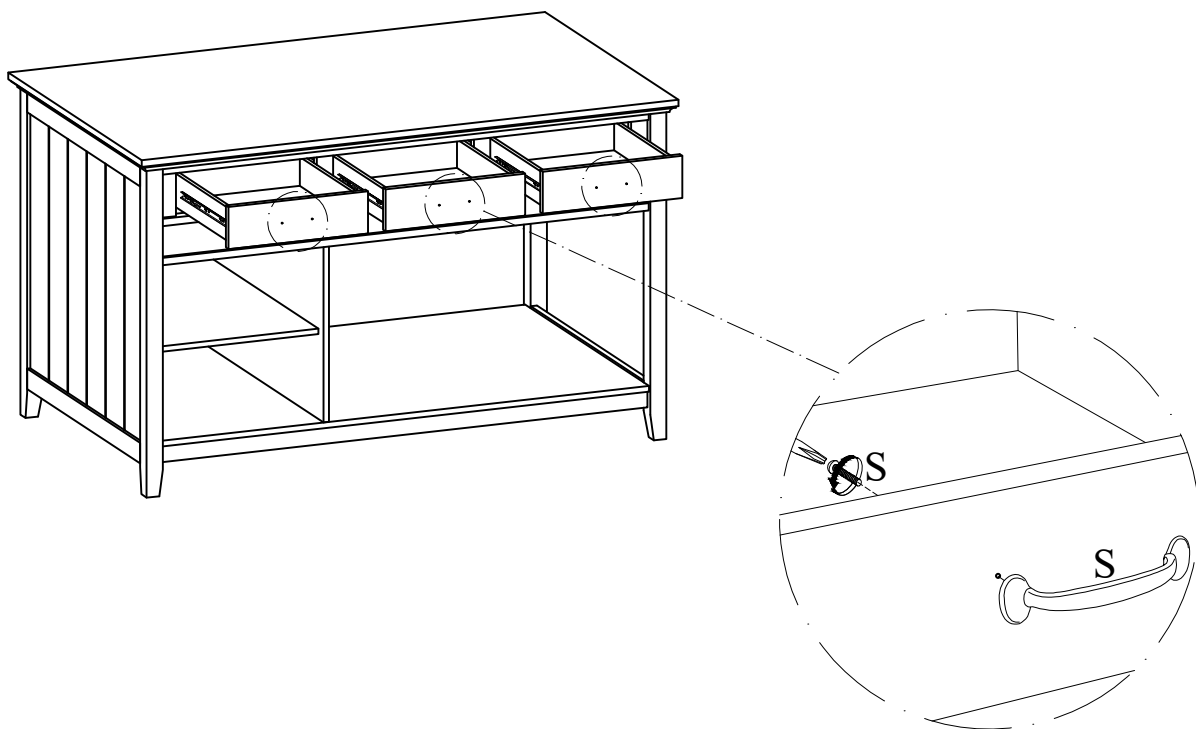

-
- 12** Attach the Sliding Top (G) to the Table Top (A) and the Side Leg Frame (C).

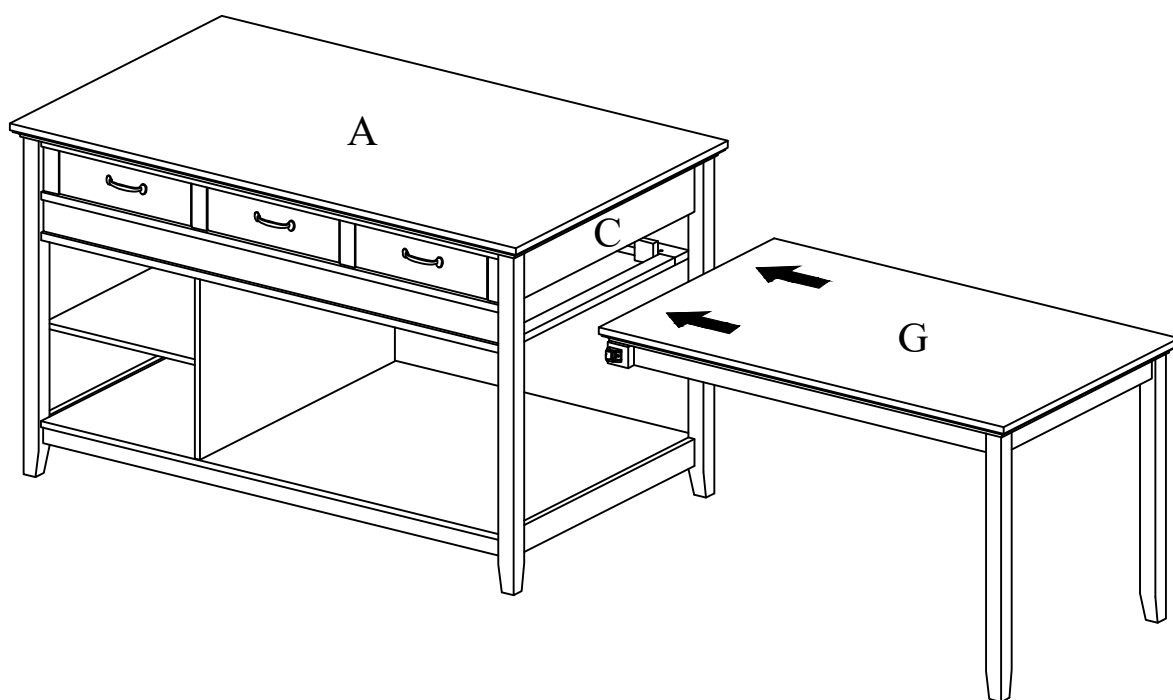

-
- 13** Secure the Sliding Top (G) to the assembled unit using the JCBC Bolt (I) with Allen Wrench (R) through the holes underneath the Table Top (A), acting as a stopper to prevent the Sliding Top (G) from separating when pulled out.

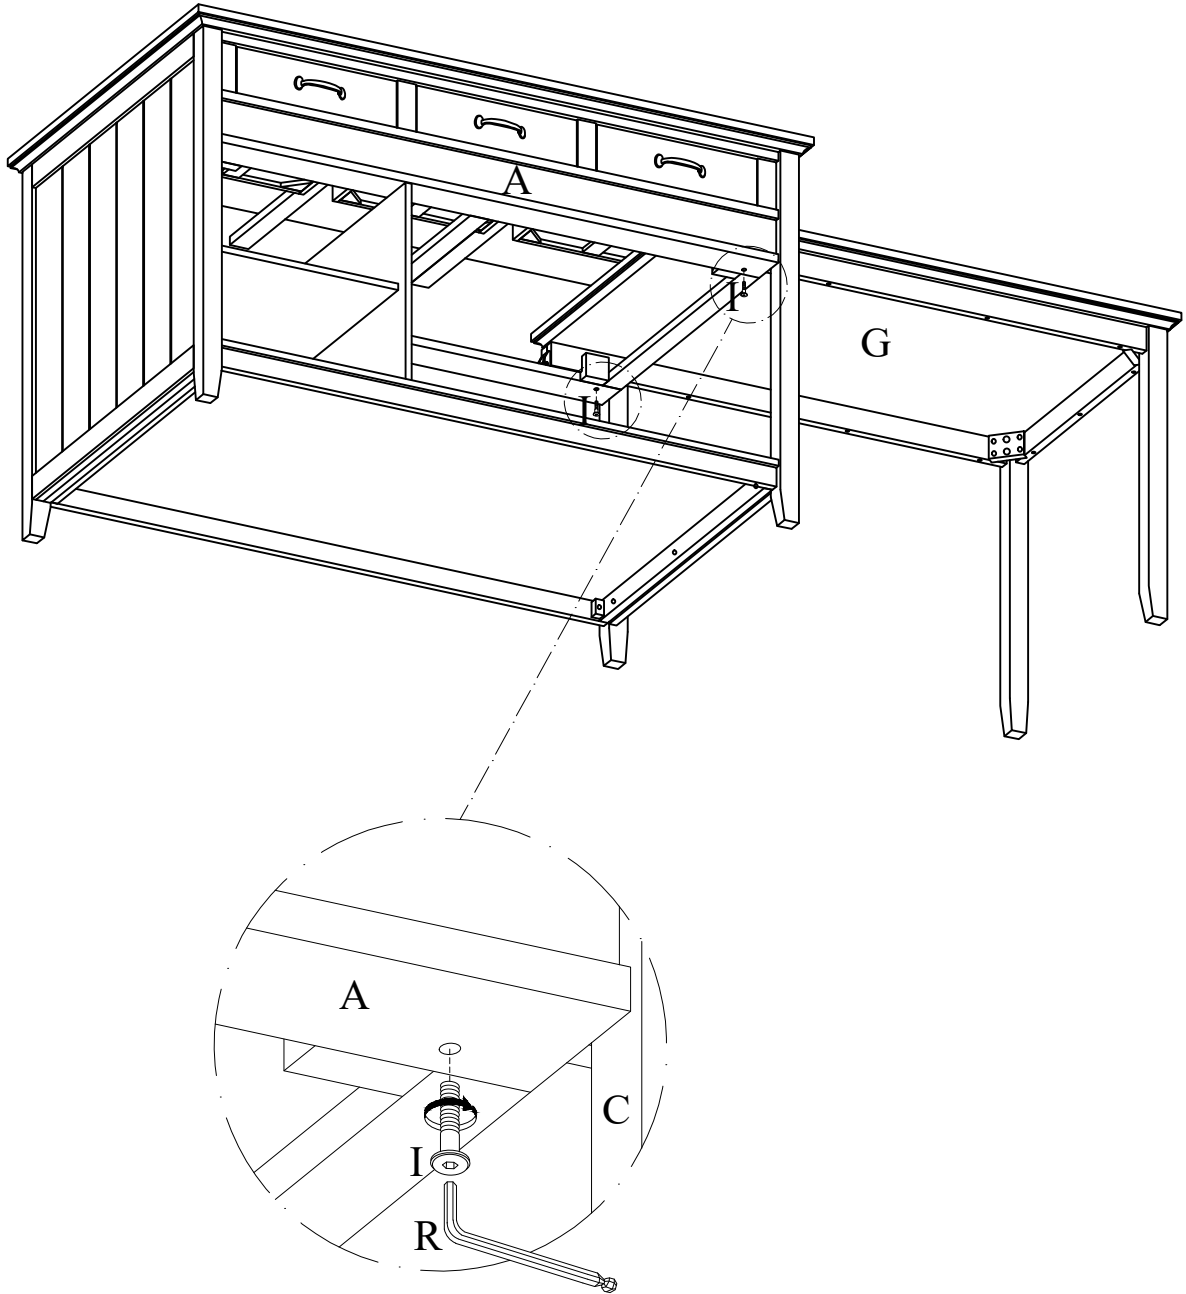

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.