
 
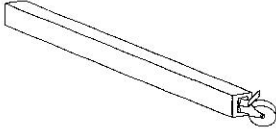 
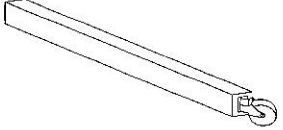 
 
 



 
 
 
 
 





ASSEMBLY INSTRUCTION


KITCHEN CART

A Kitchen Cart Top Panel	B Kitchen Cart Frame	C Leg with Castor Wheel (Lock)	D Leg with Castor Wheel (No Lock)
			
1 pc	1 pc	2 pcs	2 pcs
E Shelf	F Towel Holder Support	G Towel Holder Rod	H Hex Bolt 5/16" x 2 1/2"
			
2 pcs	4 pcs	2 pcs	16 pcs
I JCBC Bolt M6 x 40MM	J Flat Washer M8 x 16MM	K Spring Washer 5/16"	L Wrench 12.8mm
			
8 pcs	16 pcs	24 pcs	1 pc
M Allen Key	N Wooden Button	O Wooden Dowel Ø10 X 35mm	P CSK Screw M4 X 32mm
			
1 pc	8 pcs	4 pcs	4 pcs (Note : For Solid Top Only)

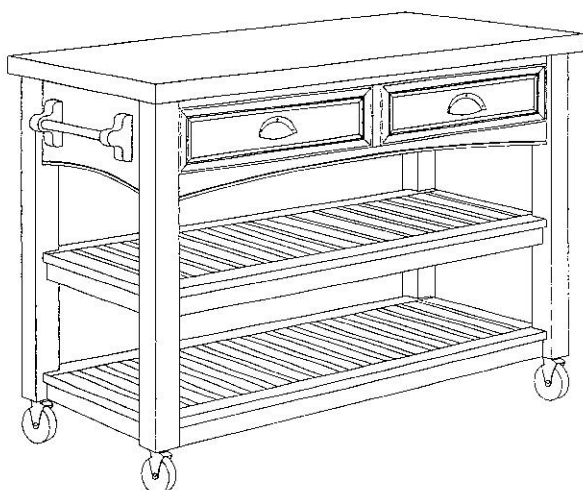 


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

 
- 1** Turn the Kitchen Cart Frame (B) upside down and place it on a piece of cloth to prevent from scratching. Attached Legs (C & D) to the corner block of Kitchen Cart Frame (B). Tighten the Legs (C & D) with Flat Washer (J), Spring Washer (K) and Hex Bolt (H) and tighten it using Wrench (L).

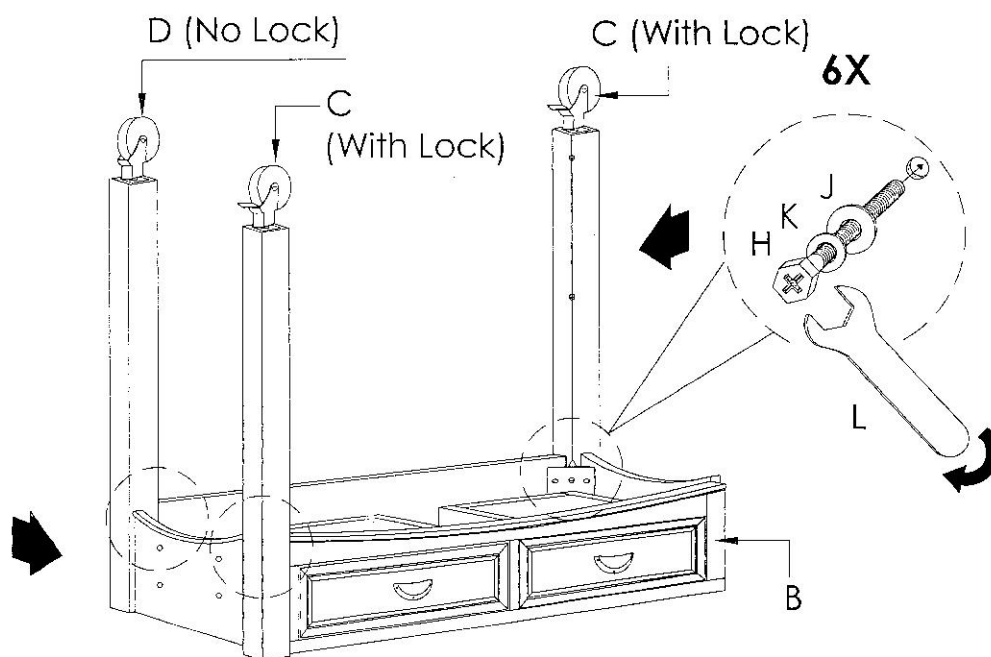

 
- 2** Align the hole of corner block of Shelf (E) to the holes of Leg (C & D). Tighten the Shelf (E) with Flat Washer (J), Spring Washer (K) and Hex Bolt (H) using Wrench (L).

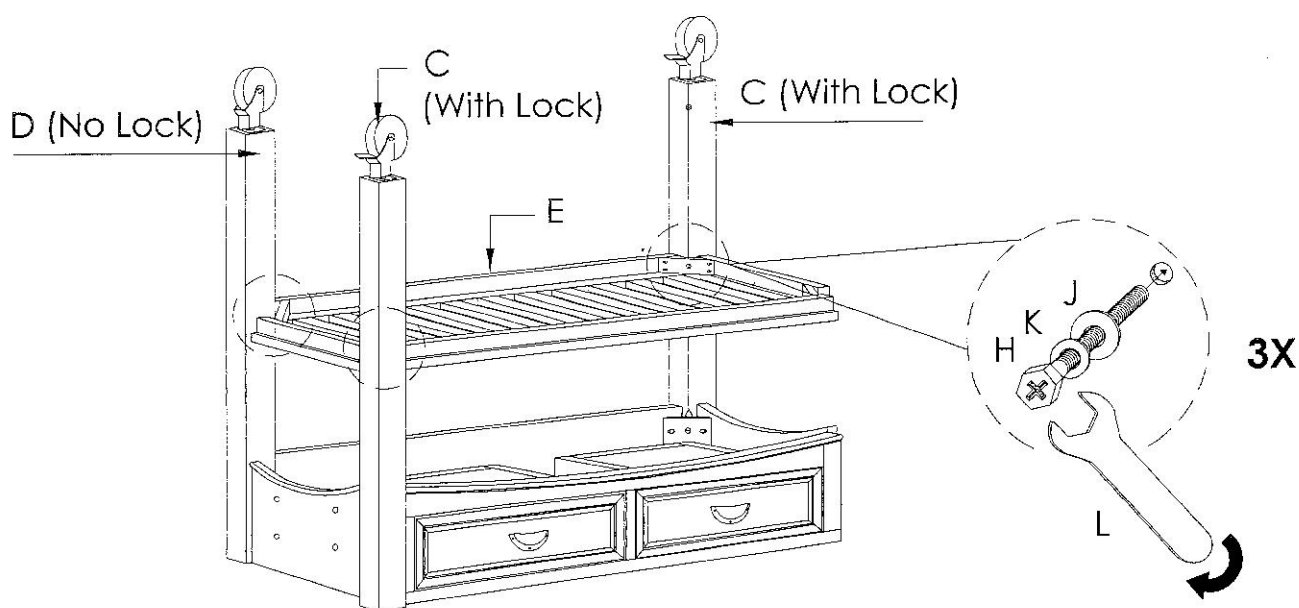

 
- 3** Repeat Step 2 to the other Shelf (E).

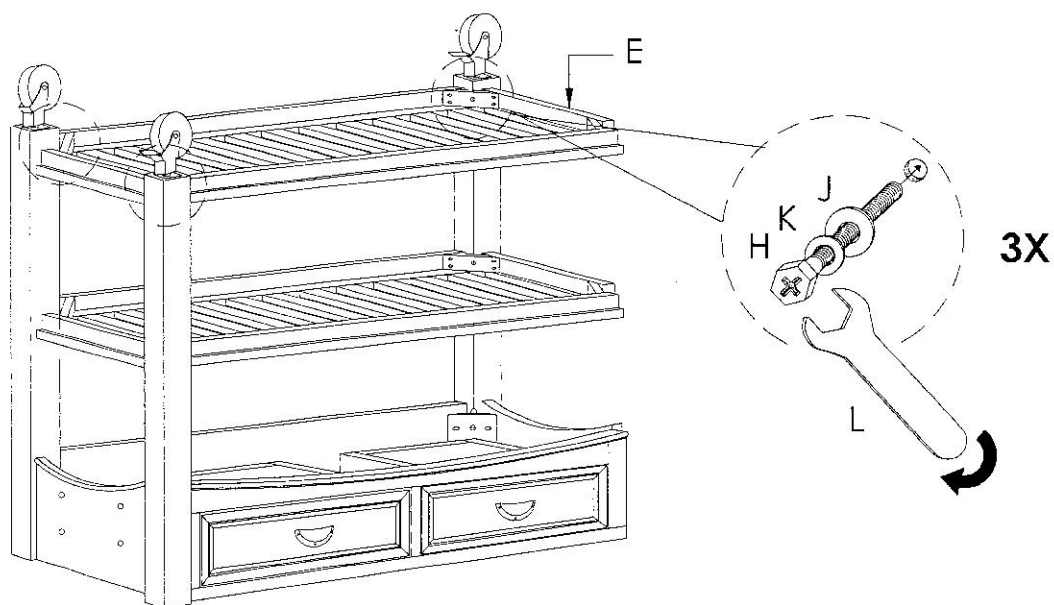

 
- 4** Place the last Leg (D) to the corner of Apron and tighten it with Flat Washer (J), Spring Washer (K) and Hex Bolt (H) using Wrench (L).

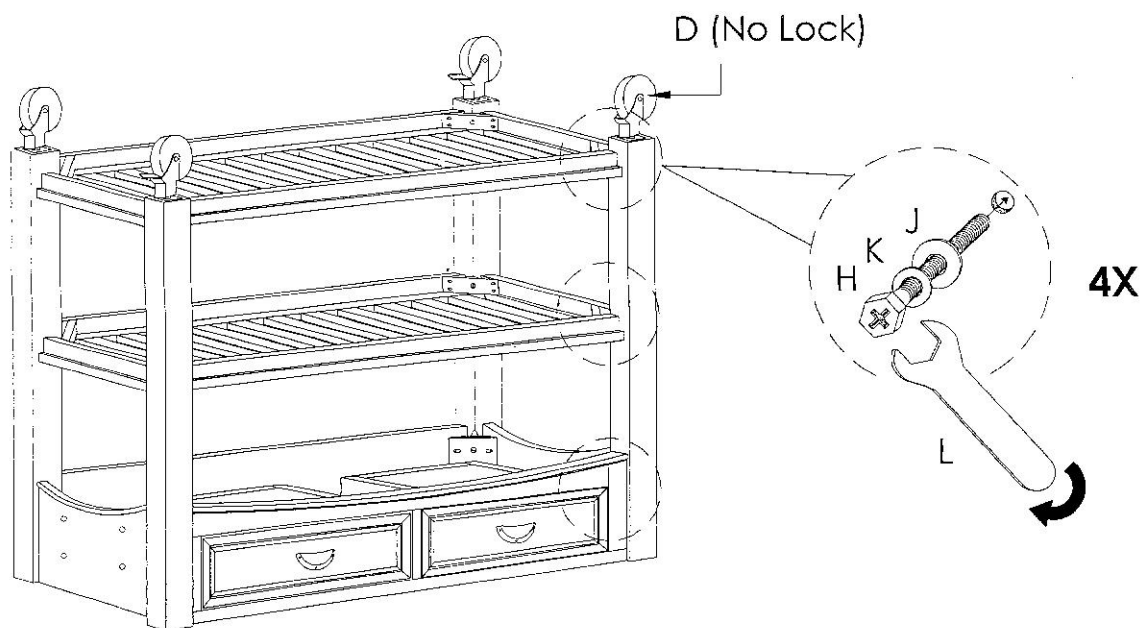

 - 5** Assemble the Towel Holder Support (F) with the Towel Holder Rod (G). Then attached the it to the Kitchen Cart and secure it with JCBC Bolt (I), Spring Washer (K) and tighten it with Allen Key (M). Cover the holes of JCBC Bolt with Wooden Button (N). Repeat the same process to the other side.

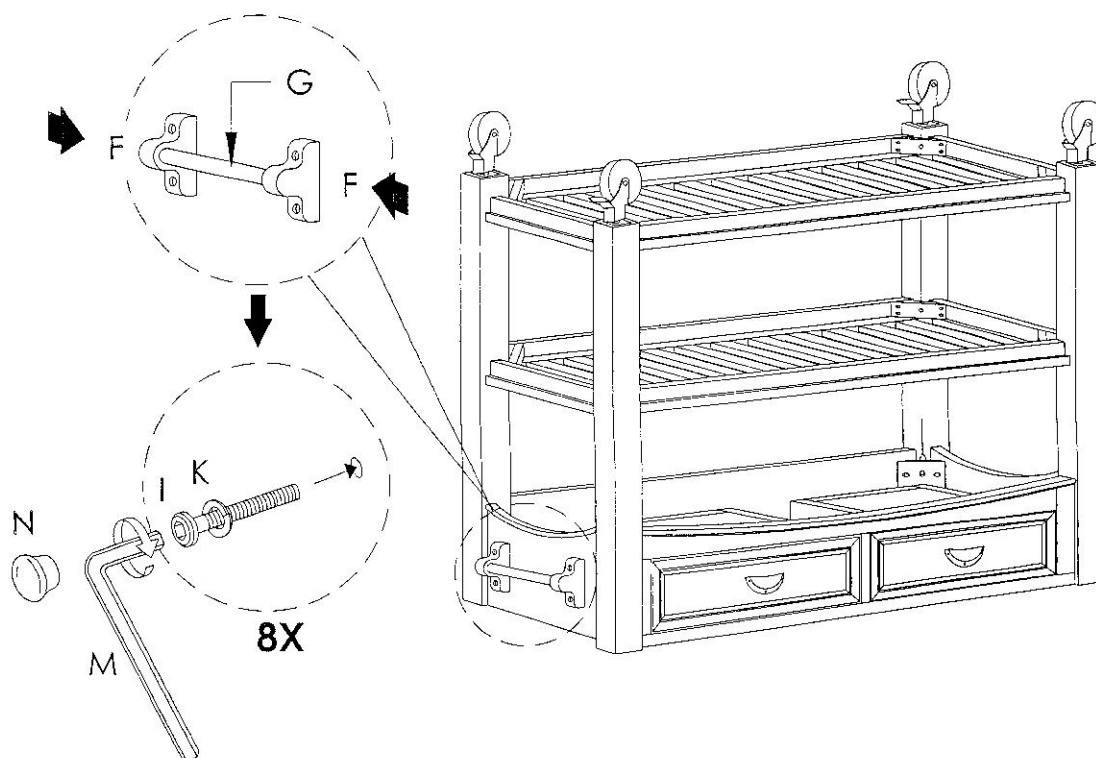

 
- 6** Place the Kitchen Cart Top Panel (A) upside down and place it on a piece of cloth to prevent from scratching. Insert Wooden Dowel (O) to the pre-drill holes on Kitchen Cart Top Panel (A).

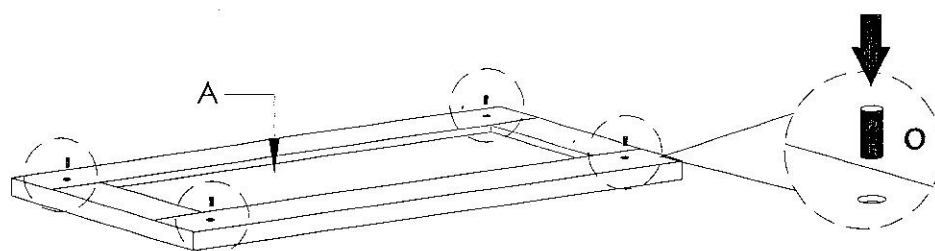

IMPORTANT NOTE :

Please skip **Step 6 to Step 8** if purchase Granite or Marble Top and directly refer to Step 9 .

 
- 7** Carefully place the Kitchen Cart on top of the Kitchen Cart Top Panel (A).

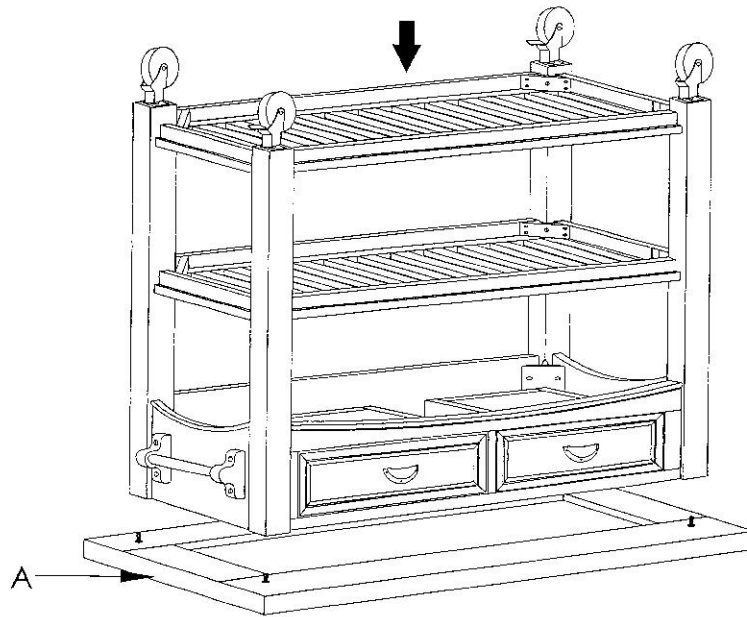

IMPORTANT NOTE :

Please skip **Step 7** if purchase Granite or Marble Top

 - 8** From inside, secure the Kitchen Cart to the Kitchen Cart Top Panel (A) with CSK Screw (P) using Phillip Head Screwdriver (not provided). After finish turn back the Kitchen Cart to it's upright position.

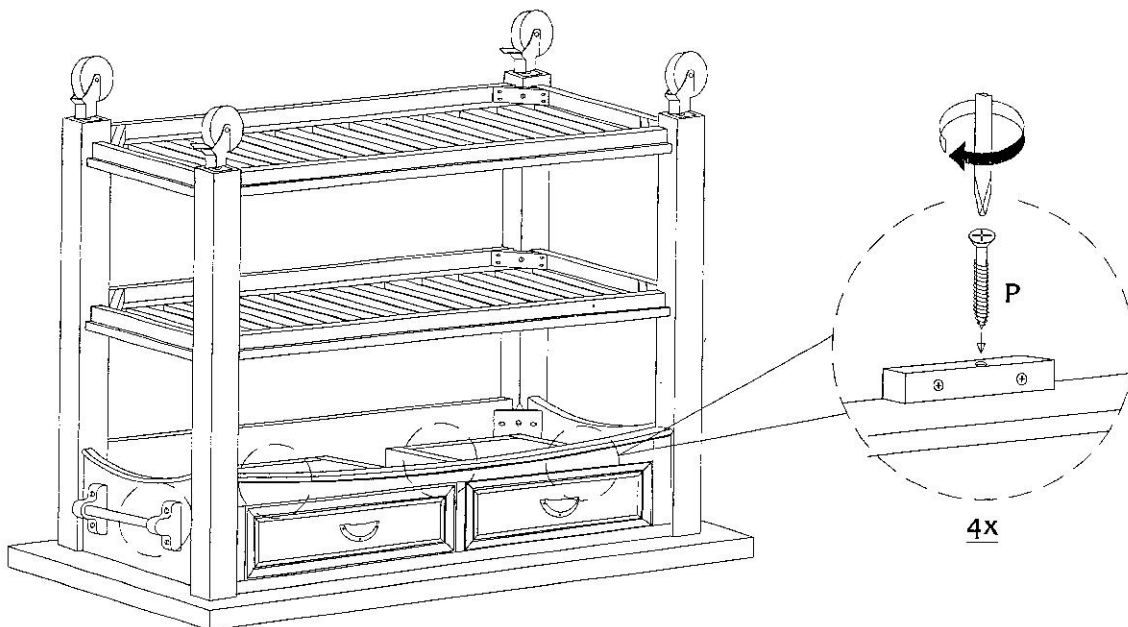


IMPORTANT NOTE :

Please skip **Step 8** if purchase Granite or Marble Top.
Assemble is completed for Kitchen Cart with Solid Top.

9

 Insert Wooden Dowel (O) to the pre-drilled holes on top of Kitchen Cart Frame (B). Repeat the same process to all 4 corners. Then place the Kitchen Cart Top Panel (A).

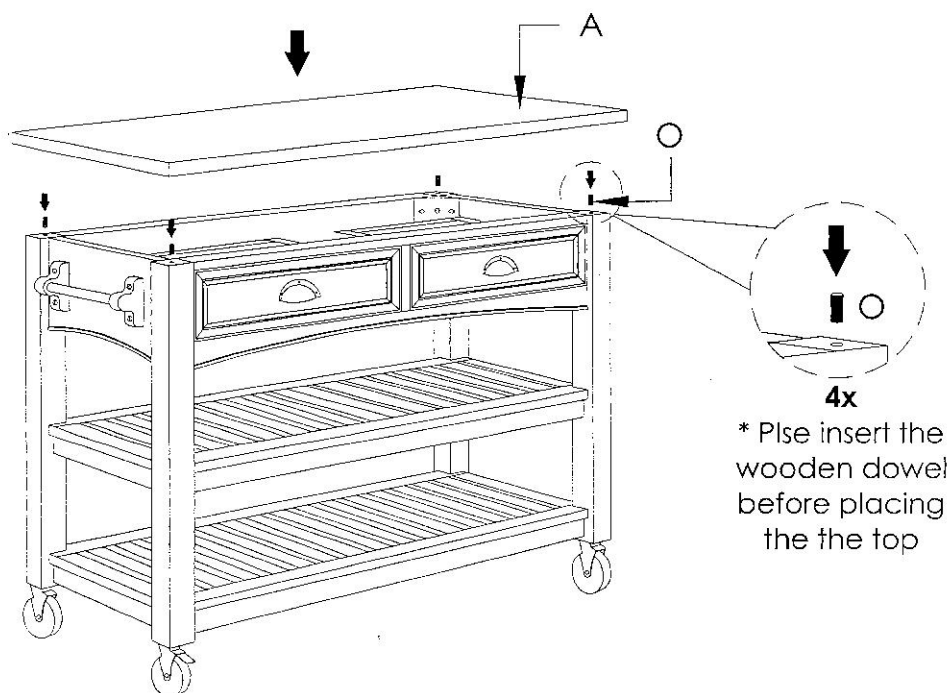

CLEANING & CARE

Treat surface with care. Surface is resistant to scratches but is not scratches resistant. Clean surface with a dry or dampsoft cloth. Do not use abrasive cleaners. Hardware may loosen overtime. Priodically check that all connections are tight.