


ASSEMBLY INSTRUCTION

E546CF ACCENT CHAIR

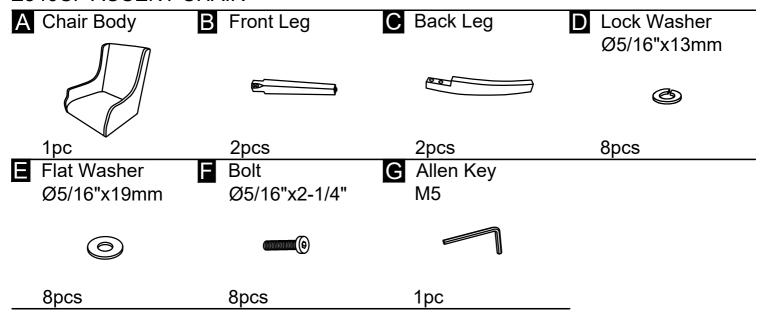

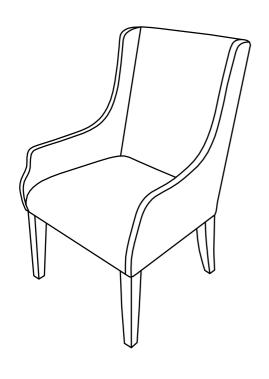

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage. Put Chair Body (A) on a smooth flat surface, attach Front Leg (B) to the Chair Body (A) using Bolt (F), Lock Washer (D) and Flat Washer (E) on both holes of Chair Body (A) by Allen Key (G). Turn the Allen Key (G) in Bolt (F). But not too tight.

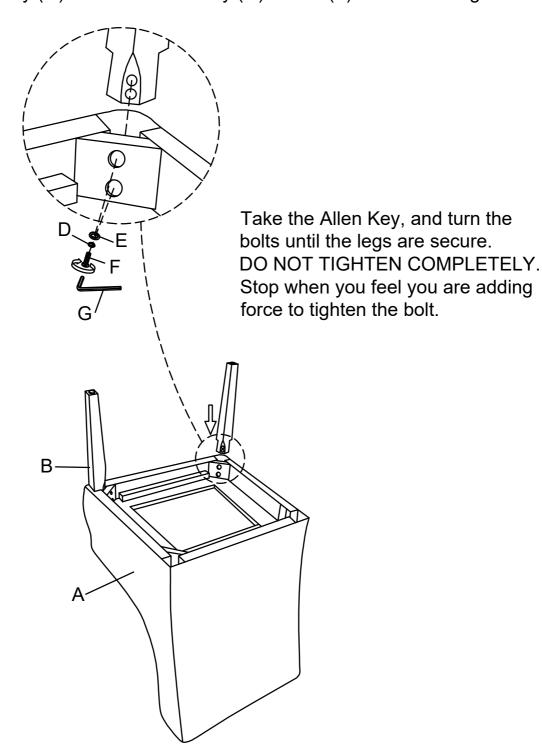

Attach Back Leg (C) to the Chair Body (A) using Bolt (F), Lock Washer (D) and Flat Washer (E) on both holes of Chair Body (A) by Allen Key (G). Turn the Allen Key (G) in Bolt (F). But not too tight.

and check that it is balanced. If there is corner where a leg is uneven. Keeping Do not over-tighten beyond hole depth.

> Turn left or turn right to adjust the leveler until the chair is stabilized.

Leveler

Helpful Tip: -Instead of applying downward pressure while reaching under to tighten bolts, have someone sit in the chair while you tighten the bolts.

Cleaning & Care

Stand chair up on an even surface

a slight wobble, apply downward pressure in the

pressure in that corner, tighten all bolts. If balanced. apply downward pressure evenly in

the center and

tighten all bolts.

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.