

Size: 19.685" x 17.5"

Please Read and Save this Use and Care Book.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- To protect against risk of electrical shock, do not put motor end of the appliance in water or other liquid.
- This appliance should not be used by children and care should be taken when used near children.
- Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- Avoid contacting moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter.
- Never add to container while appliance is operating.
- Container must be properly in place before operating appliance.
- Do not let cord contact hot surface, including the stove.
- Keep hands and utensils out of the container while blending to reduce the risk of severe injury to persons or damage to the unit. A scraper may be used but must be used only when the unit is not running.
- Blades are sharp. Handle carefully.
- Do not use appliance for other than intended use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Remove beaters from mixer before washing.
- Do not attempt to defeat the cover interlock mechanism.
- Keep hands, hair, clothing, as well as spatulas and other utensils away from beaters during operation to reduce the risk of injury to persons, or damage to the mixer."
- When mixing liquids, especially hot liquids, use a tall container or make small quantities at a time to reduce spillage.

SAVE THESE INSTRUCTIONS.

This product is for household use only.

¿NECESITA AYUDA?

Para servicio, reparaciones o preguntas relacionadas al producto, por favor llame al número del centro de servicio que se indica para el país donde usted compró su producto.

NO devuélva el producto al fabricante. Llame o lleve el producto a un centro de servicio autorizado.

DOS AÑOS DE GARANTÍA LIMITADA (No aplica en México o Estados Unidos)

¿Qué cubre la garantía?

- La garantía cubre cualquier defecto de materiales o de mano de obra que no haya sido generado por el uso incorrecto del producto.

¿Por cuánto tiempo es válida la garantía?

- Por dos años a partir de la fecha original de compra.

¿Cómo se obtiene el servicio necesario?

- Conserve el recibo original como comprobante de la fecha de compra, comuníquese con el centro de servicio de su país y haga efectiva su garantía si cumple lo indicado en el manual de instrucciones.

¿Cómo se puede obtener servicio?

- Conserve el recibo original de compra.
- Por favor llame al número del centro de servicio autorizado.

POLARIZED PLUG (120V Models Only)

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.

Do not attempt to modify the plug in any way.

ELECTRICAL CORD

- A short power-supply cord (or detachable power-supply cord) should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- If a longer detachable power-supply cord or extension cord is used:

- 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance; and
- 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

Note: If the power supply cord is damaged, it should be replaced by qualified personnel; in Latin America, by an authorized service center.

Product may vary slightly from what is illustrated.



Póliza de Garantía (Válida sólo para México)

Duración.

Spectrum Brands de México SA de CV garantiza este producto por 2 años a partir de la fecha original de compra.

¿Qué cubre esta garantía?

Esta Garantía cubre cualquier defecto que presenten las piezas, componentes y la mano de obra contenidas en este producto.

Requisitos para hacer válida la garantía

Para reclamar su Garantía deberá presentar al Centro de Servicio Autorizado la póliza sellada por el establecimiento en donde adquirió el producto. Si no la tiene, podrá presentar el comprobante de compra original.

¿Donde hago válida la garantía?

Llame sin costo al teléfono 01 800 714 2503, para ubicar el Centro de Servicio Autorizado más cercano a su domicilio en donde usted podrá encontrar partes,

How to Use

This unit is for household use and can be plugged into a standard electric outlet. It easily prepares sauces, salad dressings, mayonnaise, baby foods and a variety of cold drinks. It can be used in nonstick pans without scratching the nonstick surface.

GETTING STARTED

- Unpack unit and clean as instructed in the CARE AND CLEANING section.

USING YOUR MIXER

1. Plug unit into a standard electric outlet.
2. Grasp the handle and insert the immersion mixer into the mixture.
3. Press the desired speed switch (I/II) to turn on the mixer **(A)**. It will keep running as long as the switch is pressed.
Note: During use, it is normal for suction to increase at the bottom of the container.
4. When mixing is complete, release the speed switch before removing unit from the mixture.
5. Unplug unit immediately after use.
6. The recommended time of use for the mixer, with two speeds, is 2 minutes of continuous use.
7. Product Speeds are as follows: Low speed (I) average 20,000 RPM, high speed (II) average 25,000 RPM.

OPERATING TIPS

- Cut solid foods into ½-inch pieces for easier mixing or chopping.
- Use an up and down motion for mixing and pureeing.
- If using the immersion mixer directly in a saucepan, be sure to remove the pan from the heat before using the blender.
- Use only crushed ice; the mixer is not designed to chop ice.

Care and Cleaning

This appliance is permanently lubricated and will not require additional lubrication. It contains no user serviceable parts. Refer service to qualified service personnel.

TO CLEAN

1. Place 1 1/2 cups hot water in cup, add 1 drop liquid detergent and insert blender. Run for 20 seconds.
2. Wipe unit body with a damp cloth or sponge.

Important: Never immerse unit body in water or any other liquids.

componentes, consumibles y accesorios.

Procedimiento para hacer válida la garantía

Acuda al Centro de Servicio Autorizado con el producto con la póliza de Garantía sellada o el comprobante de compra original, ahí se reemplazará cualquier pieza o componente defectuoso sin cargo alguno para el usuario final. Esta Garantía incluye los gastos de transportación que se deriven de su cumplimiento.

Excepciones

Esta Garantía no será válida cuando el producto:

- A) Se hubiese utilizado en condiciones distintas a las normales.
- B) No hubiese sido operado de acuerdo con el instructivo de uso que le acompaña.
- C) Cuando el producto hubiese sido alterado o reparado por personas no autorizadas por **Spectrum Brands de México SA de CV**.

Nota: Usted podra encontrar partes, componentes, consumibles y accesorios en los centros de servicios autorizados. Esta garantía incluyen los gastos de transportación que se deriven de sus cumplimiento dentro de sus red de servicio.

