

WARNINGS AND CAUTIONS

Released Date: 2023-09-21

READ AND SAVE THESE INSTRUCTIONS

Please read and understand this entire manual before attempting to assemble, install or operate the product.


WARNING

- RISK OF ELECTRIC SHOCK - Before beginning installation, turn off electricity at the circuit breaker box or the main fuse box.
- RISK OF FIRE - Use bulbs specified by the markings and/or labels on the fixture.
- RISK OF PERSONAL INJURY - DO NOT bend the blades when installing the fan, or cleaning the fan. Do not insert foreign objects in between rotating fan blades.
- RISK OF FIRE, ELECTRIC SHOCK, OR PERSONAL INJURY - mount to outlet box marked (acceptable for fan support of 22.7kg(50lbs) or less) and use mounting screws provided with the outlet box.
- All set screws must be checked, and re-tightened where necessary, before installation.
- After making the wire connections, the wires should be spread apart with the grounded conductor and the equipment-grounding conductor on one side of the outlet box and the ungrounded conductor on the other side of the outlet box.
- Suitable for use with solid-state speed controls.
- use only with light kits marked suitable for use in damp locations.
- This unit weighs 14.5 kg (31.9 lbs).

CAUTION

- For your safety, read instructions completely before beginning installation.
- If in doubt about electrical installation, consult a licensed electrician.
- Disconnect fixture from the power source before replacing bulbs or cleaning. Make sure the bulbs are given sufficient time to cool before removing.

TOOLS REQUIRED

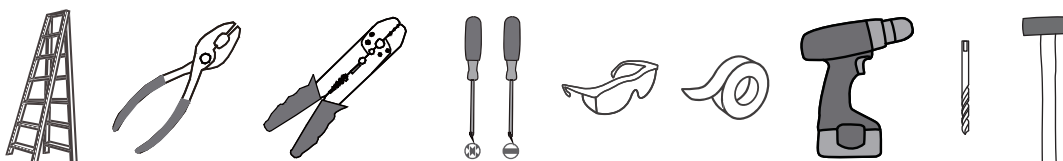


CARE AND MAINTENANCE



- Wipe clean using soft, dry cloth or static duster. Always avoid using harsh chemicals and abrasives to clean fixture as they may damage the finish.

If you need further assistance call Quoizel Customer Care at 1-800-645-3184 (9:00am - 5:00pm EST), or visit us on-line at www.quoizel.com.

PACKAGE CONTENTS

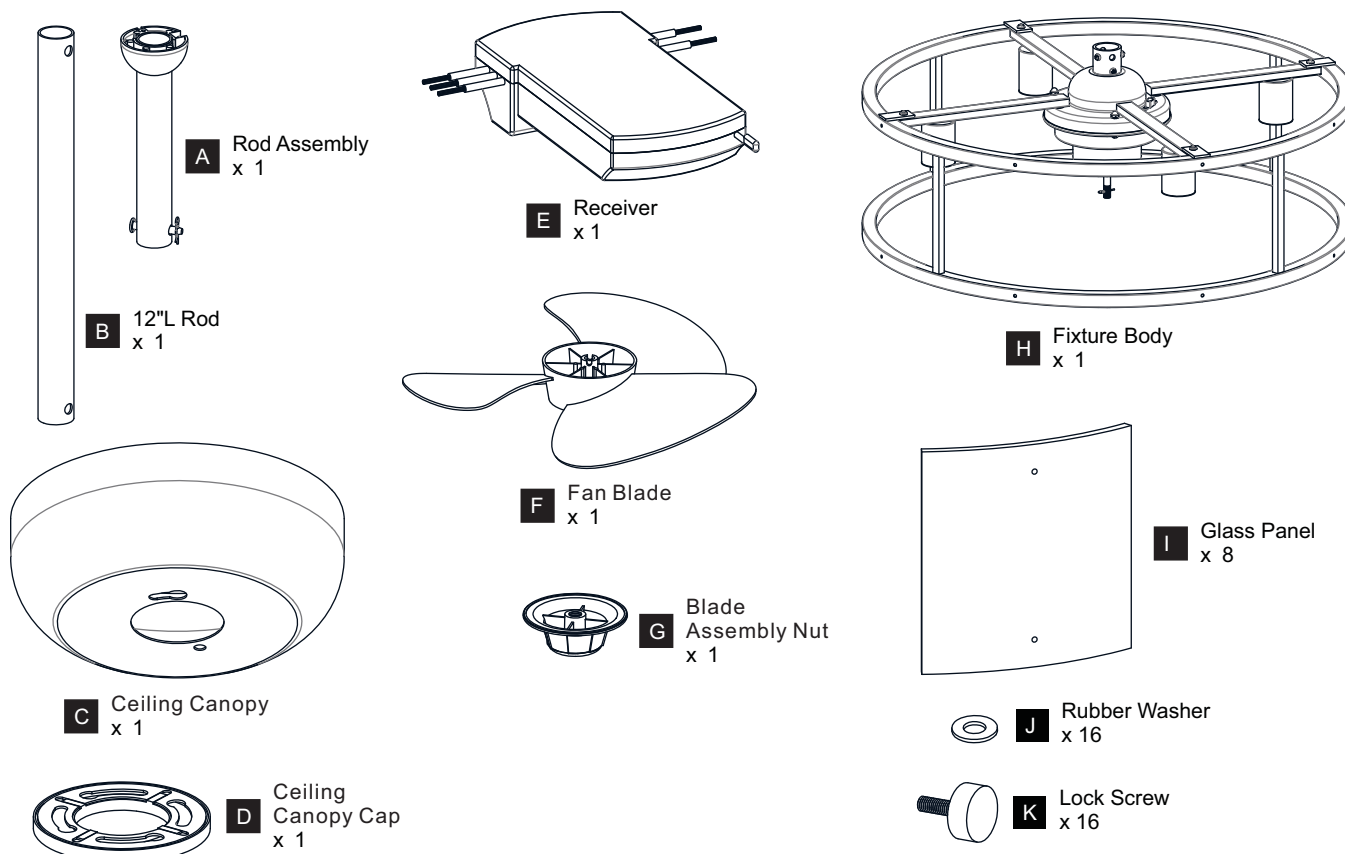


PACKAGE CONTENTS (PARTS BAG 1)

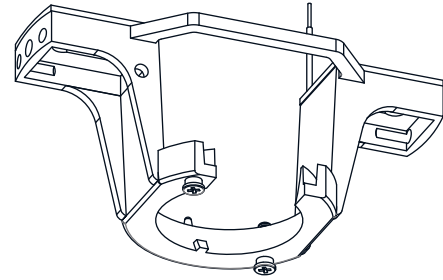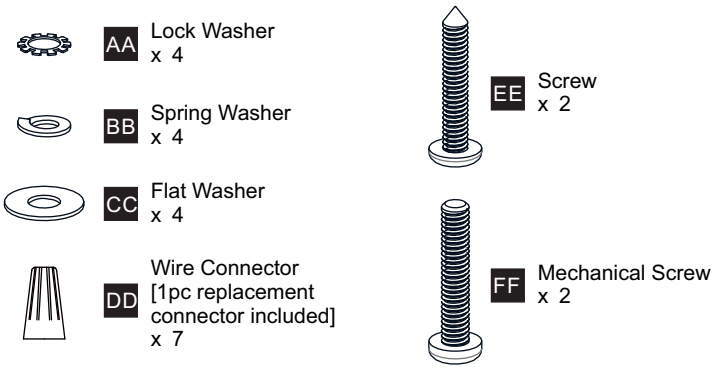


GG Hanger Frame x 1

PACKAGE CONTENTS (PARTS BAG 2)

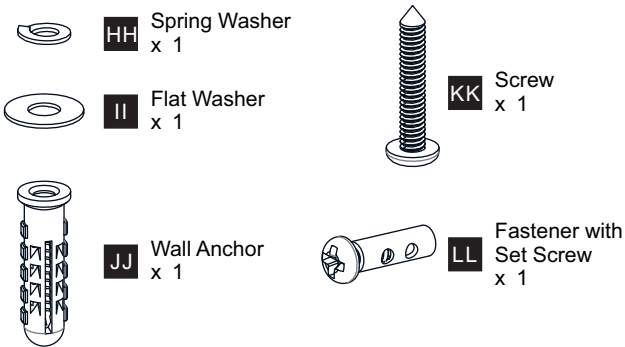


PACKAGE CONTENTS (PARTS BAG 3)

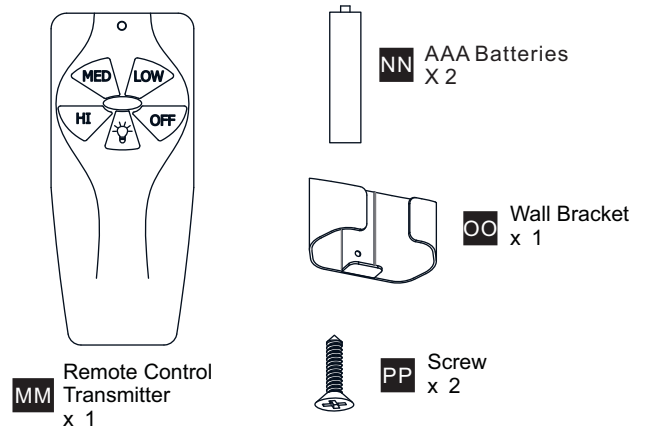


INSTALLATION

1 Install Glass Panels

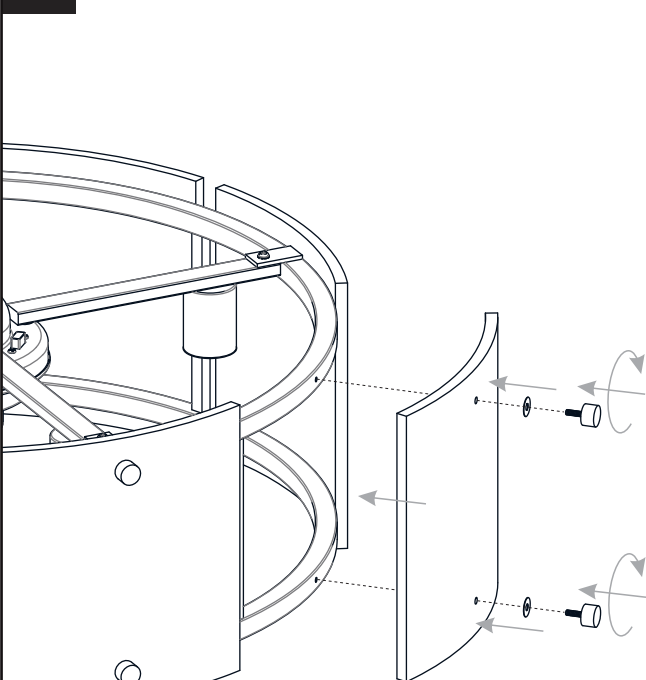


2 Install Hanger Frame

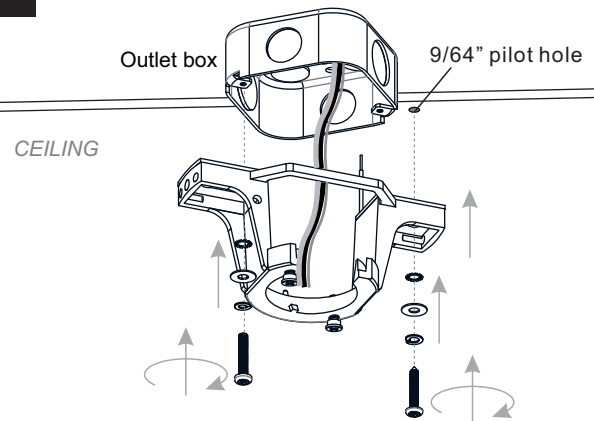

Use machine screws
when securing to existing ceiling fan-rated outlet box that supports of 50 lbs (22.72 kg) or less.

Use wood screws
When securing to support structure with approved electrical outlet box. Drill 9/64" pilot holes.

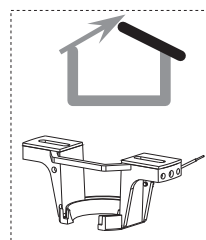


This fan cannot be used for the ceiling which angle is greater than 19 degree.

For angled ceilings, point opening toward peak.

3

 Choose Rod



OPTION 1

Standard Downrod
(Included -
Pre-assembled)
for ceilings 11 Feet high



OPTION 2

Longer Downrod
(Included)
for angled ceilings or
ceilings 12 Feet or higher

 

SKIP TO NEXT STEP

1

2

3

Steps 1-3 to remove standard downrod

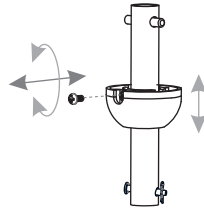

4

Steps 4-6 to assemble longer downrod

6

5

4

Install Rod to Fixture Body

1


2

Steps 1-2 to remove pin





3

Install ceiling canopy &
ceiling canopy cap

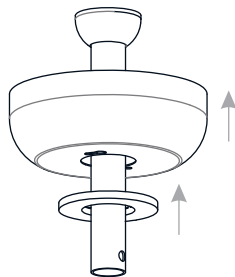


4


Remove set screws on
fixture body

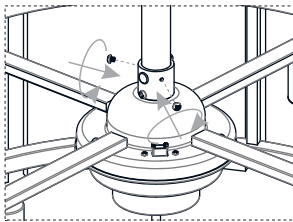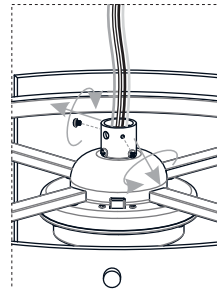

Install set screws

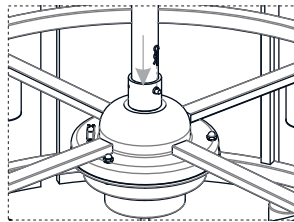

Install pin

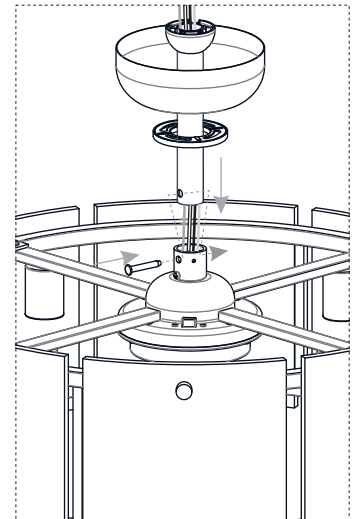

Install rod

7


6

5


5

Loosen Shoulder Screws


Remove one shoulder screw from hanger frame.
Loosen the other shoulder screw approximate 1/4"
and retain it on the hanger frame.

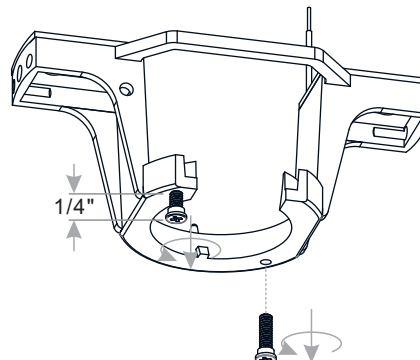


6 Install Rod to Hanger Frame

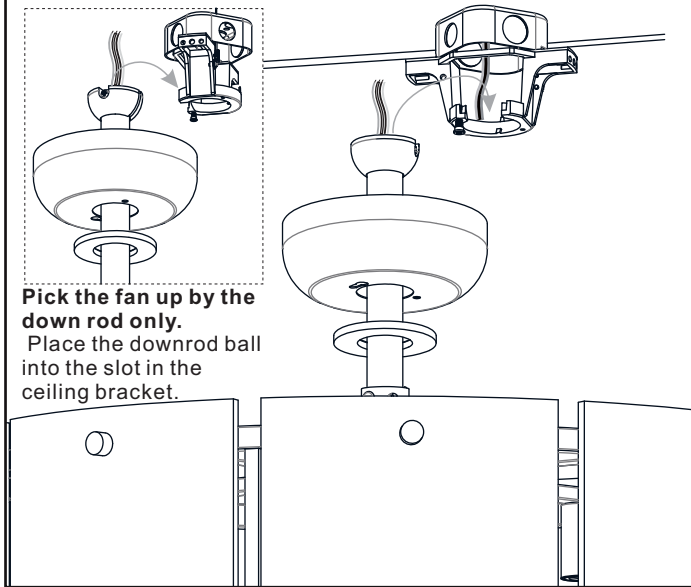


7 Install Safety Cable

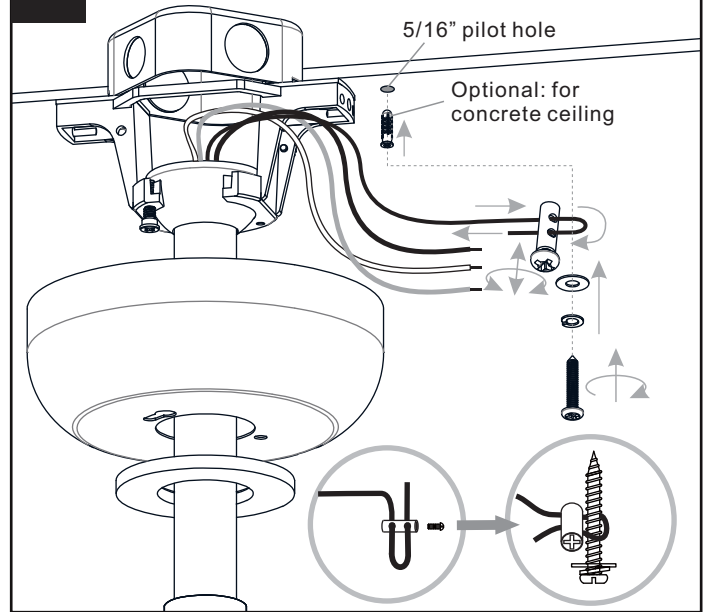

8 Wiring

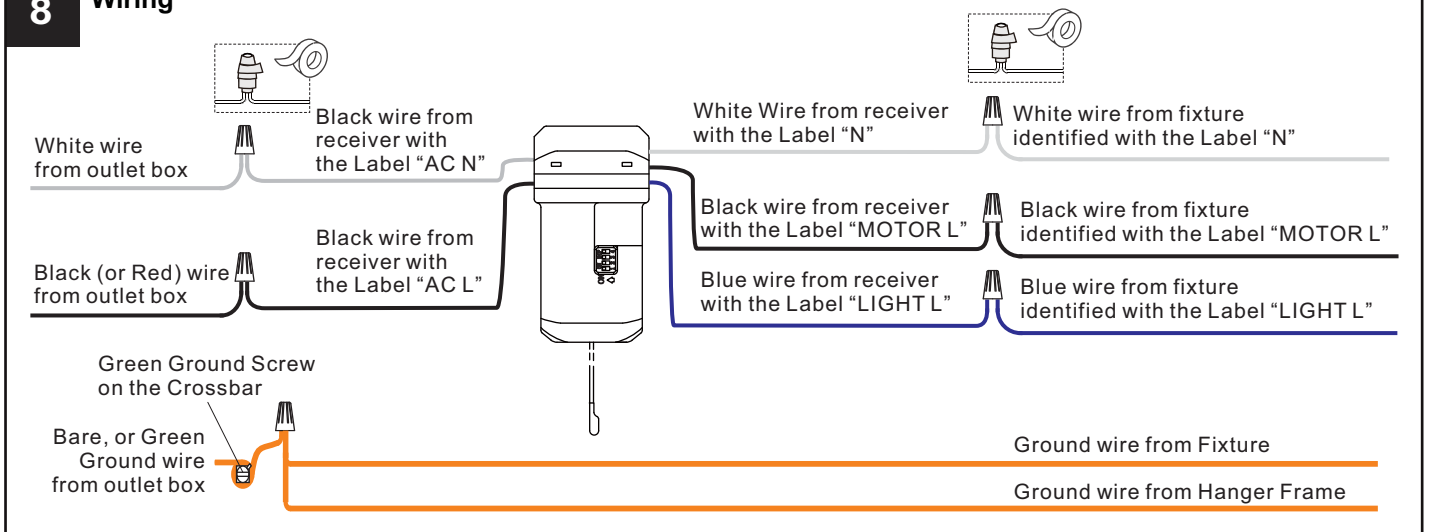


9 Place Controller to Hanger Frame

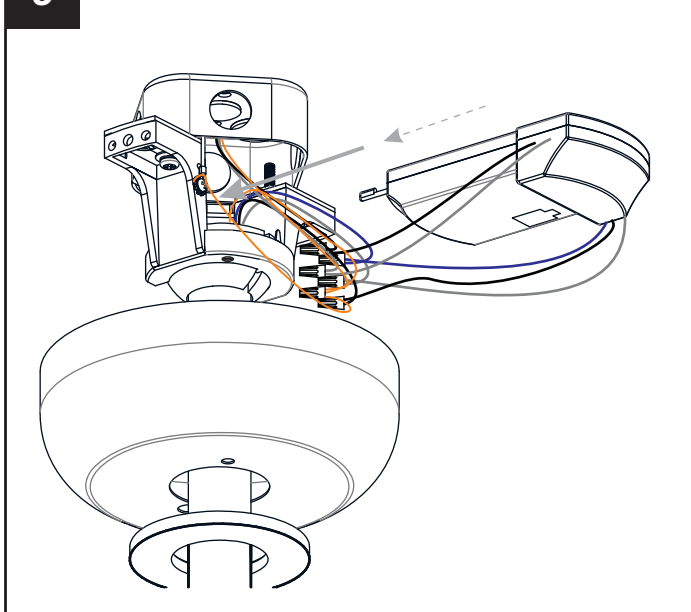


10 Install Ceiling Canopy

Carefully tuck all wires inside of the ceiling canopy during installation.

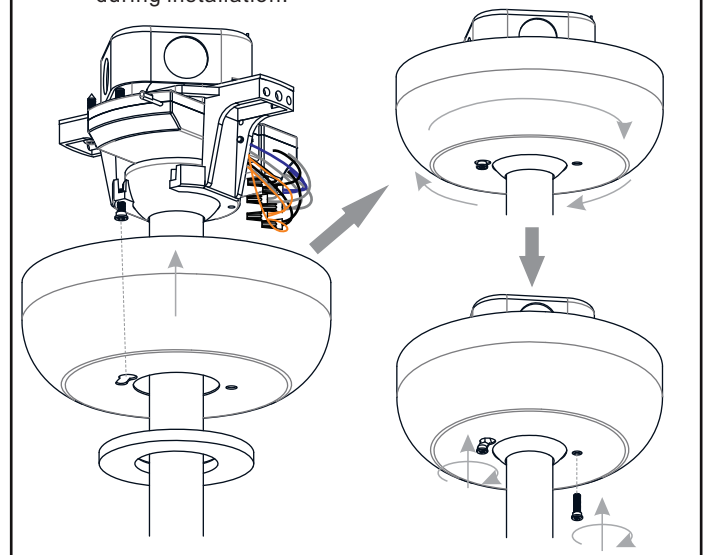

11

Install Ceiling Canopy Cap

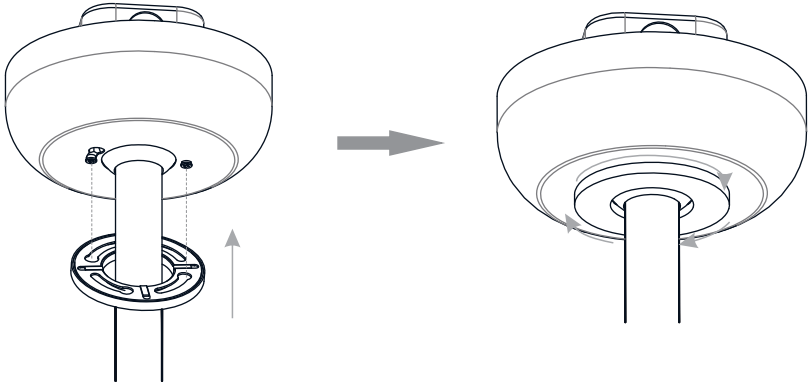


12

Install Fan Blade


1

Remove pin

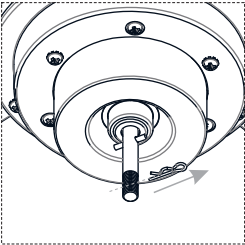


2

Attach fan blade

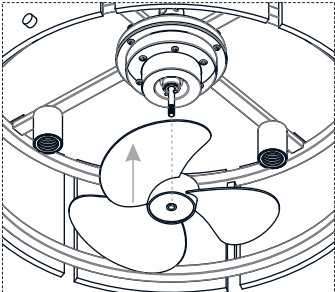


3

Install pin

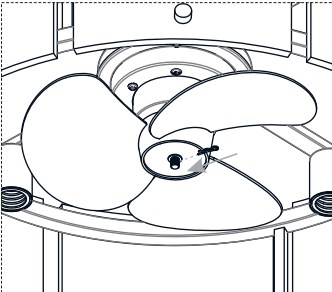


4

Install blade assembly nut

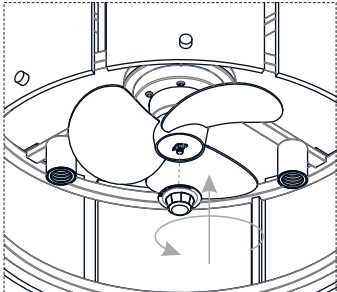

13

Install Bulbs

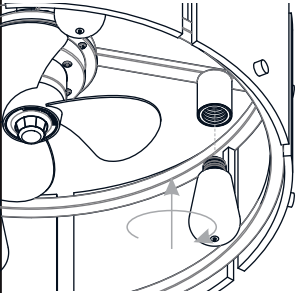

Install four correct bulbs referring to fixture markings and/or labels for maximum wattage.

Recommended Bulb Type (not included):




BULB BASE TYPE
Medium (E26)




BULB TYPE
TYPE S LED
8W
MAX

14

Install Wall Bracket

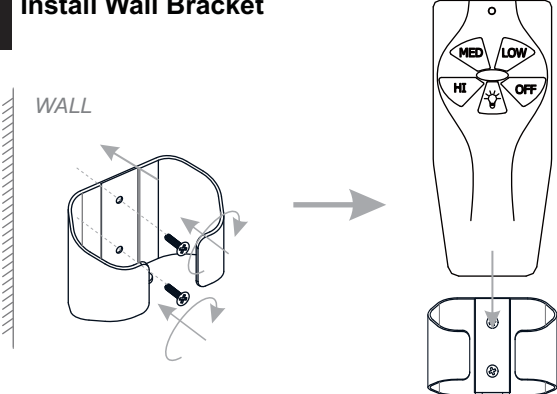

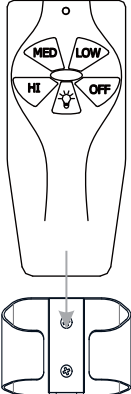

15

Install AAA Batteries to Remote Control Transmitter

1

Remove back cover

2

Match the codes on receiver and remote

3

Insert AAA batteries

4

Install back cover

Remove the rubber stopper from the receiver. Then the code must be the same for both receiver and remote. Place the previously removed rubber stopper back in the receiver.

Receiver

Antenna

Remote

AAA Batteries

Remove back cover

Match the codes on receiver and remote

Insert AAA batteries

Install back cover

OPERATION:

1. Light button : Press it to turn on the lights. Press it again to turn off the lights. Long press it, the bulbs will be dimmable.

2. HI, MED, LOW, OFF buttons: To adjust fan speed.

16

Reverse Fan Blade (Optional)

Reversing Switch

DOWN
- BAS
- ABAJO

UP
- HAUT
- ARRIBA

Reverse Switch Information		
Season	Rotation Direction	Switch Position
Summer	Clockwise	Left
Winter	Counterclockwise	Right

Note:

1. If airflow is desired in the opposite direction, turn the fan off and wait for the blades to stop turning.

2. Push the reverse switch to Left or Right completely.

Your installation is now complete! Restore electricity and save this sheet for future reference.

- 6 of 6 -