

INSTRUCTION MANUAL

6V Kids Ride-On Truck

SKY6794 + SKY6795 + SKY6796+ SKY6797 + SKY6798 SKY6801+ SKY6802 + SKY6803 + SKY6804 + SKY6805



As shoppers, we're always trying to find the perfect balance between quality & value. At BCP, we believe we've achieved that. Our diverse catalog of everyday essentials is tailored especially to our customers & guaranteed to hit that sweet spot of high quality & low price.

Always.



Charge for **12 hrs** before initial use.

After initial charge, follow the normal recommended charging time.





Please retain these instructions for future reference.

This vehicle must be assembled by an adult who has read and understood the instructions in this manual. Keep the packaging and bags away from children and dispose of all packaging before use. Always use common sense and safe practices when operating this vehicle. This product contains or emits chemicals known in the state of California to cause cancer or birth defects or other reproductive harm.

NOTE: For best performance, only use this vehicle on flat and hard surfaces.

AGE RANGE: 3 to 5 years old **WEIGHT CAPACITY:** 44 lbs.

The following safety hazards may result in serious injury or death:

- This product contains small parts. Keep children away during assembly. Make sure to remove all packaging material and parts from underneath the vehicle body.
- Never open the battery. Batteries contain lead and lead compounds (acids) that are toxic and corrosive, and known to the state of California to cause cancer and reproductive harm.
- Limbs, hair, and clothing can get caught in moving parts. Always wear shoes, keep limbs away from moving parts, and do not wear loose clothing while operating this vehicle.
- This vehicle does not have brakes or braking capability. Do not leave a child unattended during operation. Do not use this in a location that may require braking capability, as this could result in loss of control, which may cause serious injury or death.
- Use of this vehicle near streets, motor vehicles, steps, bodies of water, sloped surfaces, hills, wet areas, flammable vapors, in alleys, at night, or in the dark could result in an unexpected accident.
- Use of this vehicle in unsafe conditions such as snow, rain, loose dirt, mud, sand, or gravel may result in an unexpected accident such as tipping over, and could damage the electrical system or battery.
- Do not operate this vehicle in an unsafe manner. Examples include but are not limited to:
 - Pulling the vehicle with another vehicle or similar device
 - Allowing more than one rider
 - Pushing the user
 - Traveling at an unsafe speed
- This product is intended for residential use only.

BATTERY WARNINGS

The following safety hazards may result in serious injury or death:

- Use of a battery or charger other than the supplied rechargeable battery and charger may cause a fire or explosion. Only use the supplied battery and charger.
- Use of the rechargeable battery and charger for any other product may result in overheating, fire, or explosion. Never use the supplied rechargeable battery and charger with another product.
- Damage to the battery may occur if it is allowed to drain completely. **Do not allow the battery to drain completely**.
- Explosive gases are created during charging. Charge the battery in a well-ventilated area. Do not charge the battery near heat or flammable materials.
- Contact between the positive and negative terminals may result in fire or explosion. Avoid direct contact between the terminals. Picking up the battery by the wires or charger can cause damage to the battery and may result in a fire. Always pick up the battery by its case or handles.
- Liquids on the battery may cause fire or electric shock. Always keep all liquids away from the battery and keep the battery dry. Contact or exposure to battery leakage (lead acid) may cause serious injury. If contact or exposure occurs immediately call your physician. If the chemical is on the skin or in the eyes, flush with cool water for 15 minutes. If the chemical was swallowed, immediately give the person water or milk. Do not give water or milk if the patient is vomiting or has a decreased level of alertness. Do not induce vomiting.
- Battery posts, terminals, and related accessories contain lead and lead compounds (acid) chemicals known to the State of California to cause cancer, reproductive harm, and are toxic and corrosive. Never open the battery.
- Tampering or modifying the electric circuit system may cause a shock, fire or explosion and permanently damage the system. Exposed wiring and circuitry in the charger may cause electric shock. Always keep the charger housing closed.

AWARNING

To reduce the risk of injury, adult supervision is required. Never use on roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than one rider.

- Risk of fire. Do not bypass. Replace only with 6V 7AH battery.
- · Never leave a child unattended.
- · Always sit in the seat when using this vehicle.
- Keep your hands, hair, and clothes away from moving parts.
- Children under 3 years of age cannot use the vehicle.
- · Only drive on level ground.
- Do not drive the vehicle into loose dirt, mud, sand, fine gravel, or on wet surfaces.

SPECIFICATIONS

Weight	22.8 lbs.
Weight Capacity	44 lbs.
Age Range	3 – 5 years old
Max Speed	3.1 mph.
Initial Charge Time	12 hours
Charging Time	8 – 12 hours
Run Time	1 - 2 hours
Battery Type	6V 7AH
Electric Motor	DC 6V
Charger Input	120V AC
Charger Output	DC 6V 800mA
Material	PP Plastic, Metal
Dimensions	34.6" x 23.2" x 22.8"

WARNING ADULT ASSEMBLY REQUIRED

A WARNING

CHOKING HAZARD - Small parts. Not for children under 3 years old.

TOOLS REQUIRED















HARDWARE





PARTS



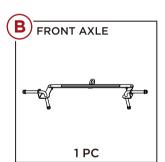

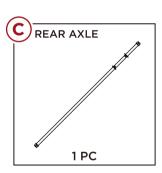

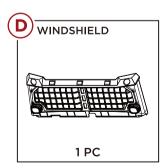


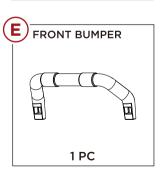




PARTS



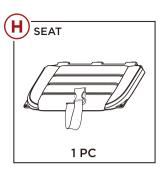


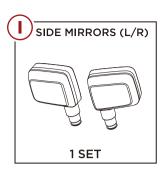









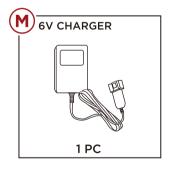

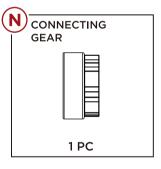

1


Place the vehicle body on a flat, covered surface to prevent scratches, then attach the **part E** front bumper to the vehicle body, push until secure.

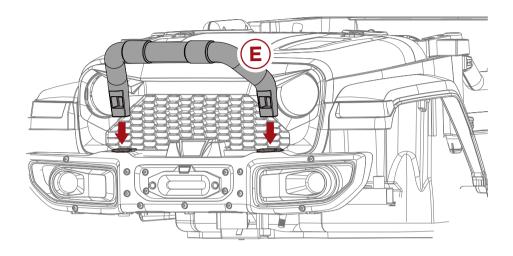


Plip the vehicle body, use the included wrench to remove the washers and nuts from the part C rear axle, then set aside.

Attach the part N connecting gear to the motor as indicated.

 
Insert the ${\bf part} \; {\bf C} \; {\bf rear} \; {\bf axle}$ through the gear boxes, be sure the axle is positioned evenly on both sides.



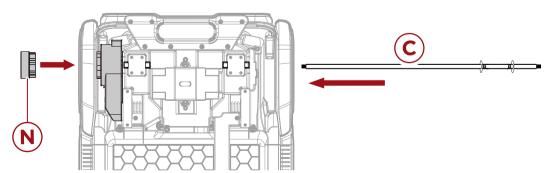




Attach one **part G wheel** onto each side of the rear axle, then replace the nuts and washers to secure. Attach one **part F wheel cover** to each wheel.

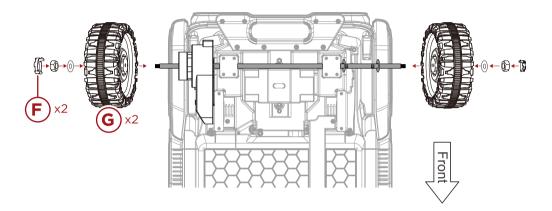

4

Use the included wrench to remove the nuts from the **part B front axle** and steering shaft, then set aside


Attach the **part B front axle** to mounting bar on the front of the vehicle body, thread the steering shaft through the opening on the axle, then replace the nuts to secure.

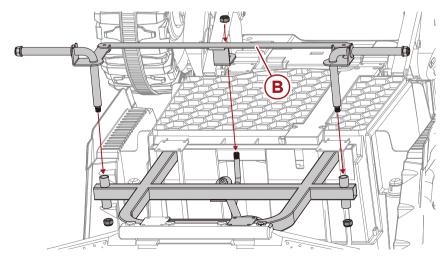



Remove the nuts and washers on the two ends of the **part B front axle**, attach one **part G wheel** onto each side of the axle, then replace the nuts and washers to secure.


Attach one part F wheel cover to each wheel

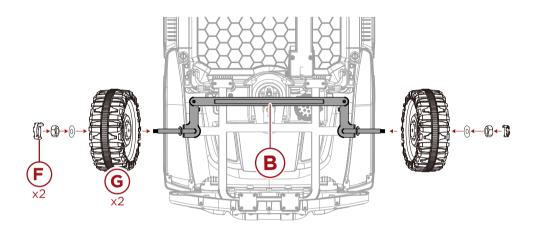

Flip the vehicle body so all four wheels touch the ground.


Locate the part A steering wheel, then remove the attached bolt. Leave the nut in place.

Place the steering wheel onto the steering shaft, then replace the bolt to secure.

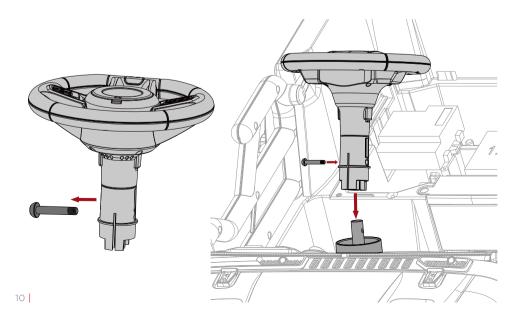




Insert the **part D windshield** into the front of the vehicle body, then insert the **part I side mirrors**, push until secure.

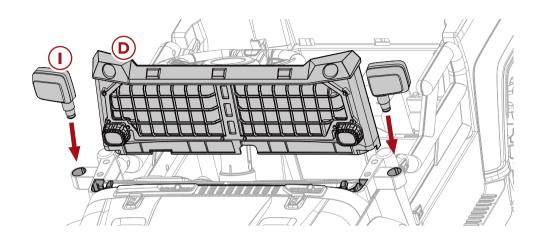

8

Place the ${\bf part\ H\ seat}$ onto its designated space on the vehicle body, then secure with two ${\bf part\ 1\ screws}.$

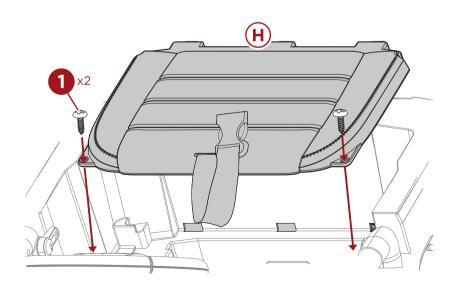




Press **part K backrest** into its designated space on the vehicle body, then secure with two **part 1 screws**.




10

Insert the ${\bf part\ J\ rear\ bracket}$ into the openings on the back of the vehicle body, press until secure.

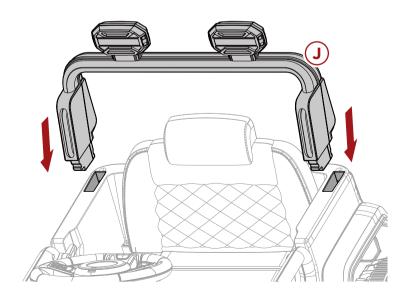




Use a screwdriver to open the covering on the **part A steering wheel**, then install AA batteries. Replace the cover and enjoy.

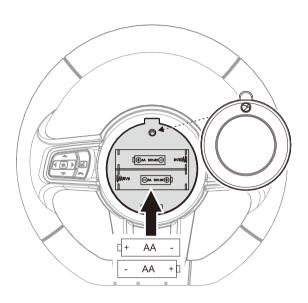


CONNECTING THE BATTERY

1. Locate and open the charging hole cover, beneath the seat.

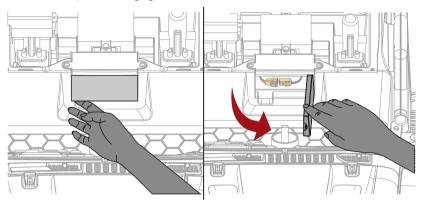


- 2. Insert the power supply into the receiver as shown.
- 3. Close the charging hole cover.

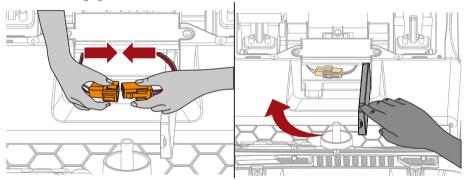


CHARGING INSTRUCTIONS

1. Charging connector is located under the seat.

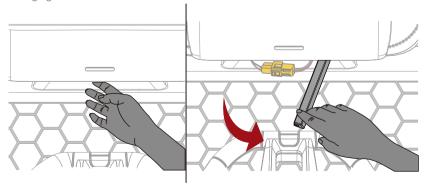


CHARGING INSTRUCTIONS

2. Unplug the power supply from the receiver, then insert supply into part M charger into the charging port and plug the other end into a wall outlet.

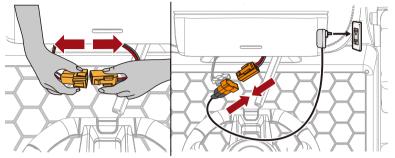

- 3. Charge the battery 12 hours before initial use.
- 4. Unplug the part M charger from the wall outlet, then remove the charger from the power supply.
- 5. Reconnect the power supply to the receiver, then place connector back under the seat.

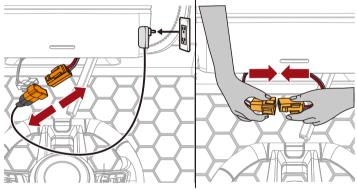


- On average, you will need to charge the battery between 8 and 12 hours. Do not charge the battery for more than 20 hours. Failure to charge the battery as directed could cause permanent damage to the battery and void the warranty.
- Damage to the battery may occur if it is allowed to drain completely. Do not allow the battery to drain completely.
- Check the battery and charger (supply cord, connector) for wear and damage before charging. Do not charge the battery if damage has occurred.
- Only an adult who has read and understood the safety warnings should handle, charge and recharge the battery.

CARING FOR YOUR RIDE-ON


- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Do not leave the vehicle in the sun for long periods of time or fading may occur. Store in shade or cover with tarp.
- · Do not wash the vehicle with a hose.
- · Do not wash the vehicle with soap.
- · Charge battery at least once a month to prolong the life of the battery.

DASHBOARD DIAGRAM

- Push down on the pedal to drive forward/reverse. Release the pedal to slow down and stop.
- 1. Horn I
- 2. Horn II
- 3. Liahts
- 4. On/Off
- 5. High/Low Speed 6. Forward/Reverse 7. Foot Pedal 8. Door Locks

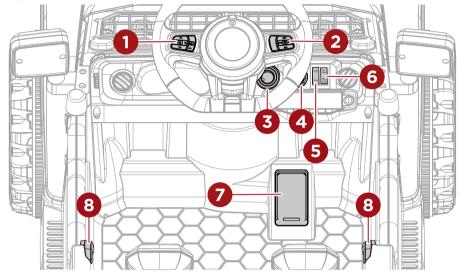

REMOTE CONTROL

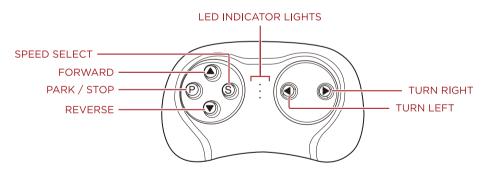

- Remote control operation will OVERIDE manual operation; the pedal will not work when operating
 the remote control.
- · After a period of non-operation, the remote will go into power-saving mode.

Linking the remote control:

- 1. Turn the vehicle off.
- 2. Install 2 AAA batteries into the remote control and the indicator lights will flash.
- 3. Turn the vehicle on. The indicator lights will turn solid indicating a successful link.
- **4.** If the indicator lights continue to flash (indicating an unsuccessful link), remove and reinsert batteries and repeat steps 1 to 3.

TROUBLESHOOTING

PROBLEM	REASON	SOLUTION
Vehicle does not move	Low battery	Fully charge the battery
	Electrical protection	Stop use for several minutes and restart
	Switch not in the correct position	Completely press in switches
	Battery connectors disconnected	Plug in battery connectors
Battery does not recharge	Battery connectors disconnected	Plug in battery connectors
	Charger not connected to socket or outlet	Completely plug in the charger
Battery does not last	Battery does not have a full charge	Fully charge the battery
Battery is warm and makes a slight noise while charging	Normal	Normal
	Low battery	Fully charge the battery
Slow speed	Overloaded vehicle	Reduce the weight on the vehicle
	Uneven or sloped road	Drive on flat pavement
Vehicles shakes while driving	Loose connection to motor	Ensure the motor is properly connected to the battery
Difficulty shifting between forward/reverse	Attempting to shift while vehicle in motion	Only shift when the vehicle is at a stop
Vehicle is silent	Steering wheel is not properly connected	Properly connect the steering wheel connector

WARNINGS REGARDING BATTERIES

- Do not mix alkaline, standard (carbon zinc) and rechargeable (nickel hydride) batteries.
- · Do not mix old and new batteries.
- Non-rechargeable batteries should not be charged.
- Rechargeable batteries should be charged under adult supervision only.
- Exhausted batteries should be removed.
- The supply terminals should not be short-circuited.
- Do not put batteries next to or in a heat source (fire, electronic heating device, etc.).
- · Do not hit batteries against hard objects.
- · Do not submerge batteries in water.
- · Batteries should be inserted with the correct polarity.

CALIFORNIA PROPOSITION 65

MARNING: Battery posts, terminals, and related accessories can expose you to chemicals including lead and lead compounds, which are known to the State of California to cause cancer and birth defects or other reproductive harm, and are toxic and corrosive. Wash hands after handling. For more information go to www.P65Warnings.ca.gov

FCC COMPLIANCE STATEMENT

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This product may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no quarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Responsible party (contact for FCC matters only): Quality Control Dept. 15101 Red Hill Ave. Tustin, CA 92780 Earn points while you shop. Join today!

bestchoice products reward\$

Join | Earn | Redeem

Give your friends 15% off their first order! For each successful referral you'll receive 100 points.

bestchoiceproducts.com



Question about your product? We're here to help. Visit us at:

help,bestchoiceproducts.com











Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

/\ WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.