

Salter Marblestone 24cm Frypan Grey

BW02763G1EU7

Please retain instructions for future reference.

Care and use

Before using the cookware for the first time, it is essential to hand-wash it thoroughly. To precondition the non-stick surface, wipe the inside with vegetable oil, heat it gently, allow it to cool completely, and then wipe clean with a soft cloth. This cookware is suitable for use on gas, electric solid hot plates, halogen, radiant ring, and induction hobs, but it is not suitable for domestic or microwave ovens, deep fat frying, grilling, open flames, or barbecues. To avoid damaging the soft-touch coating on the handles, do not place the cookware on hob rings larger than its base size or allow flames to lick the sides. Only heat-resistant plastic, silicone, or wooden utensils should be used, and cutting food within the cookware must be avoided to prevent surface damage. It is important not to overheat empty cookware or use it over high heat, as the non-stick coating is designed for medium heat settings. Always supervise the cookware while in use and ensure adequate ventilation in the kitchen. Exercise caution with ceramic hobs, as they can be scratched; instead of dragging the cookware, lift and place it to minimise damage. Any screws may loosen over time and should be retightened as necessary. When cleaning, allow the cookware to cool completely before moving or washing. Although it is dishwasher safe, hand-washing is recommended to preserve its finish. Clean with warm, soapy water and a mild detergent using a soft cloth, and avoid harsh or abrasive cleaners. Should stubborn stains occur, a non-abrasive plastic mesh or pad with warm, soapy water can be used. Do not soak the cookware for extended periods, and ensure it is stored in a dry place. If stacking, place a layer of paper between items to prevent scratches. Caution is advised to prevent the handles from overlapping adjacent hob rings, as they may become hot during use; heat-resistant oven gloves should be employed when moving the cookware. Avoid allowing the cookware to boil dry, as this can cause warping, and never expose hot cookware to cold water. If the cookware overheats, cool it to room temperature before removal from the hob and inspect it for any damage before reuse, disposing of it carefully if necessary. Subject to adherence to these care and use instructions, the Salter ten-year guarantee promises replacement, substitution, or a refund for any product that fails due to faulty workmanship or materials. This guarantee does not cover damage resulting from accidents or misuse and is in addition to your statutory rights.

Made in **China**.

Manufactured by: UP Global Sourcing UK Ltd, Address: Victoria Street, Oldham, Manchester OL9 0DD. **UK**.

Ultimate Products Europe Ltd, Address: 19 Baggot Street Lower, Dublin, D02 X658. **ROI**.