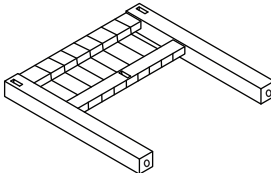
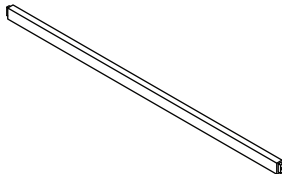
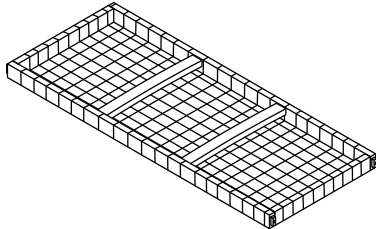
 


ITEM NAME / NOM D'ITEM: MIZUYA BENCH
ITEM# /NO. ITEM: 704229


PARTS LIST/LISTE DES PIÈCES

(1)	(2)	(3)	
 x2	 x1	 x1	
(4)			
A.M7 x 45MM 	x2	D.WOODEN PLUGS 	x4
B.M7 x 70MM 	x4	E.4MM 	x1
C.PLASTIC PLUGS 	x2		


ASSEMBLY INSTRUCTIONS / INSTRUCTIONS D'ASSEMBLAGE

Do not FULLY TIGHTEN the screws or nuts for any step until all are in place.


I

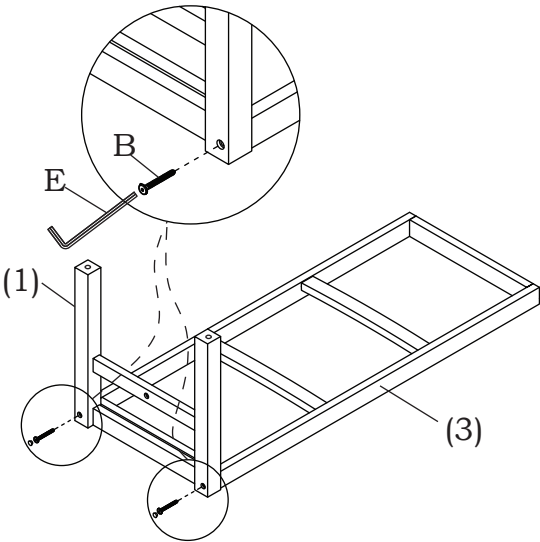


II

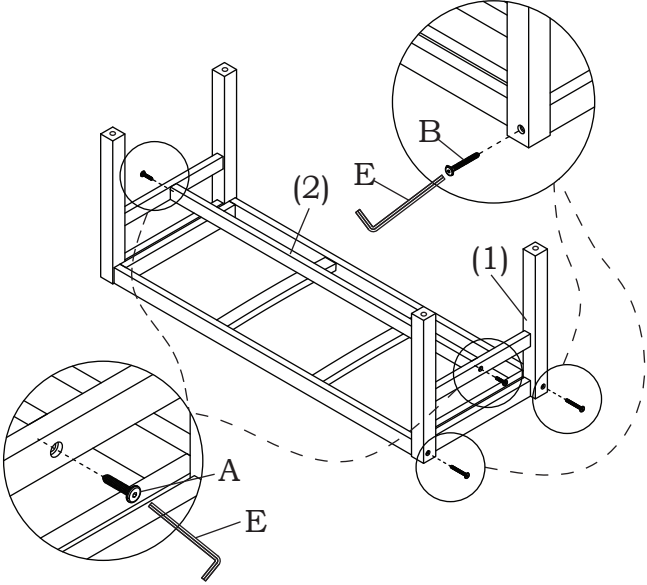

III " Fully tighten hardware, close the wooden D and plastic C plugs"

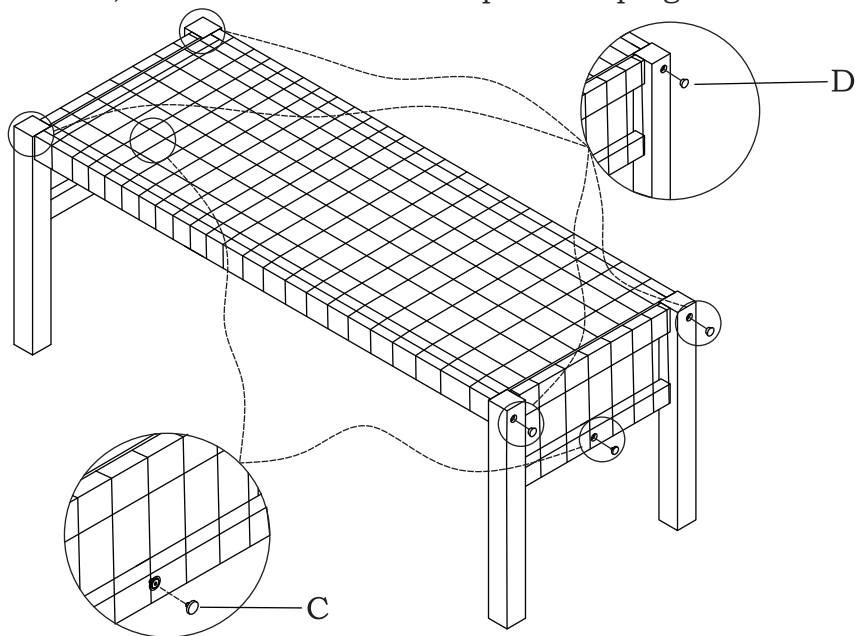

IV

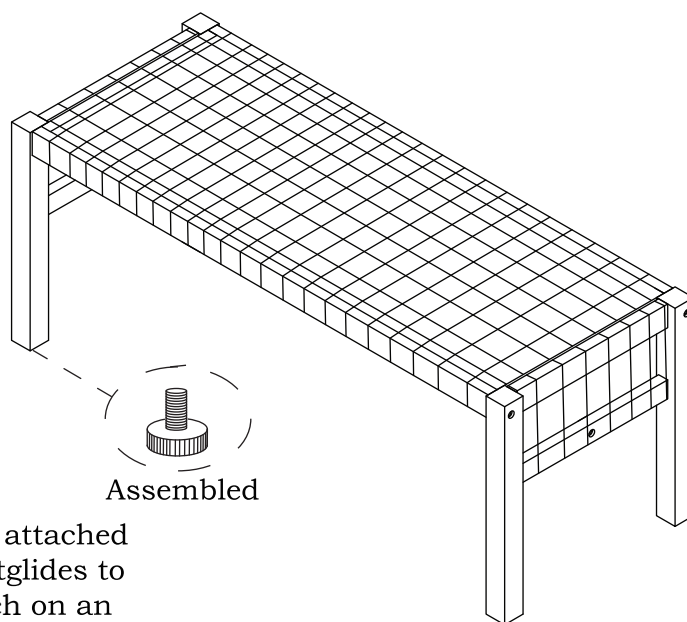

Please use the attached
adjustable footglides to
level the bench on an
uneven surface.

For missing parts or damaged parts, please call /
Pour pièce manquante ou endommagée, veuillez appeler:

USA, Canada and Mexico: (866)-798-6663

AI-V1-F008-260526